

INSTALLATION INSTRUCTIONS

ST. TROPEZ CABANA

(2 PERSON ASSEMBLY)



To protect your product, please read the operating instruction before assembly.
This document is for mounting to concrete and tiled floor surfaces only.

ST. TROPEZ CABANA

HARDWARE AND PARTS INCLUDED (IMAGES ARE NOT 1:1 SCALE)

	DESCRIPTION	QTY	PART IMAGE
A	LEFT - BACK COLUMN	1	
B	RIGHT - BACK COLUMN	1	
C	RIGHT - FRONT COLUMN	1	
D	LEFT - FRONT COLUMN	1	
E	BACK - UPPER CROSSBAR	1	
F	FRONT - UPPER CROSSBAR	1	
G	BACK - LOWER CROSSBAR	1	
H	FRONT EAVES CROSSBAR	1	
I	MIDDLE CROSSBAR	1	
J	LEFT - UPPER SIDE BAR	1	
K	RIGHT - UPPER SIDE BAR	1	
L	LOW SIDE BAR	2	
M	UPPER VERTICAL BAR	1	
N	EAVES SIDE BAR	2	
O	SUPPORT EAVES	2	
P	DECK MOUNT	5	
Q	FINIAL	3	
R	CEILING PLATE	1	
T	CANOPY	1	
U	CANOPY'S COLUMN	1	
V	LOWER VERTICAL BAR	1	
Ha	MACHINE DRILL HOLES 1/2" AND 17/64" DIAMETER (NOT INCLUDED)	0	
Hb	DRILL BIT 1/2" (INCLUDED)	1	


ST. TROPEZ CABANA

	DESCRIPTION	QTY	PART IMAGE
Hc	ANCHOR 1/2"-13 (INCLUDED)	12	
Hd	BOLT 1/2"-13 (INCLUDED)	12	
He	ANCHOR PUNCH 1/2" (INCLUDED)	1	
Hf	BOLT 1/4" x 1.25" (INCLUDED)	6	
Hg	WIRE TIES (INCLUDED)		
Hh	ALLEN WENCH 3/8" (INCLUDED)	1	
Hi	ALLEN WENCH 1/4" (INCLUDED)	1	
Hj	9/16" WENCH CROSSBAR (INCLUDED)	1	
Hk	ALLEN WENCH 5/16" (INCLUDED)	1	
Hl	PHILIPS DRIVER (NOT INCLUDED)	0	
Hm	HAMMER (NOT INCLUDED)	0	

ST. TROPEZ CABANA

DETAILS OF FABRIC (IMAGES ARE NOT 1:1 SCALE)


	DESCRIPTION	QTY
F1	CANOPY FRAME	1
F2	EAVES FABRIC	1
F3	CURTAIN	2
F4	FABRIC WALL	1
F5	CEILING	1

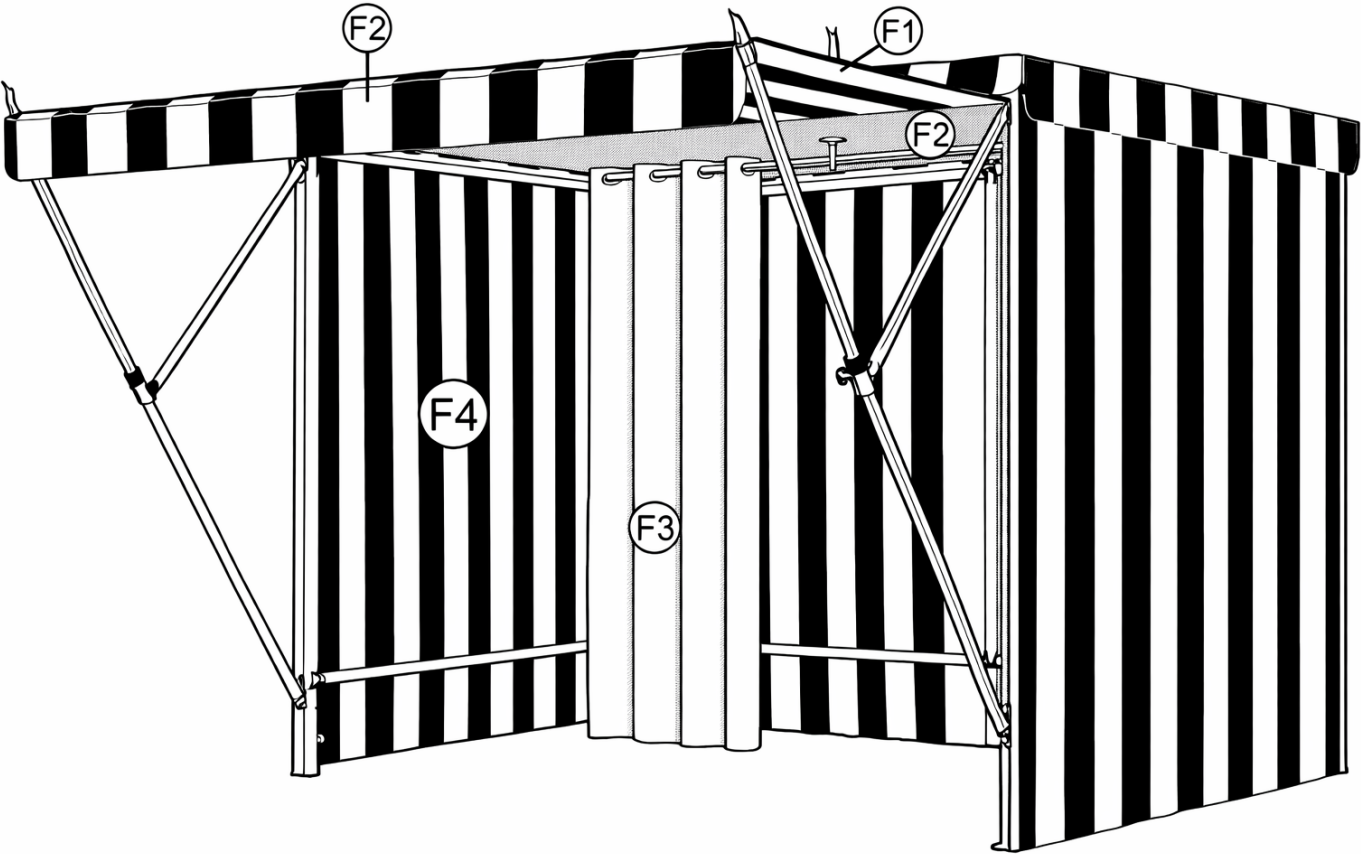

ST. TROPEZ CABANA

STEP 1






Using the dimensions provided below position the 5 deck mounts accordingly.

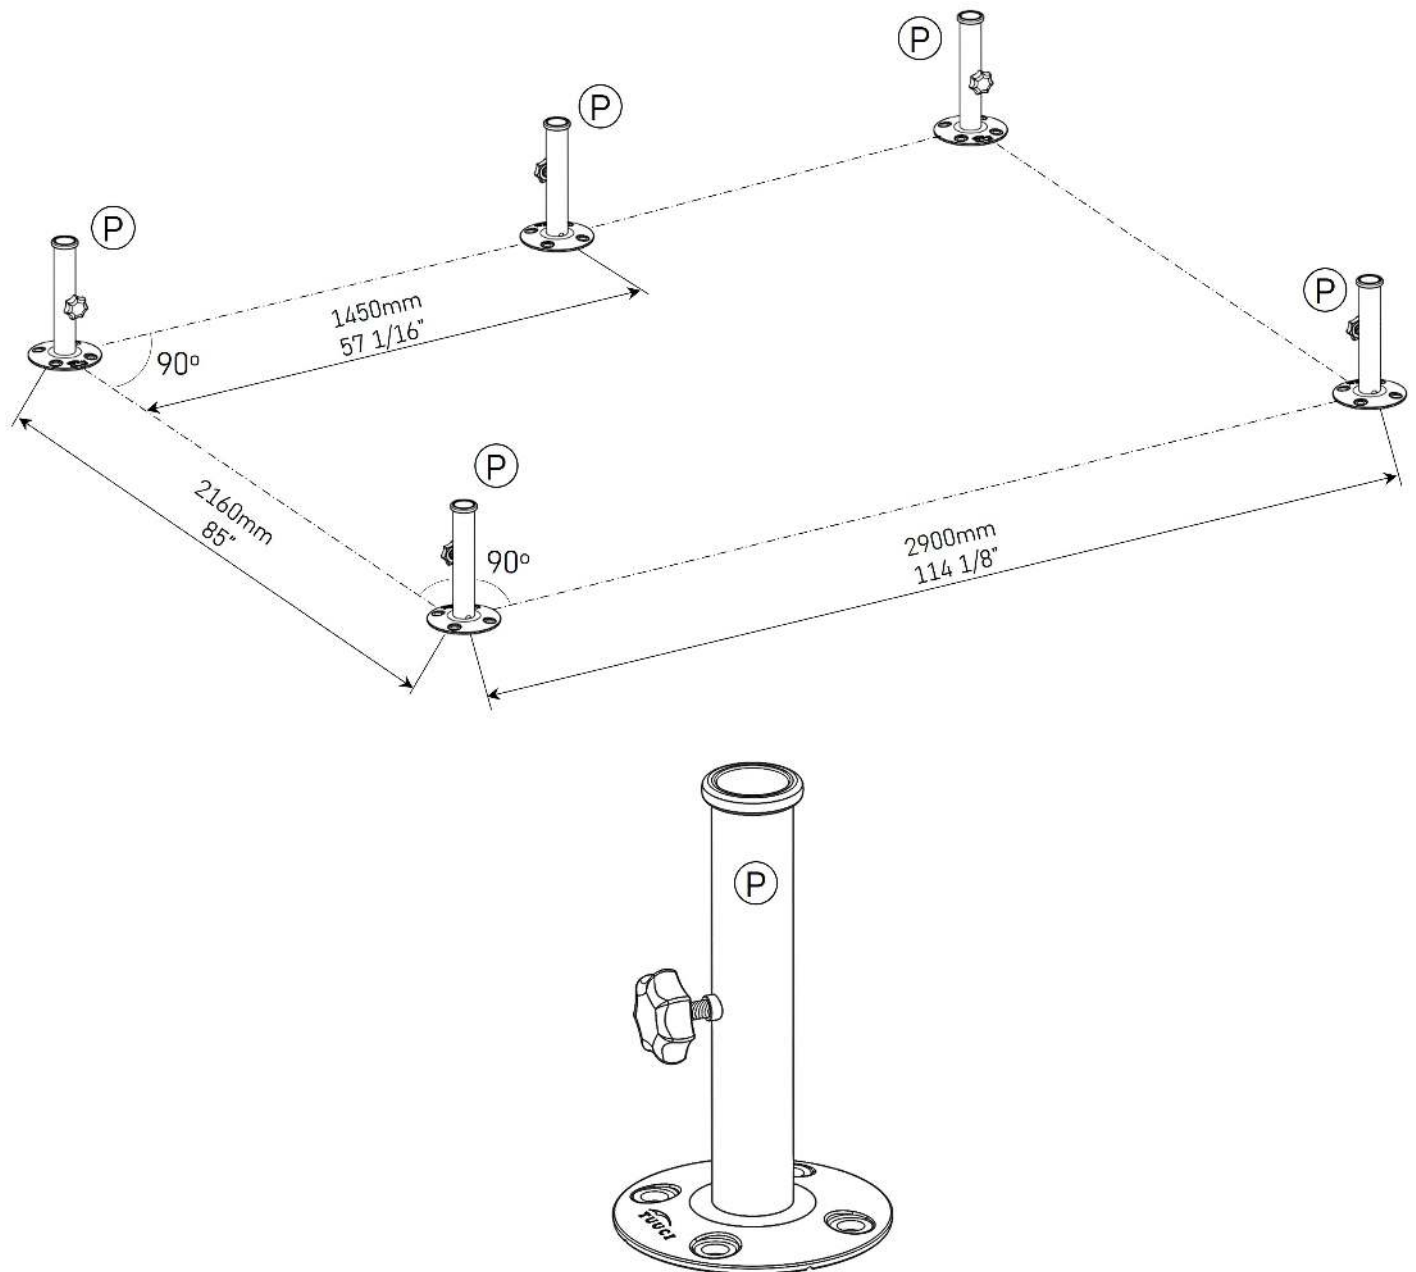

ST. TROPEZ CABANA

STEP 2

1. With a pencil, mark all 4 holes in deck mount.
2. Using 1/2" drill bit, drill 4 holes 1 1/2" deep.
3. Insert "drop in" anchor.
4. Hammer open flange on "drop in" anchors.
5. Secure deck mount with screws and tighten securely.

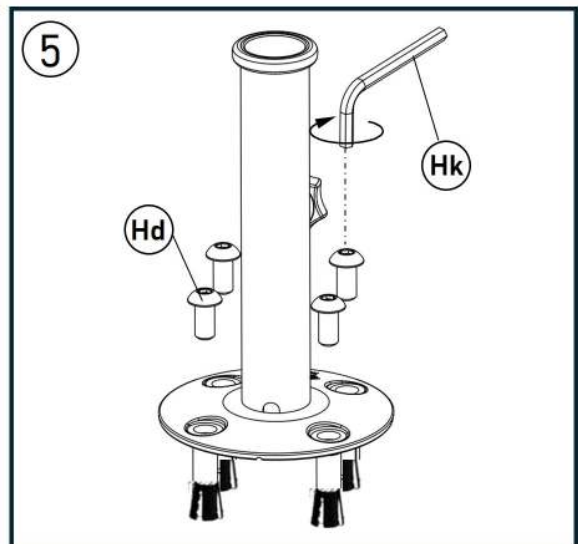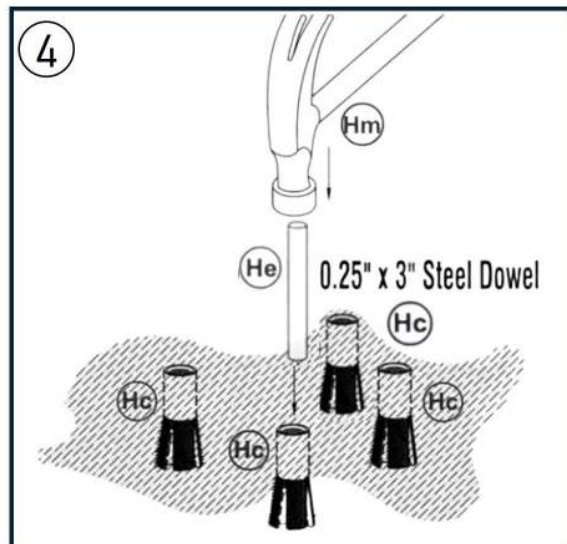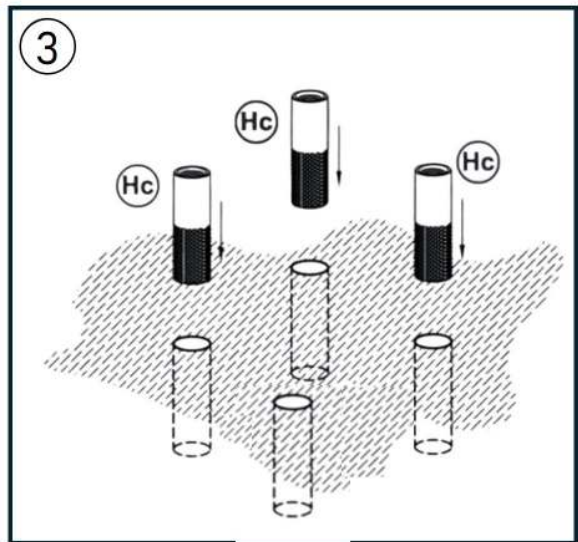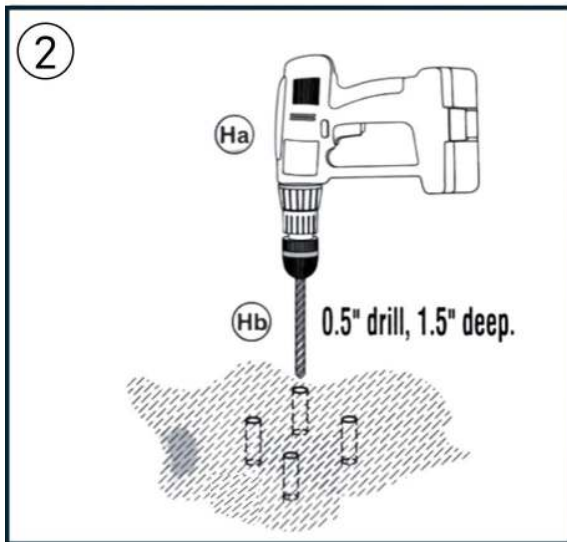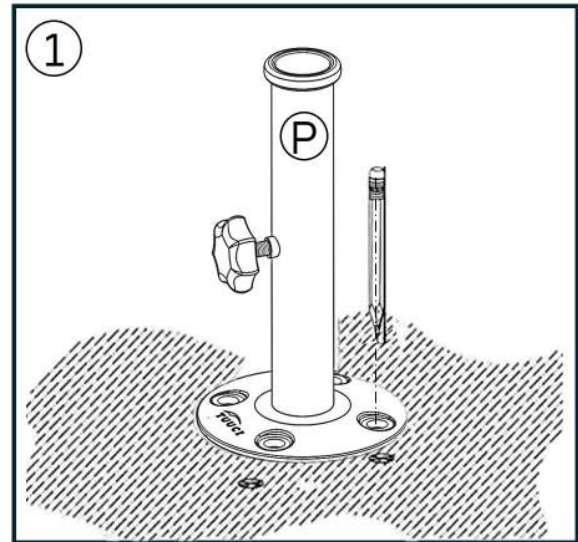


ST. TROPEZ CABANA

STEP 3

Install 2 lower side bars L to corner bars "A" & "D," "B" & "C."

Install lower back crossbar "G."

Install frame to deck mount "P."

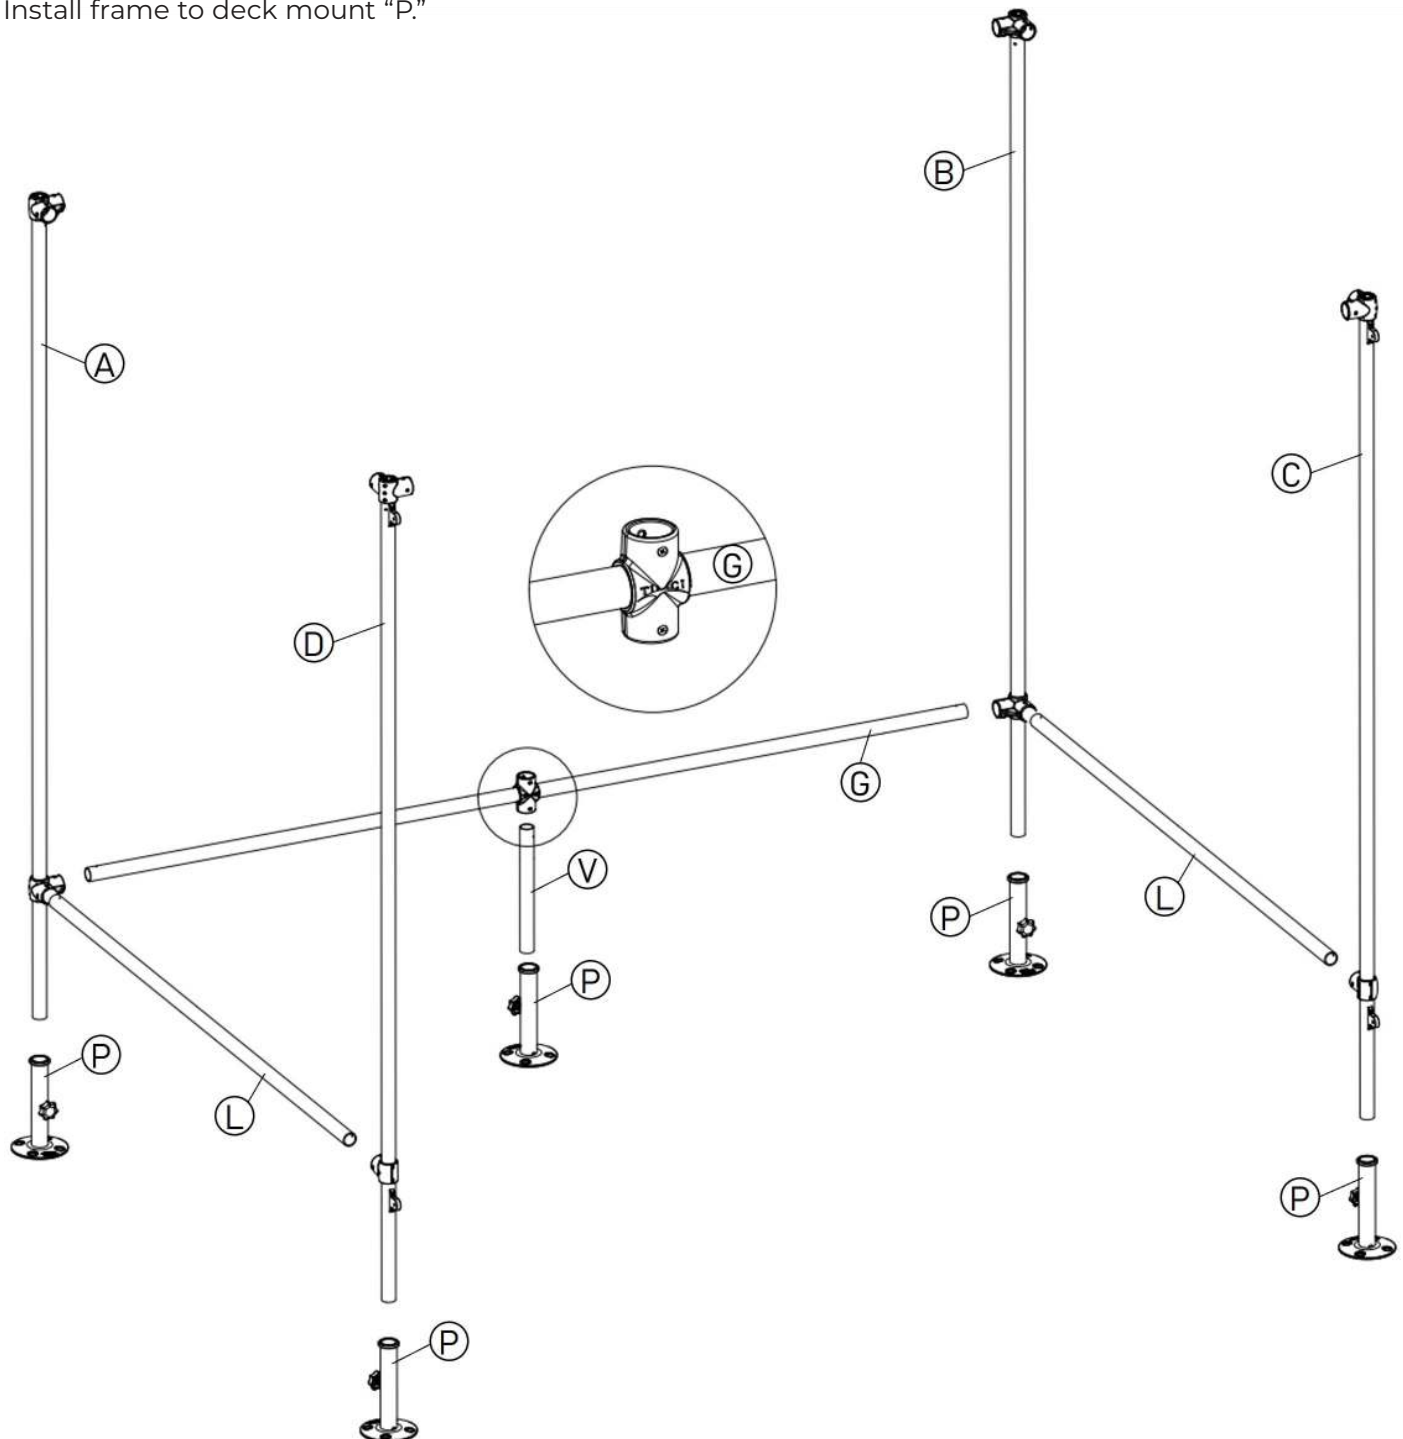

ST. TROPEZ CABANA


STEP 4

Install 2 upper side bars "J", "K" to corner bars "A" & "D," "B" & "C."

Install upper vertical bar m to lower crossbar "G."

Install back - upper crossbar "E" to corner bar "A" & "B" and upper vertical bar "M."

Install front - upper crossbar "F" to corner bar "C" & "D."

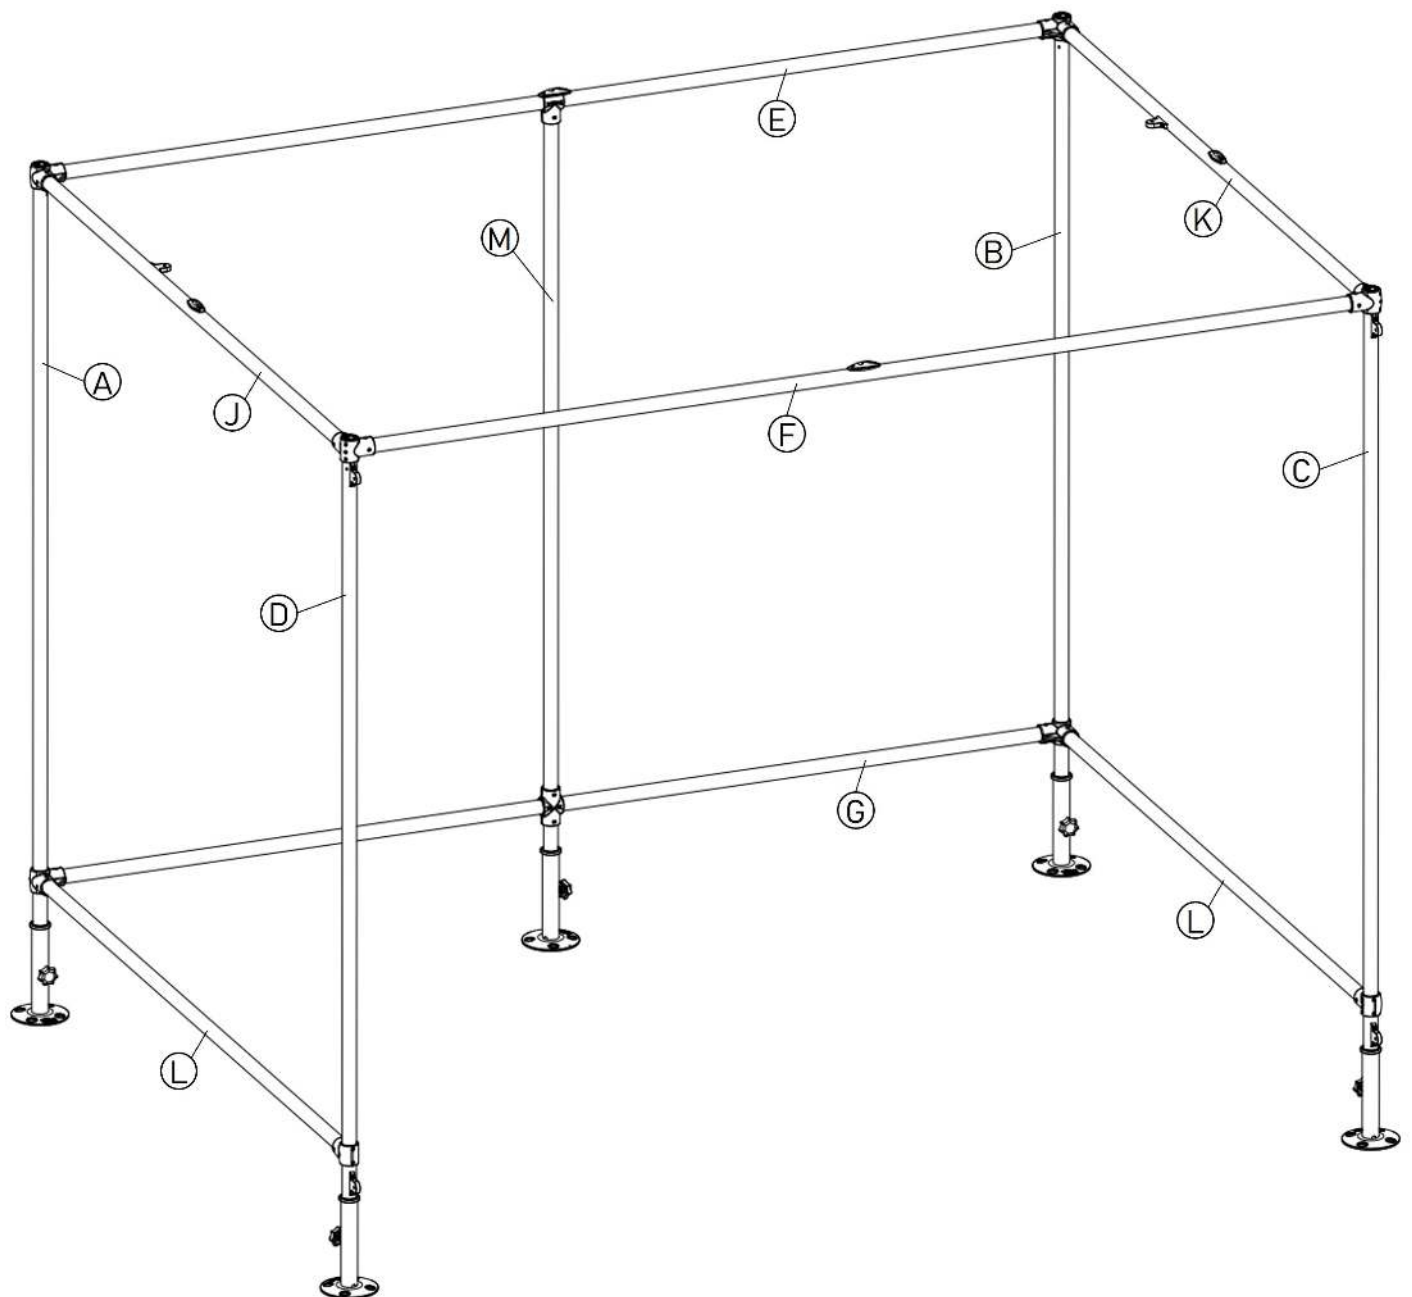


ST. TROPEZ CABANA

STEP 5

Tighten all frame brackets using the 3/16" allen wrench "Hh."

Tighten star-knob on deck mount "P" to poles "A," "B," "C," & "D"

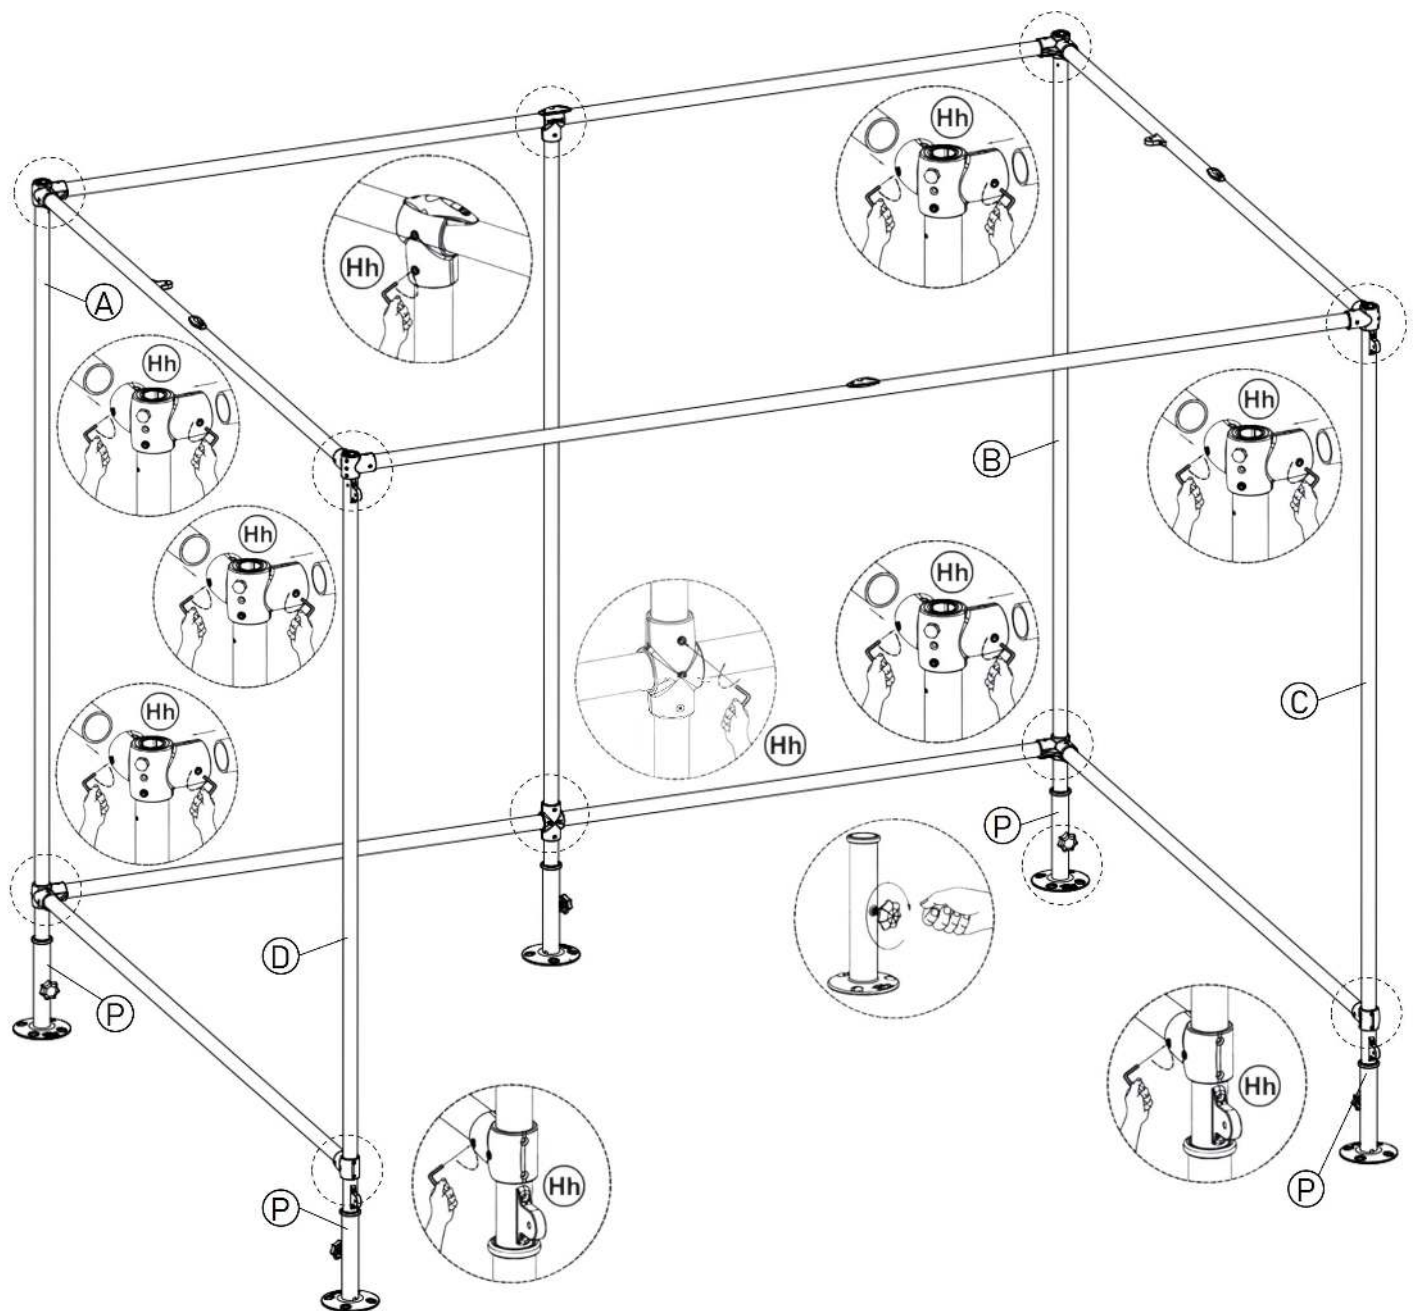


ST. TROPEZ CABANA

STEP 6

Connect the 2 support eaves "O" to pole "C" and "D" by bolt "Hf." Tighten using the philips driver "Hl."

Connect the 2 eaves side bars "N" to pole "C" and "D" by bolt "Hf." Tighten using the philips driver "Hl."


Connect the support eaves "O" to the eaves side bars "N" by bolt "Hf." Tighten using the philips driver Hl.

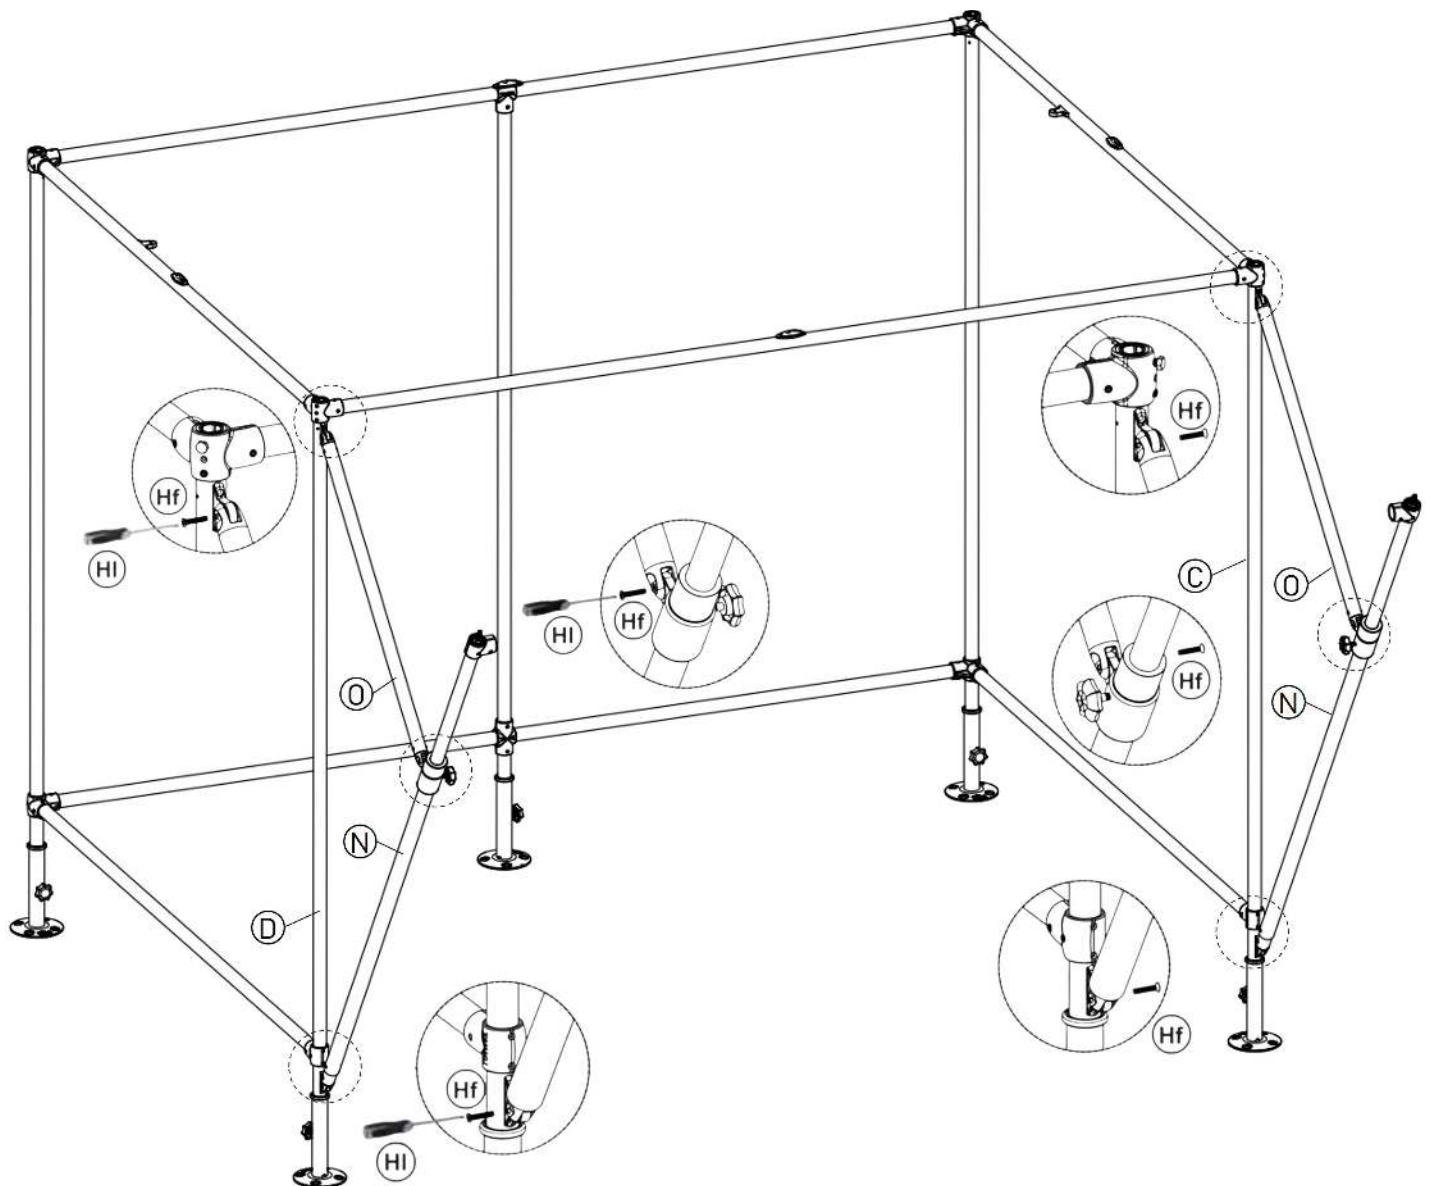

ST. TROPEZ CABANA

STEP 7




Install the front eaves crossbar "H" to the eaves side bar "N." Tighten using the 3/16" allen wrench "Hh."

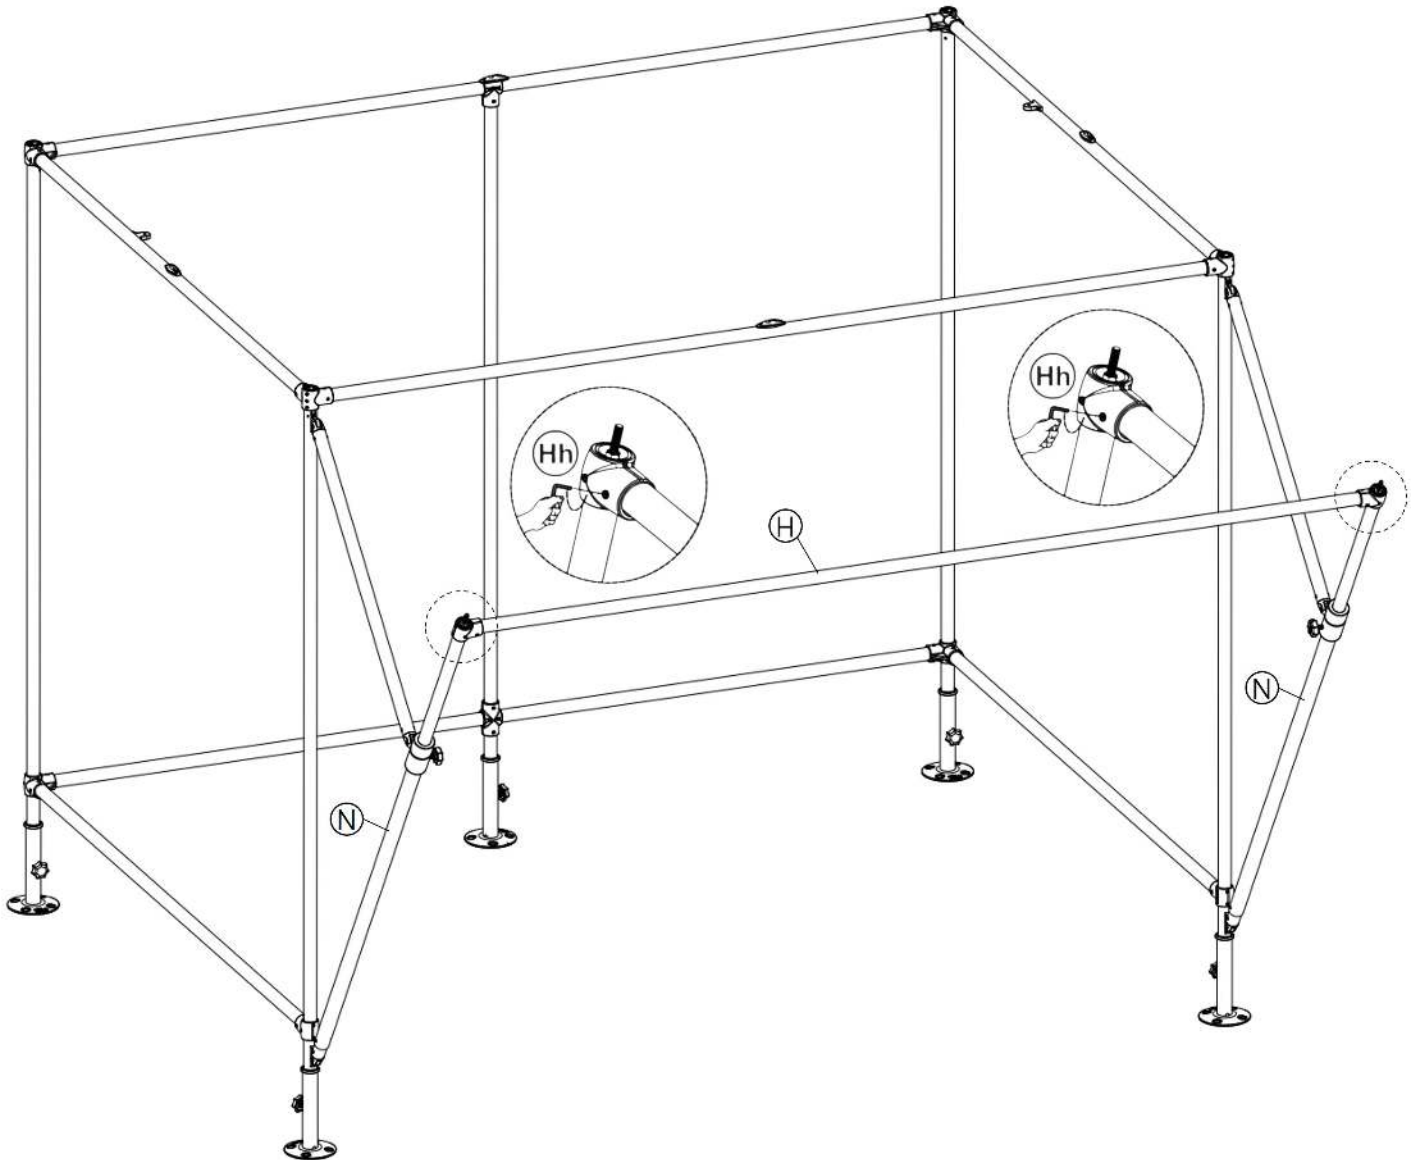

ST. TROPEZ CABANA

STEP 8

Secure canopy in the open position by raising canopy hub above security pin hole then inserting security pin into hole until fully engaged.

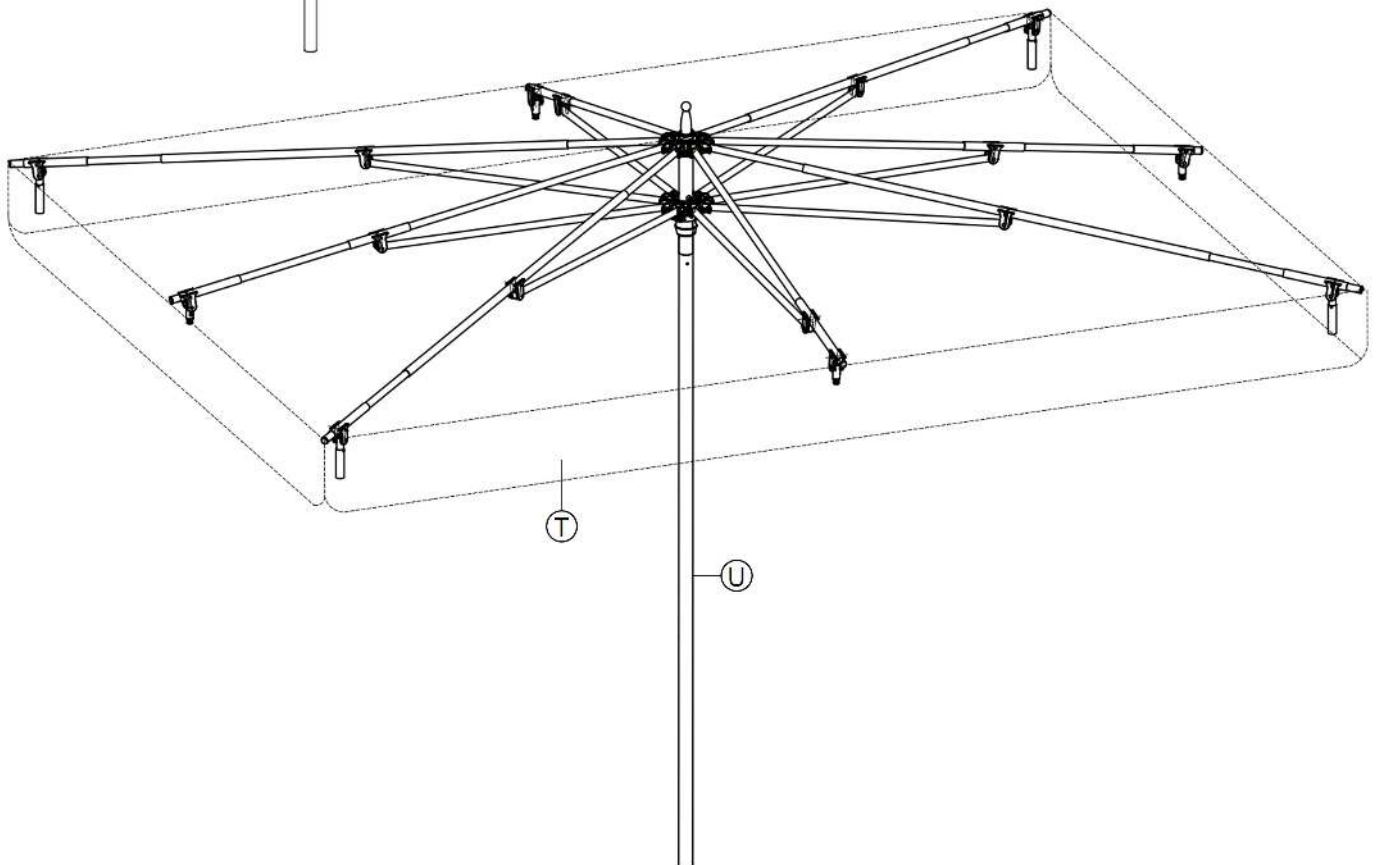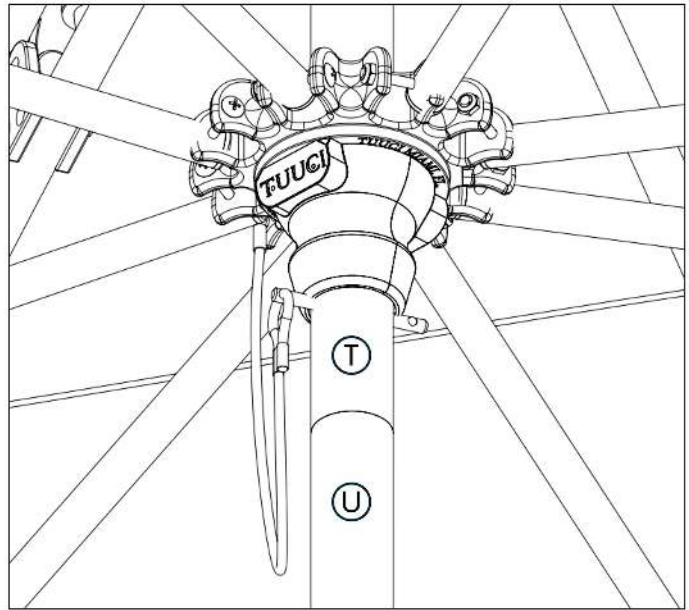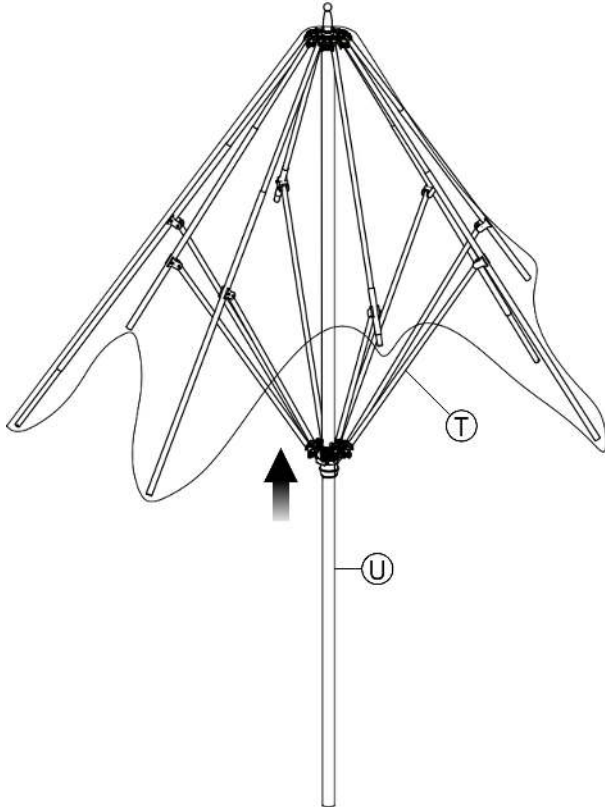


ST. TROPEZ CABANA

STEP 9

Install canopy "T-U" to frame.

Tighten canopy to the frame by using the 9/16" wrench "Hj."

Remove canopy column u by turning it counter-clockwise.

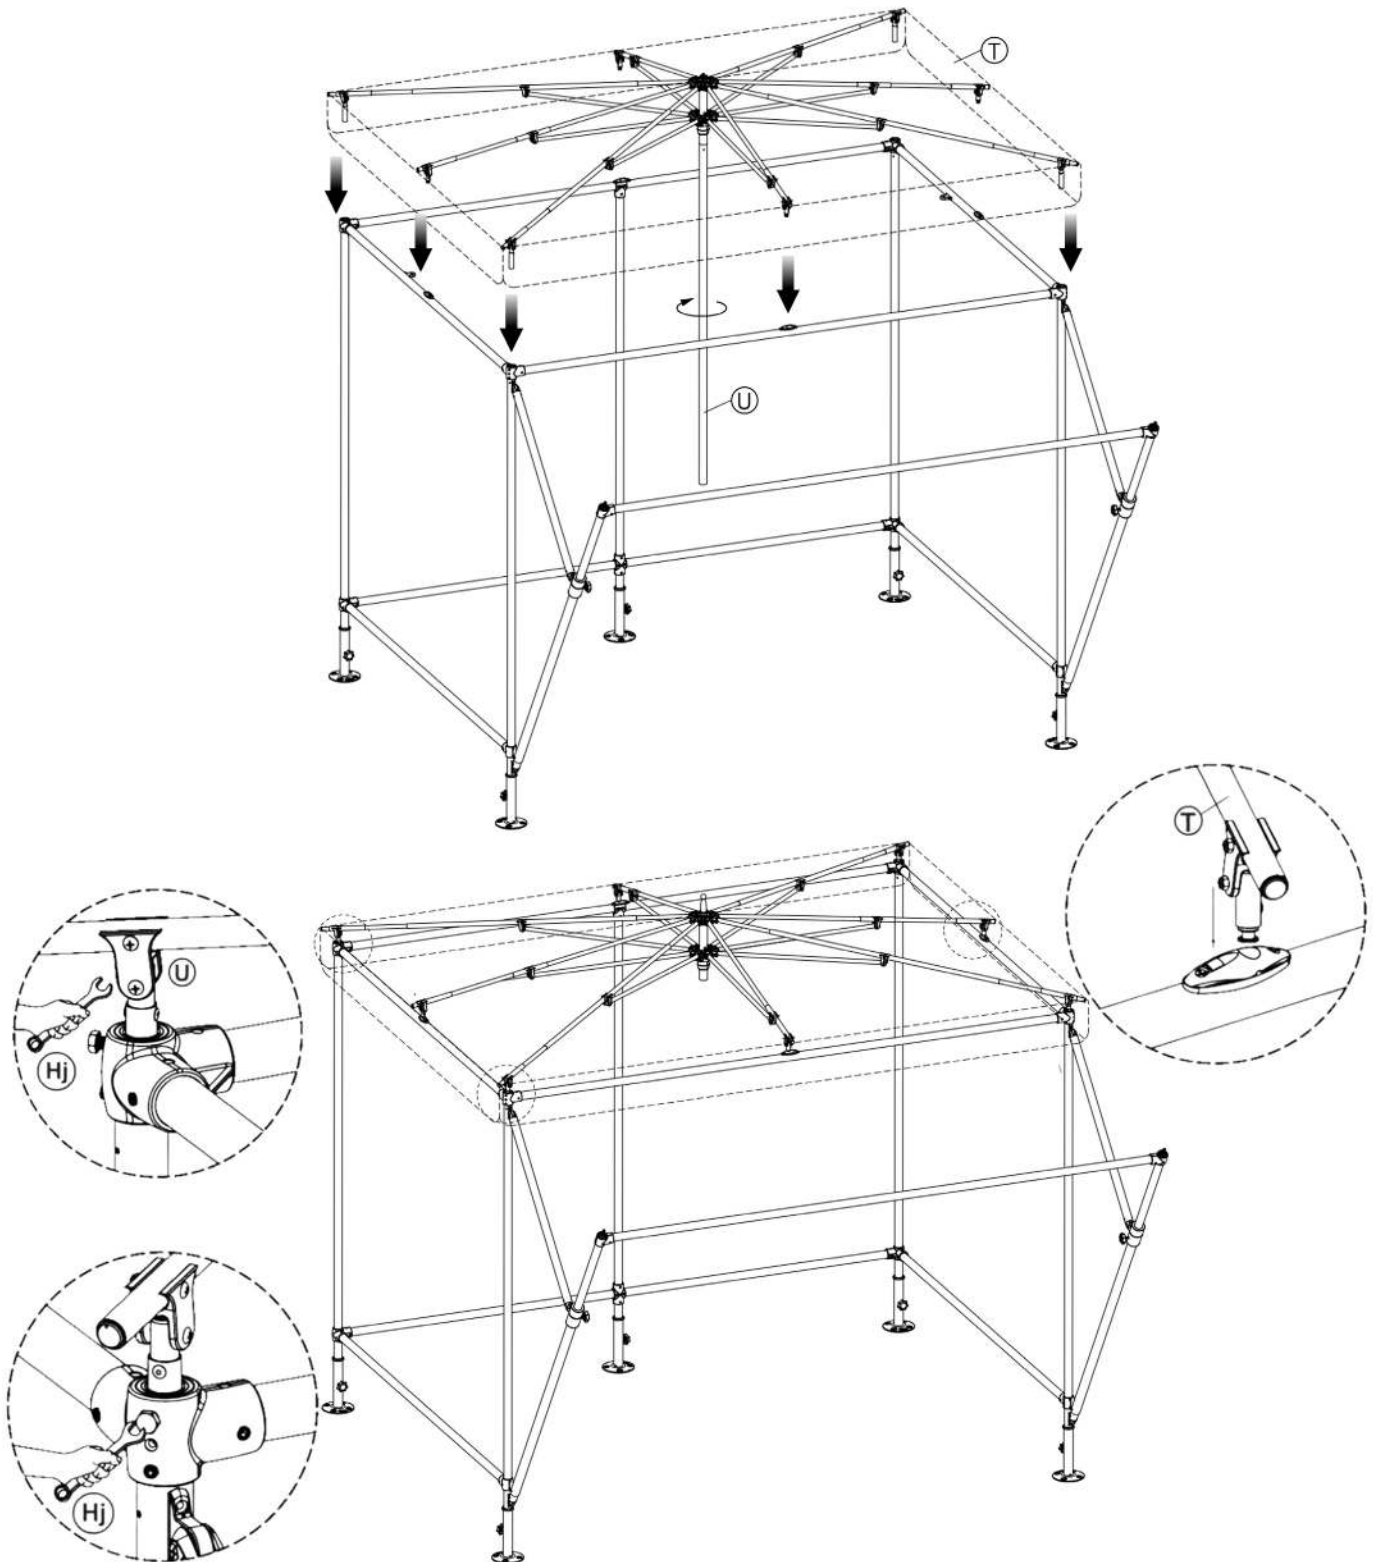


ST. TROPEZ CABANA

STEP 10

Install the ceiling fabric "F5."

Attach the ceiling plate "R" under the ceiling fabric and install the finial "Q" by turning it clock-wise.

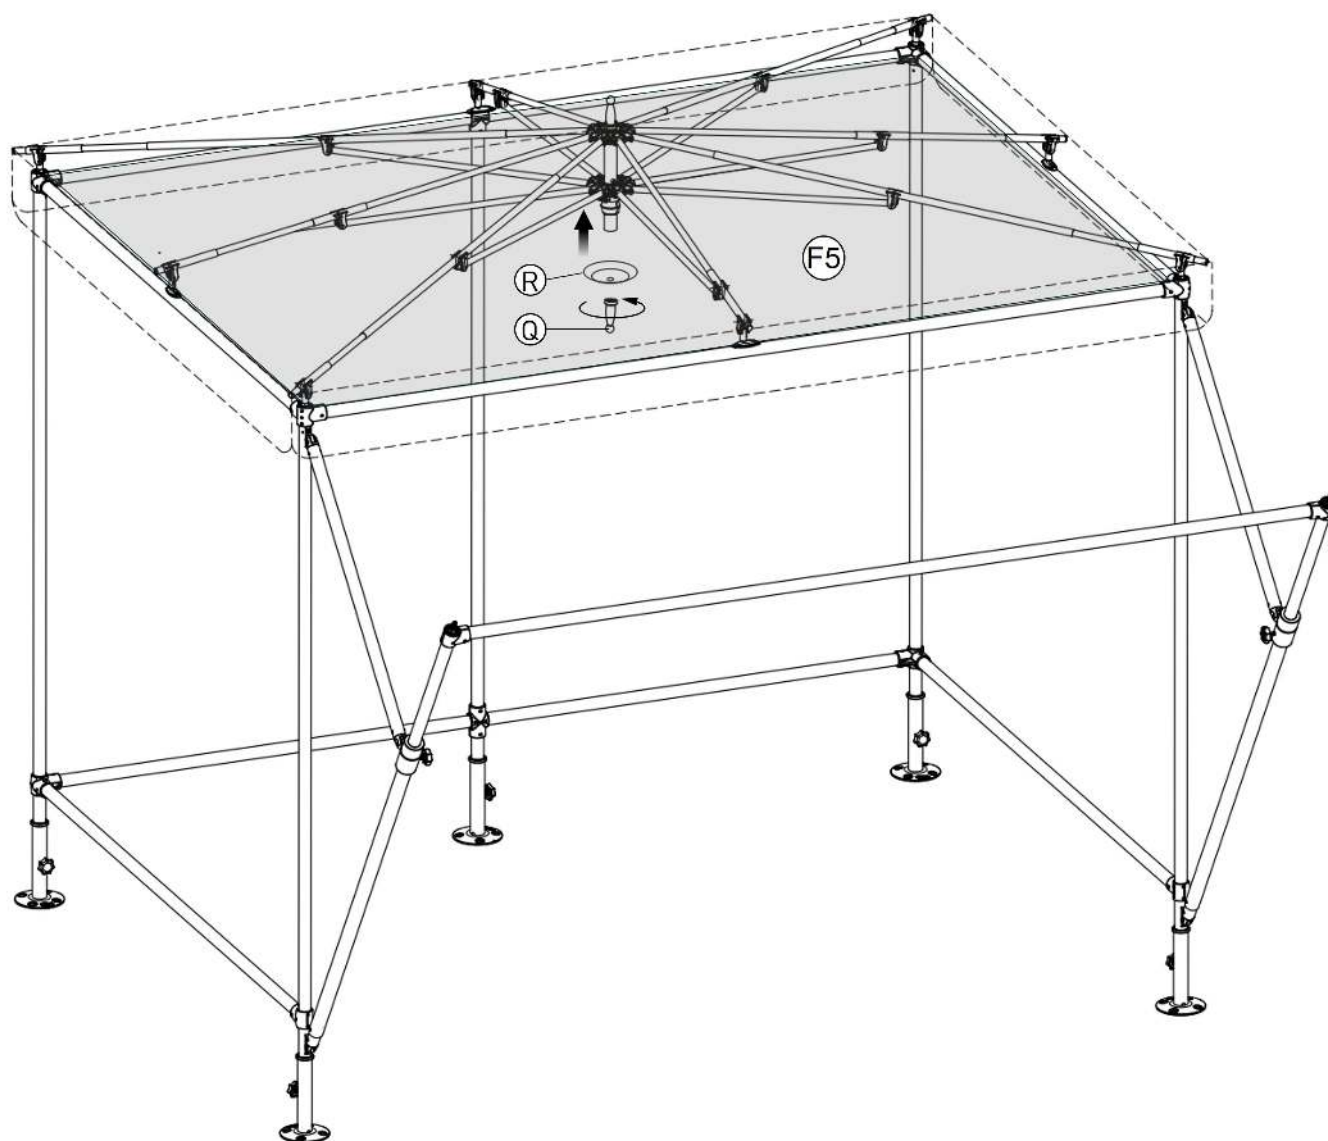


ST. TROPEZ CABANA

STEP 11

Install curtain "F3" with the included rope onto crossbar "I".


Connect crossbar "I" to side bar "J" & "K" by bolt "Hf". Tighten using the philips driver "HI."

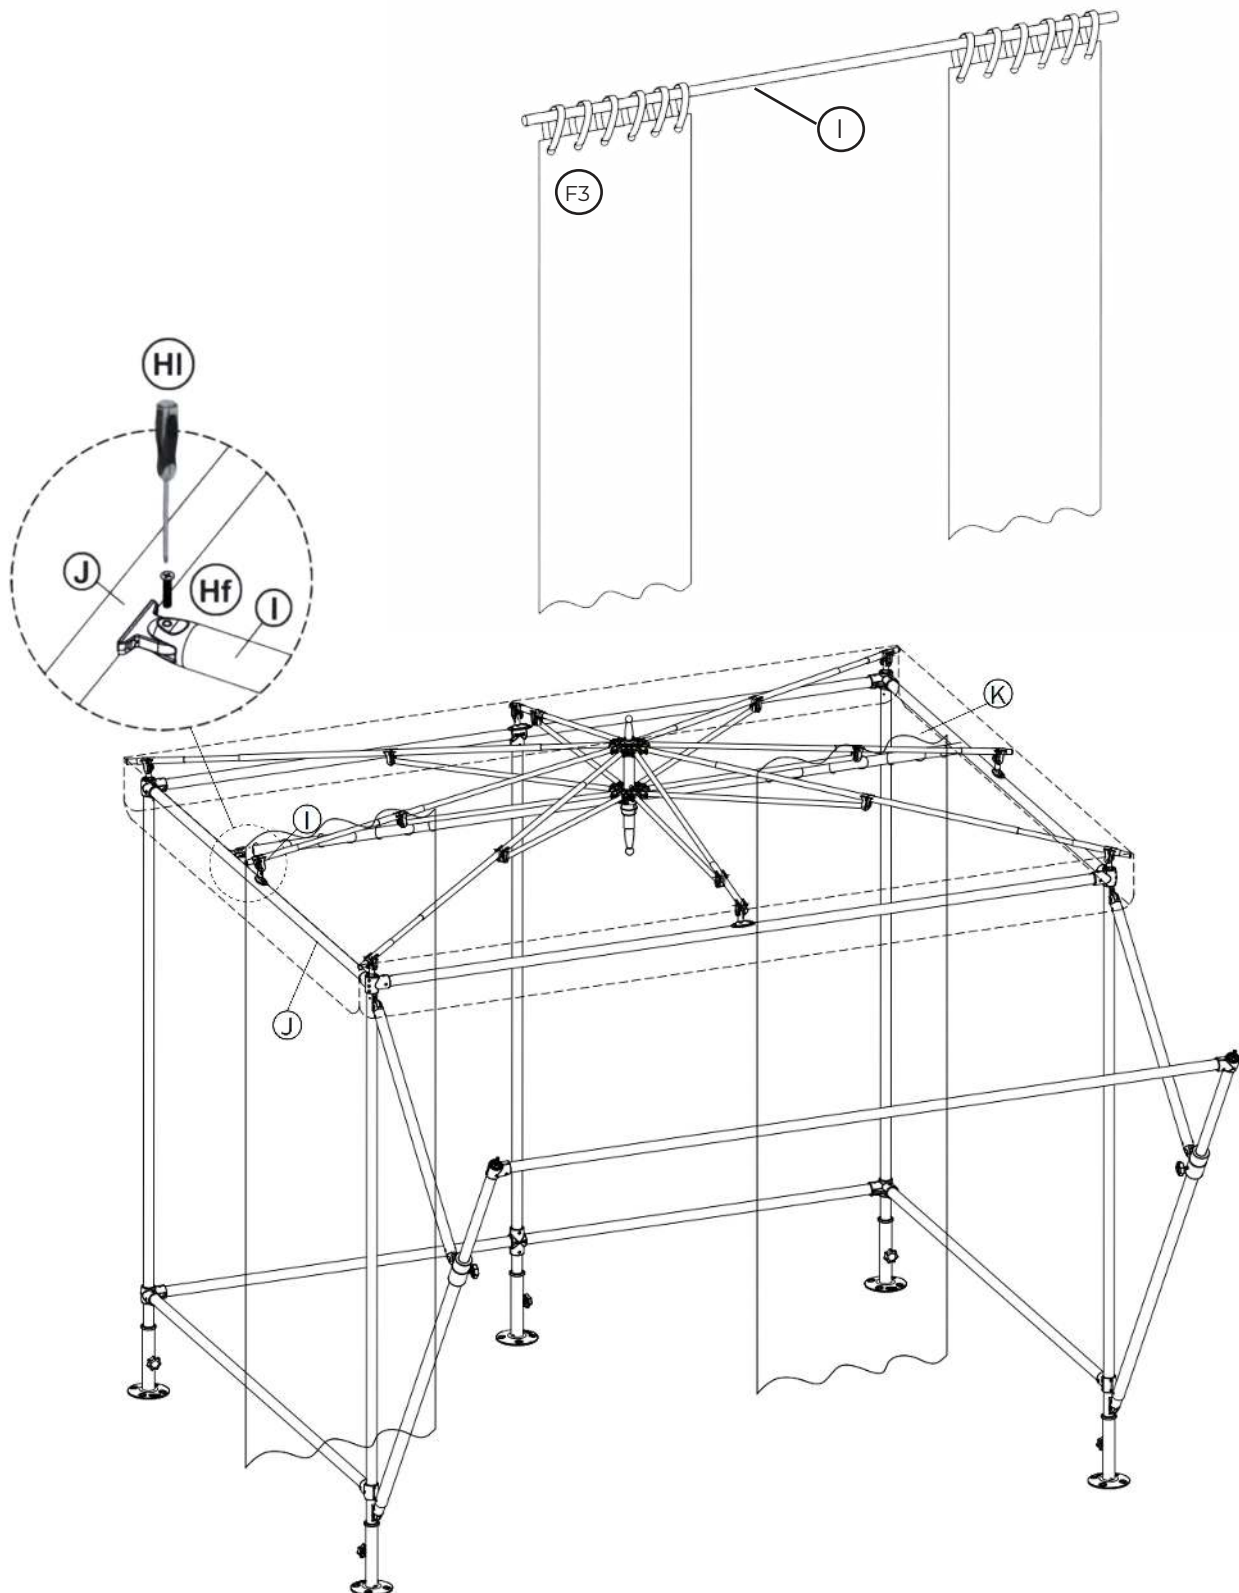

ST. TROPEZ CABANA

STEP 12

Install eaves fabric "F2" to front - upper crossbar "F" and top eaves side bar "N" by zipper. Tighten using finial "Q."

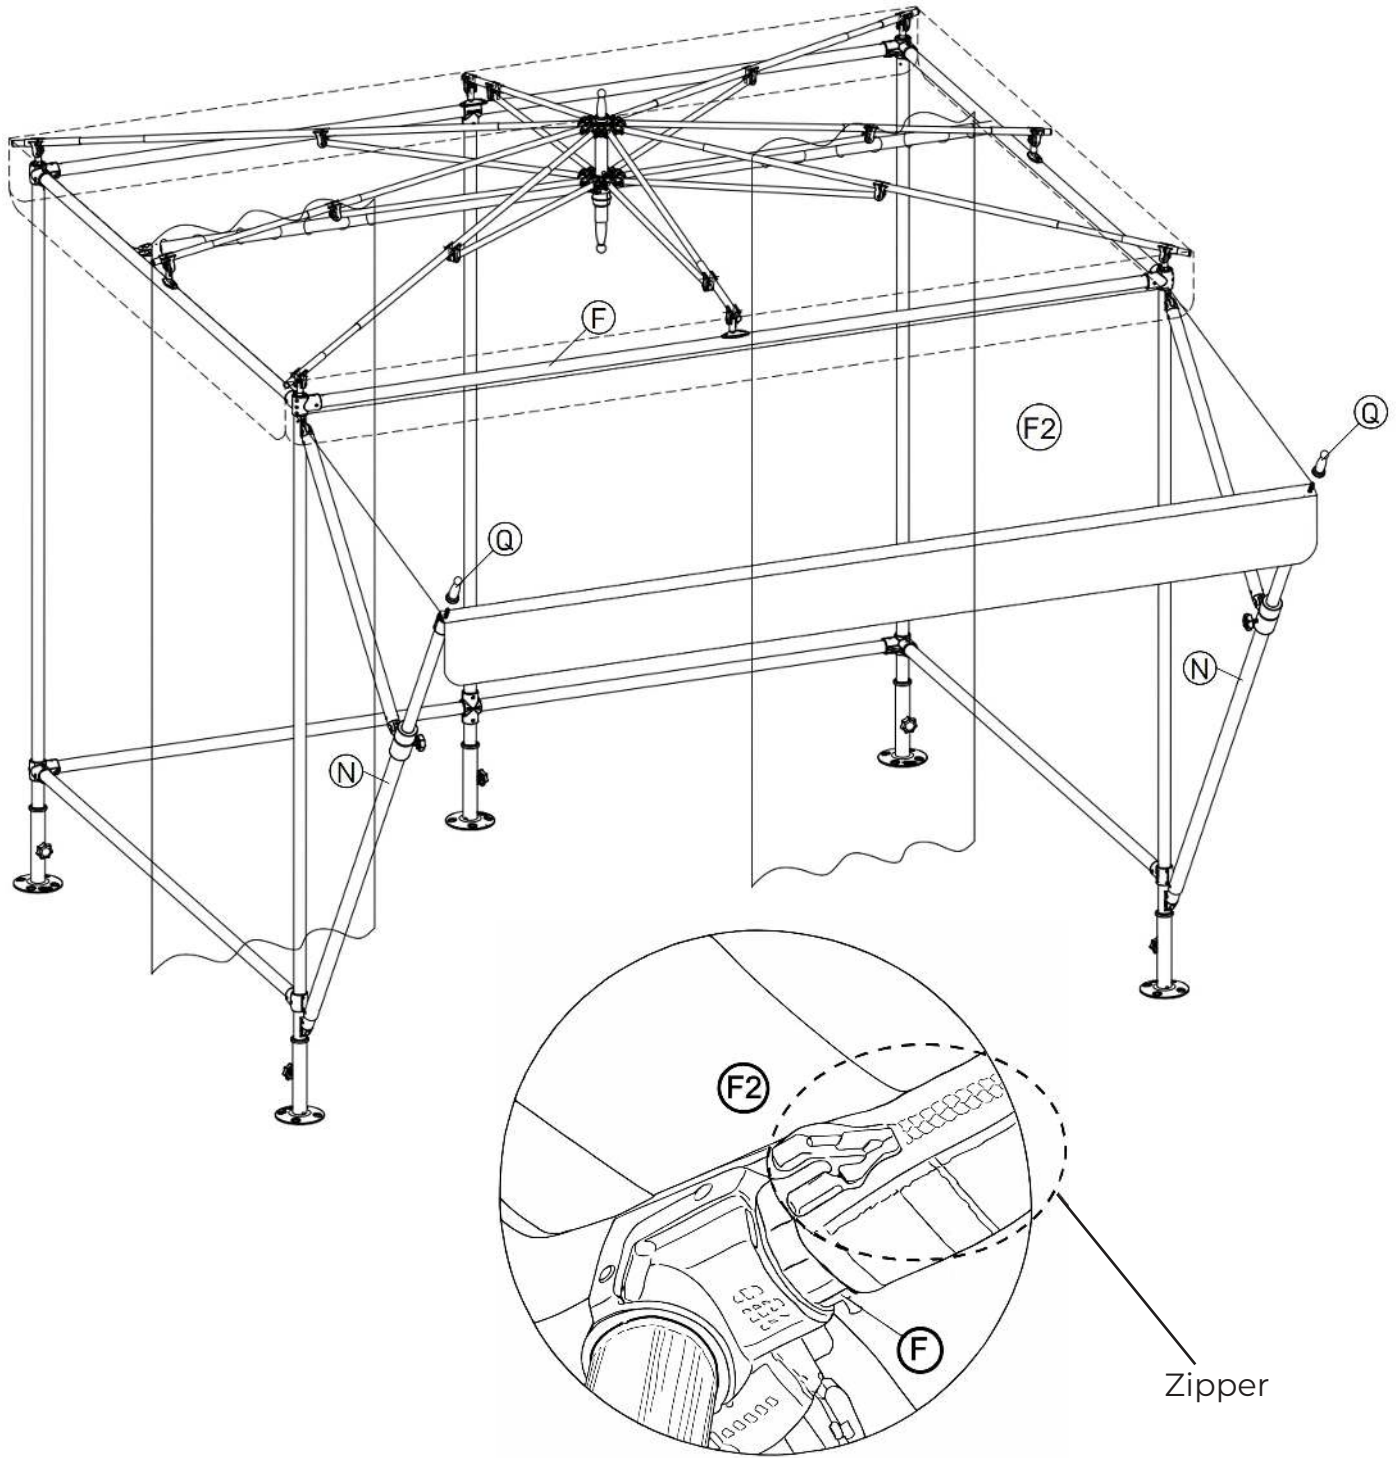

ST. TROPEZ CABANA

STEP 13

Install fabric wall "F4" to frame. Hang fabric wall on upper frame and lower frame using velcro tabs.

