

INSTALLATION INSTRUCTIONS

CRESCENT LOUNGE






(2 PERSON ASSEMBLY)



To protect your product, please read the operating instruction before assembly.


CRESCENT LOUNGE

HARDWARE AND PARTS INCLUDED (IMAGES ARE NOT 1:1 SCALE)

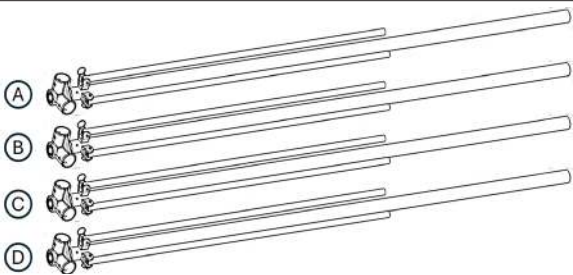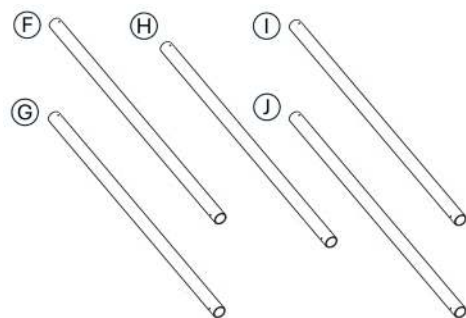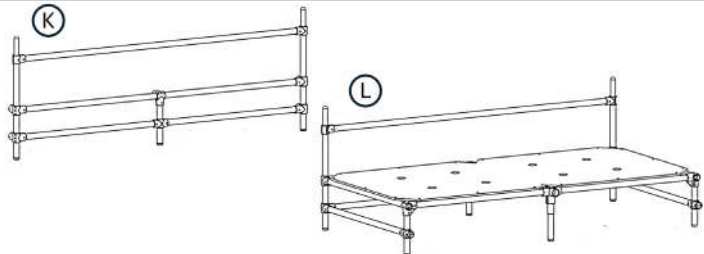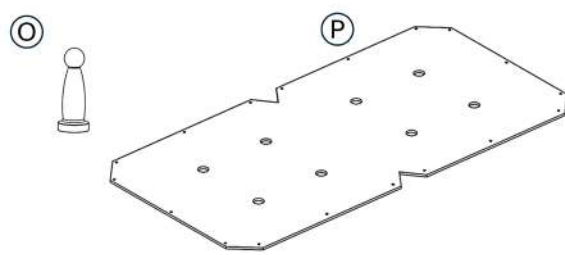	DESCRIPTION	QTY	PART IMAGE
A	LEFT - BACK COLUMN	1	
B	RIGHT - BACK COLUMN	1	
C	RIGHT - FRONT COLUMN	1	
D	LEFT - FRONT COLUMN	1	
E	TOP CROSSBAR	4	
F	LEFT - UPPER CROSSBAR	1	
G	LEFT - LOWER CROSSBAR	1	
H	MIDDLE CROSSBAR	1	
I	RIGHT - UPPER CROSSBAR	1	
J	RIGHT - LOWER CROSSBAR	1	
K	FRAME	1	
L	FRAME	1	
M	CANOPY FRAME	1	
N	COLUMN FOR CANOPY	1	
O	VENICE FINIAL	1	
P	PVC PIECE	1	

CRESCENT LOUNGE


	DESCRIPTION	QTY	PART IMAGE
Ha	SCREW #10 x 1", TEK FLAT (INCLUDED)	10	
Hb	SCREW #10 x 1 1/2", TEK FLAT (INCLUDED)	4	
Hc	ALLEN WRENCH 3/16" (INCLUDED)	1	
Hd	PHILIPS DRIVE (NOT INCLUDED)	1	
He	9/16" WRENCH (INCLUDED)	4	

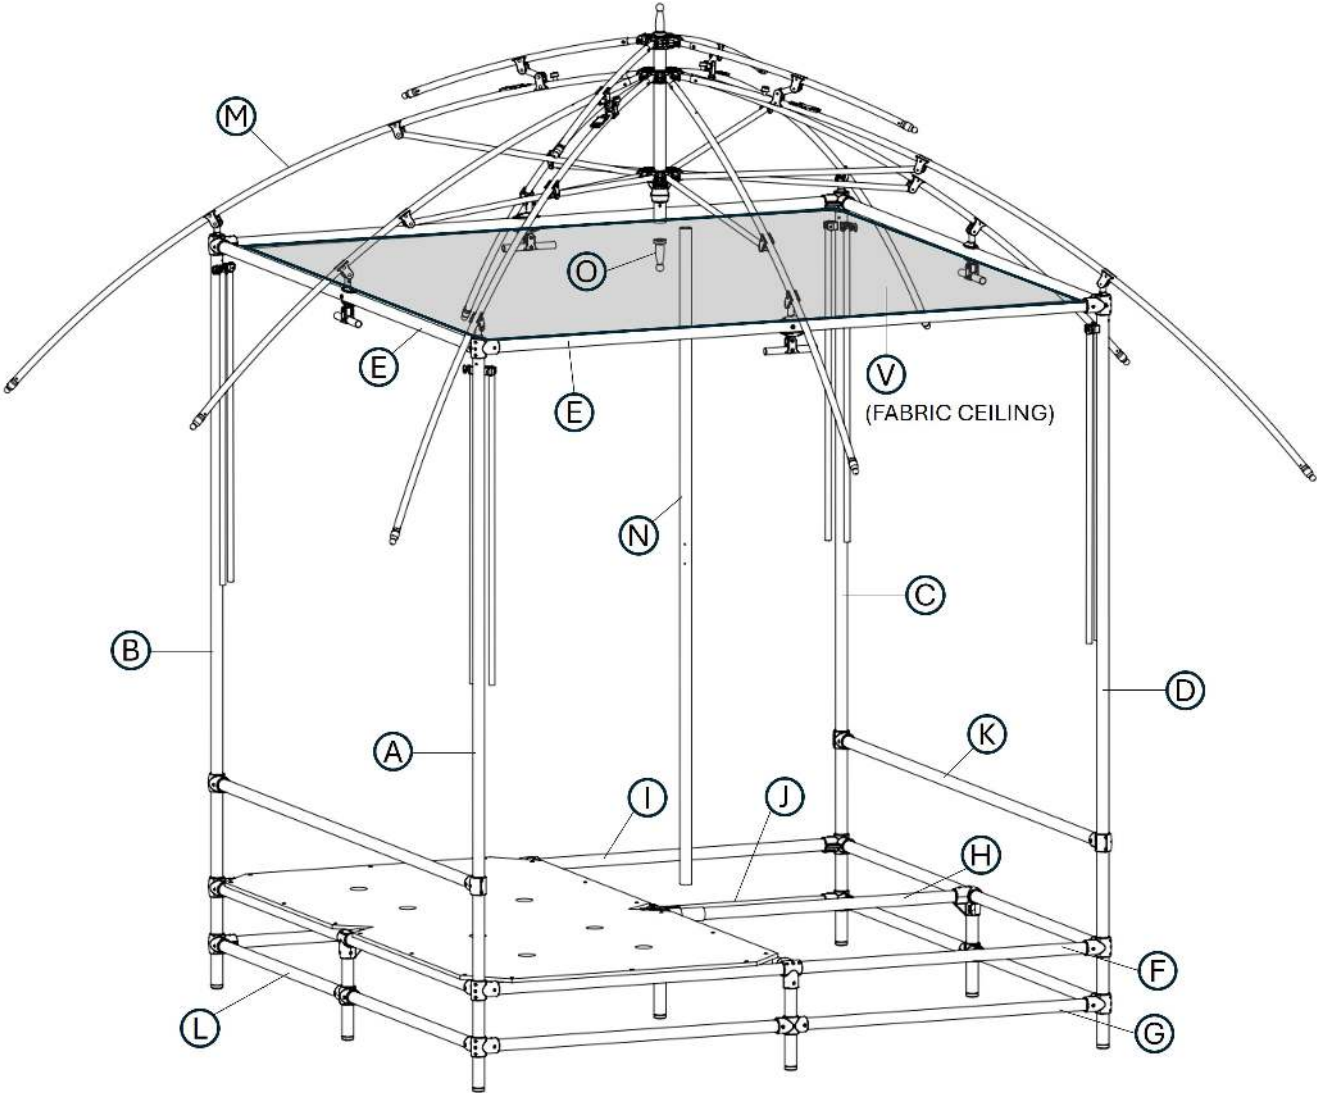

CRESCENT LOUNGE

DETAILS OF FABRIC (IMAGES ARE NOT 1:1 SCALE)

	DESCRIPTION	QTY
M	CANOPY FRAME	1
Q	CURTAIN	4
R	UPPER VALANCE	1
S	LOWER VALANCE	1
T	CUSHION	1
V	CEILING	1

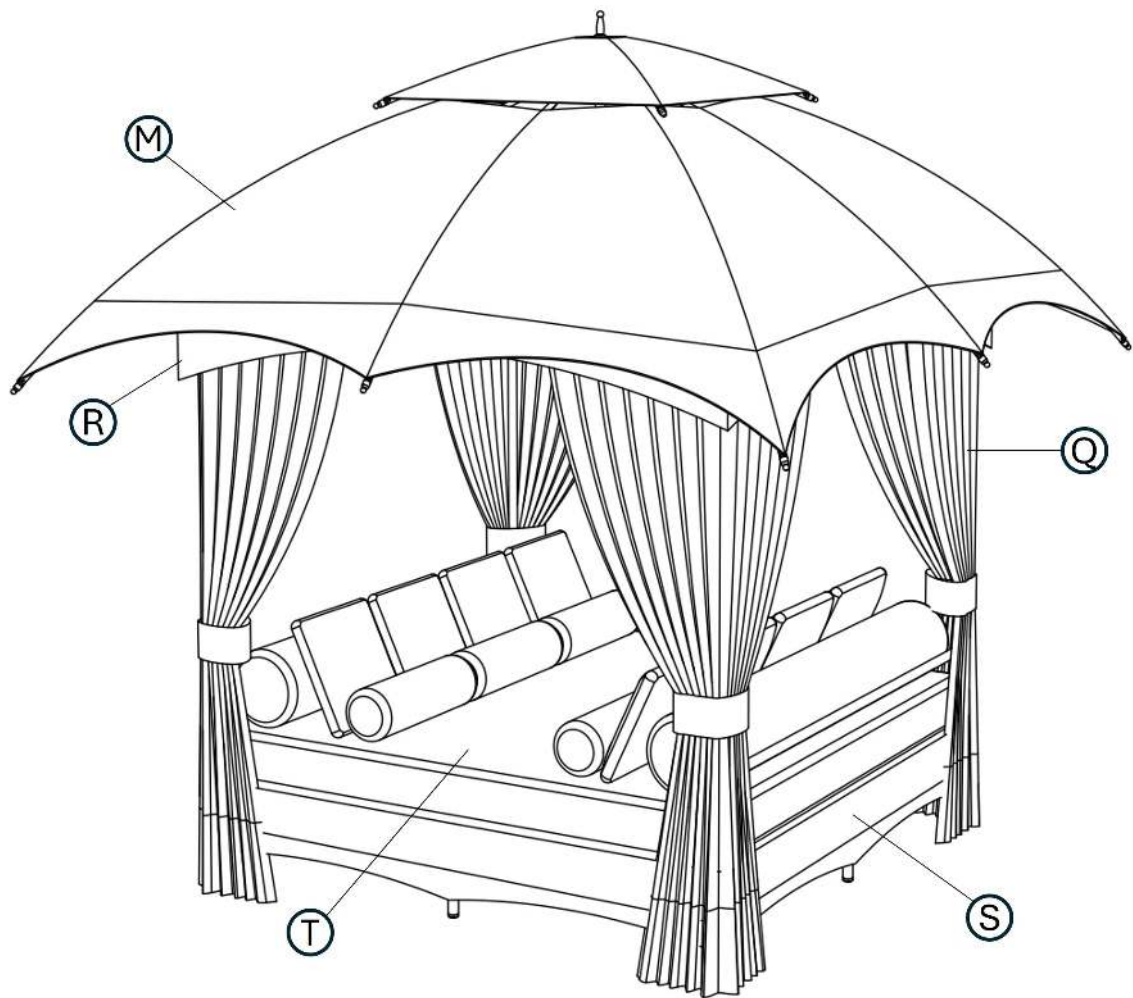


CRESCENT LOUNGE

STEP 1

Insert details "F," "G," "H," "I," and "J" to frame "K." Using allen wrench 3/16" "Hc" and philips driver "Hd" tighten lock nut and screw "Ha."


Insert frame "K," "F," "G," "H," "I," and "J" to frame "L." Using allen wrench 3/16" "Hc" and philips driver "Hd" tighten lock nut and screw "Ha."

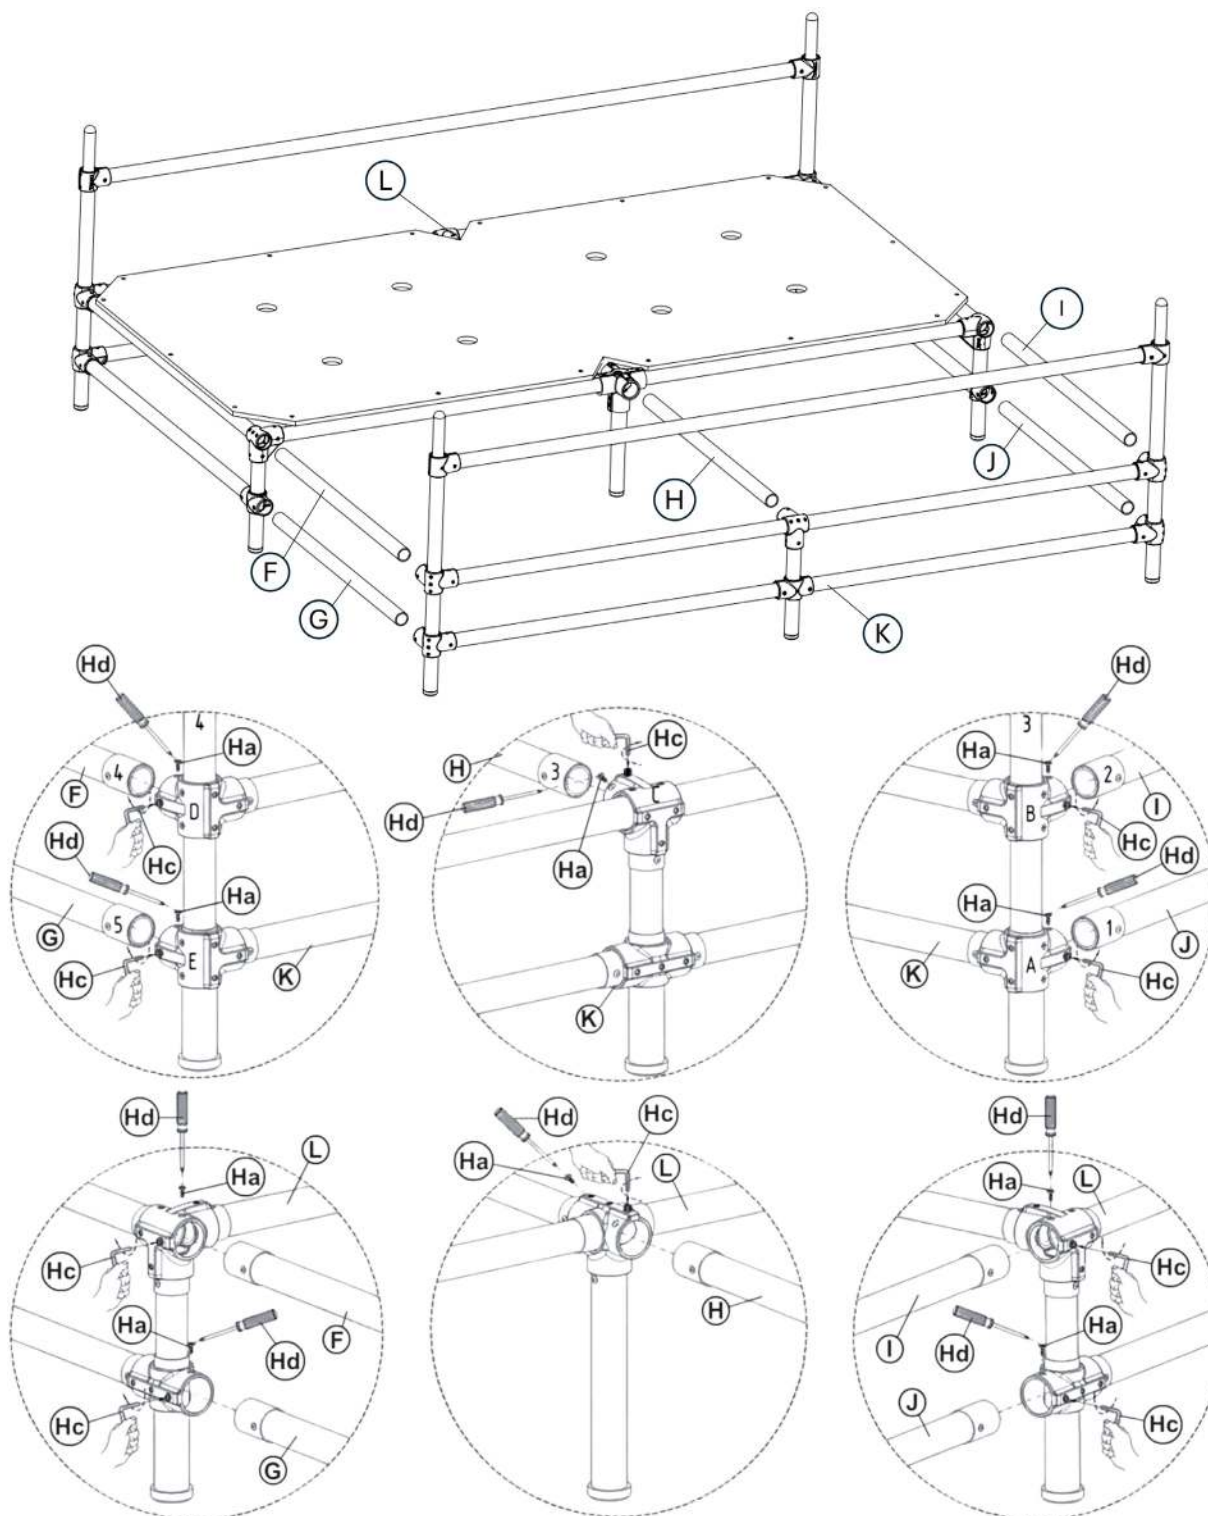

CRESCENT LOUNGE

STEP 2


Insert details "A," "B," "C," and "D" to bottom frame.

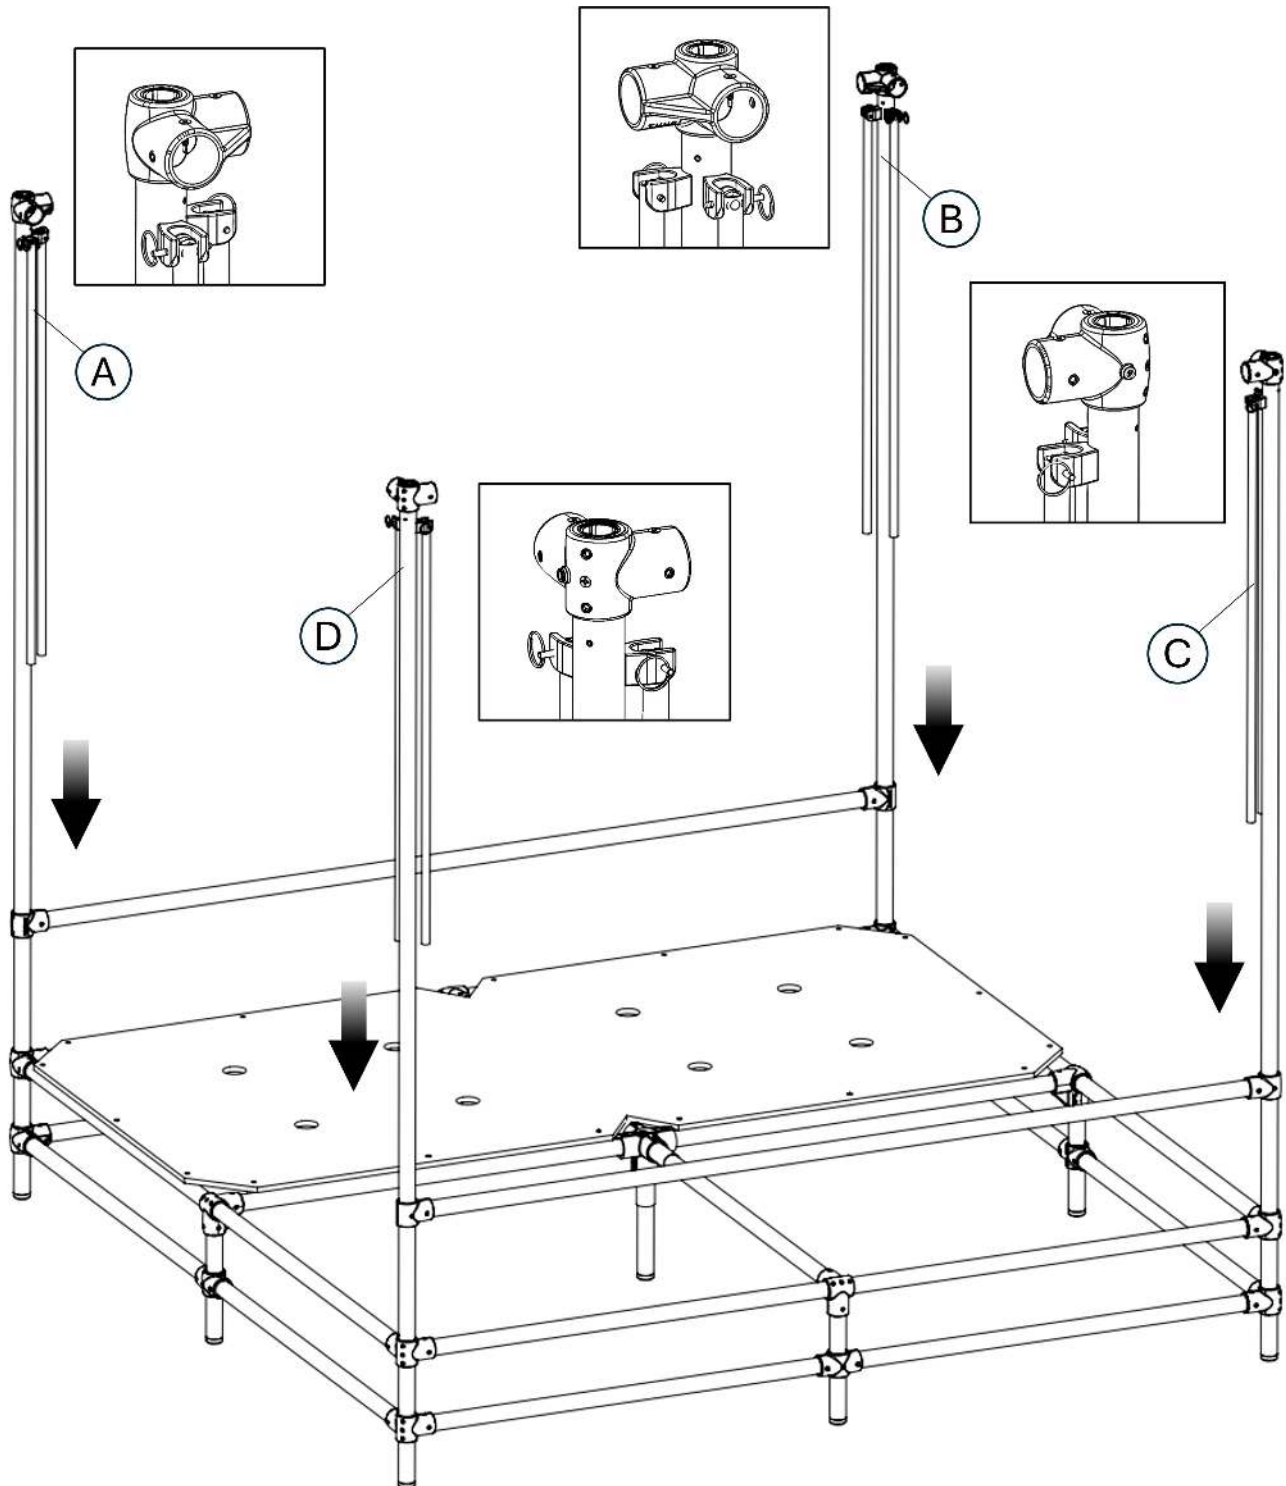

CRESCENT LOUNGE

STEP 3


Insert 3 details "E" to frame "A-B," "B-C" and "C-D." Using allen wrench 3/16" "Hc" tighten lock nut. Using philips driver "Hd" tighten screw "Hb" connect "A," "B," "C," and "D" to bottom frame.

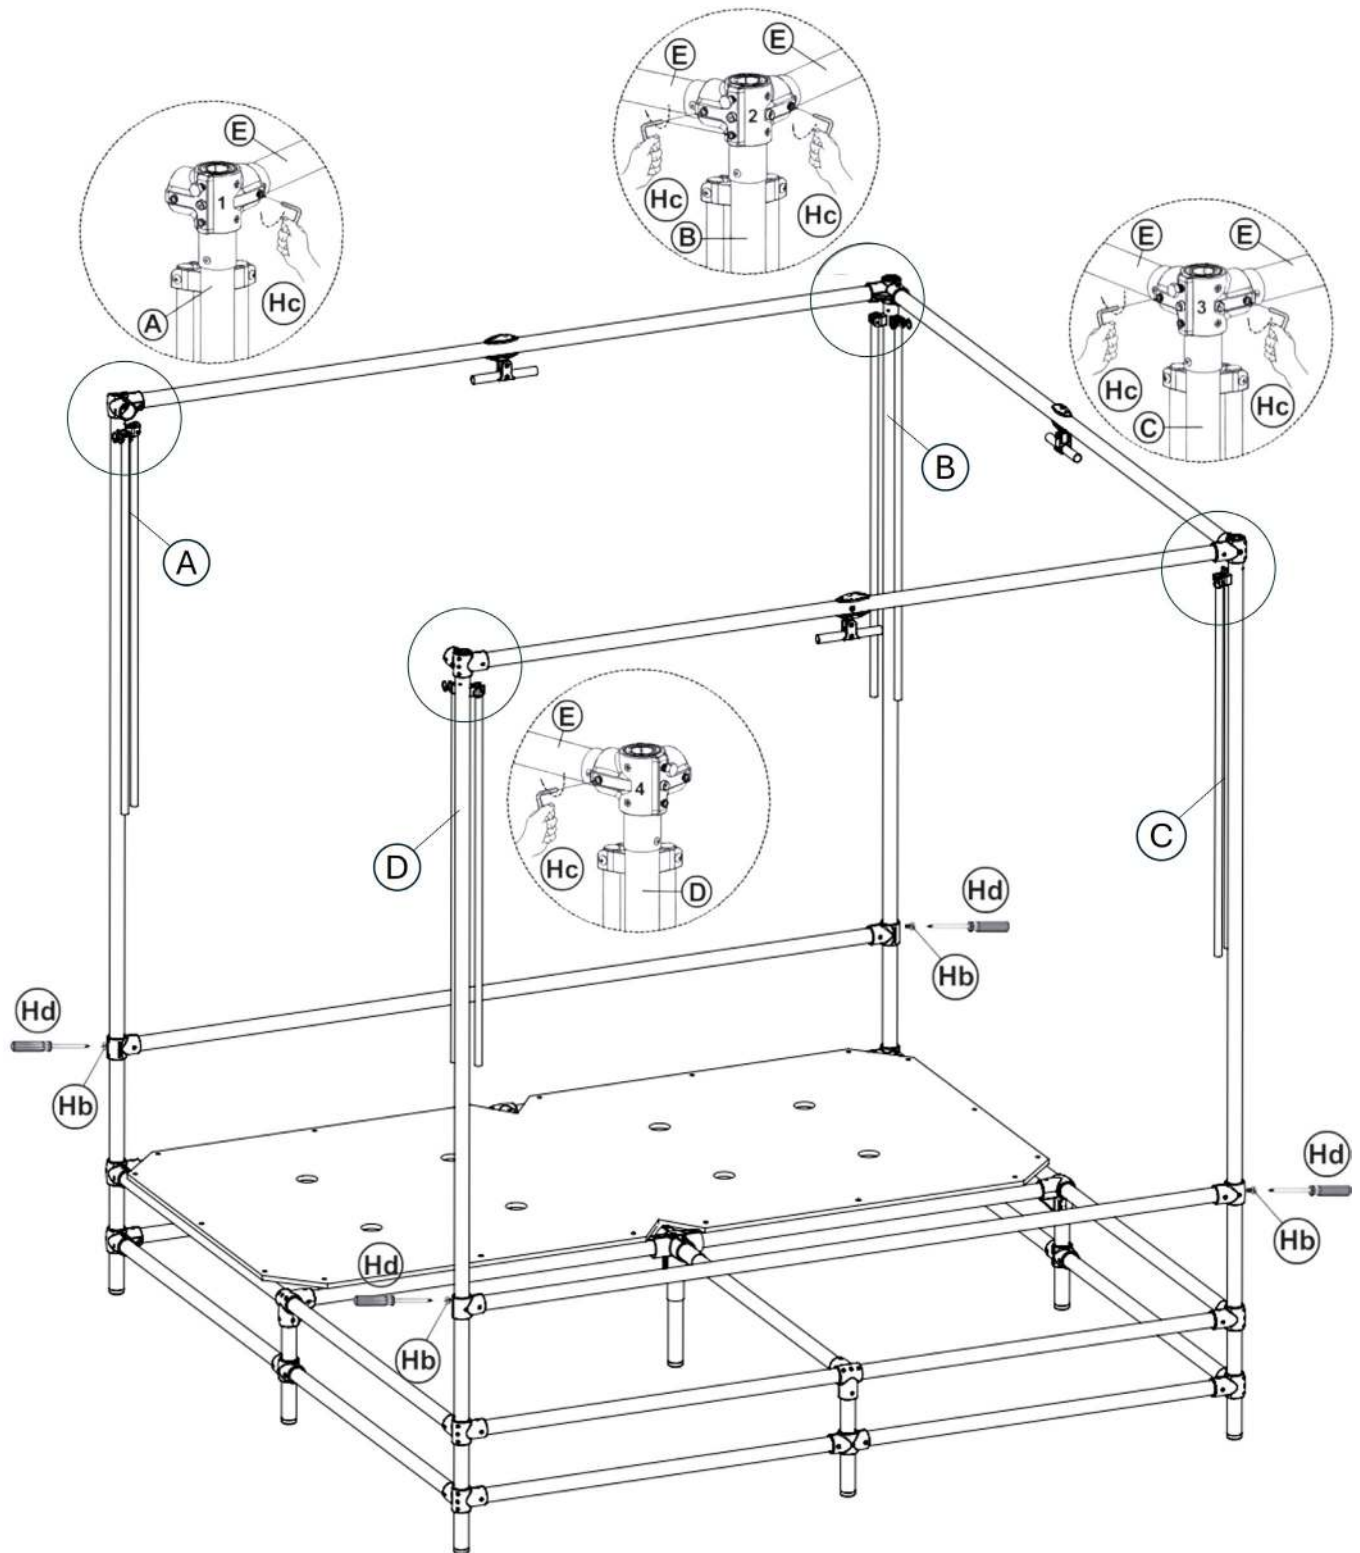

CRESCENT LOUNGE

STEP 4


Open canopy and secure in open position using security pin.
Place canopy on top of assembled frame "A," "B," "C," and "D."
Secure canopy on frame using 4 bimini latches.

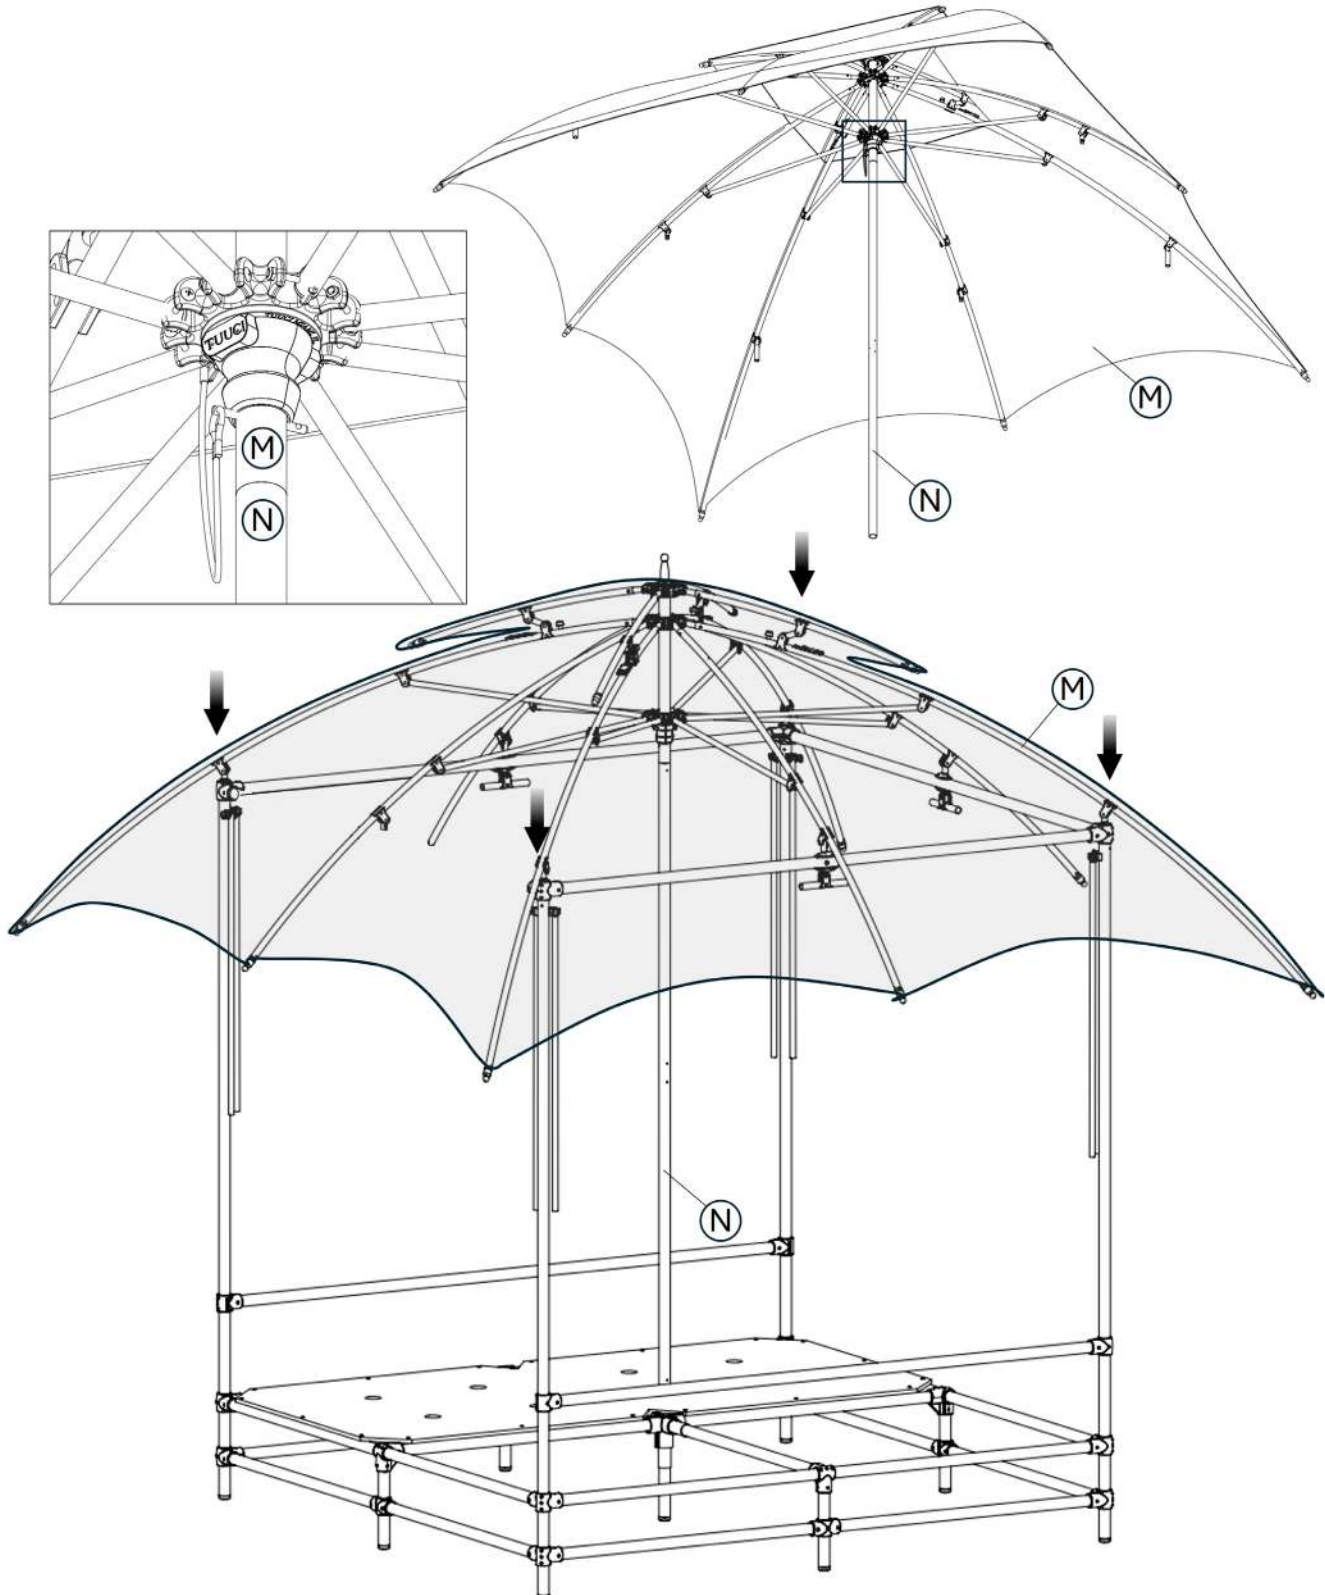

CRESCENT LOUNGE

STEP 5

Insert top cross bar e to frame "A-D." Using 3/16" allen wrench "Hc" tighten lock nut. Using 9/16" wrench "He" tighten lock bolt.

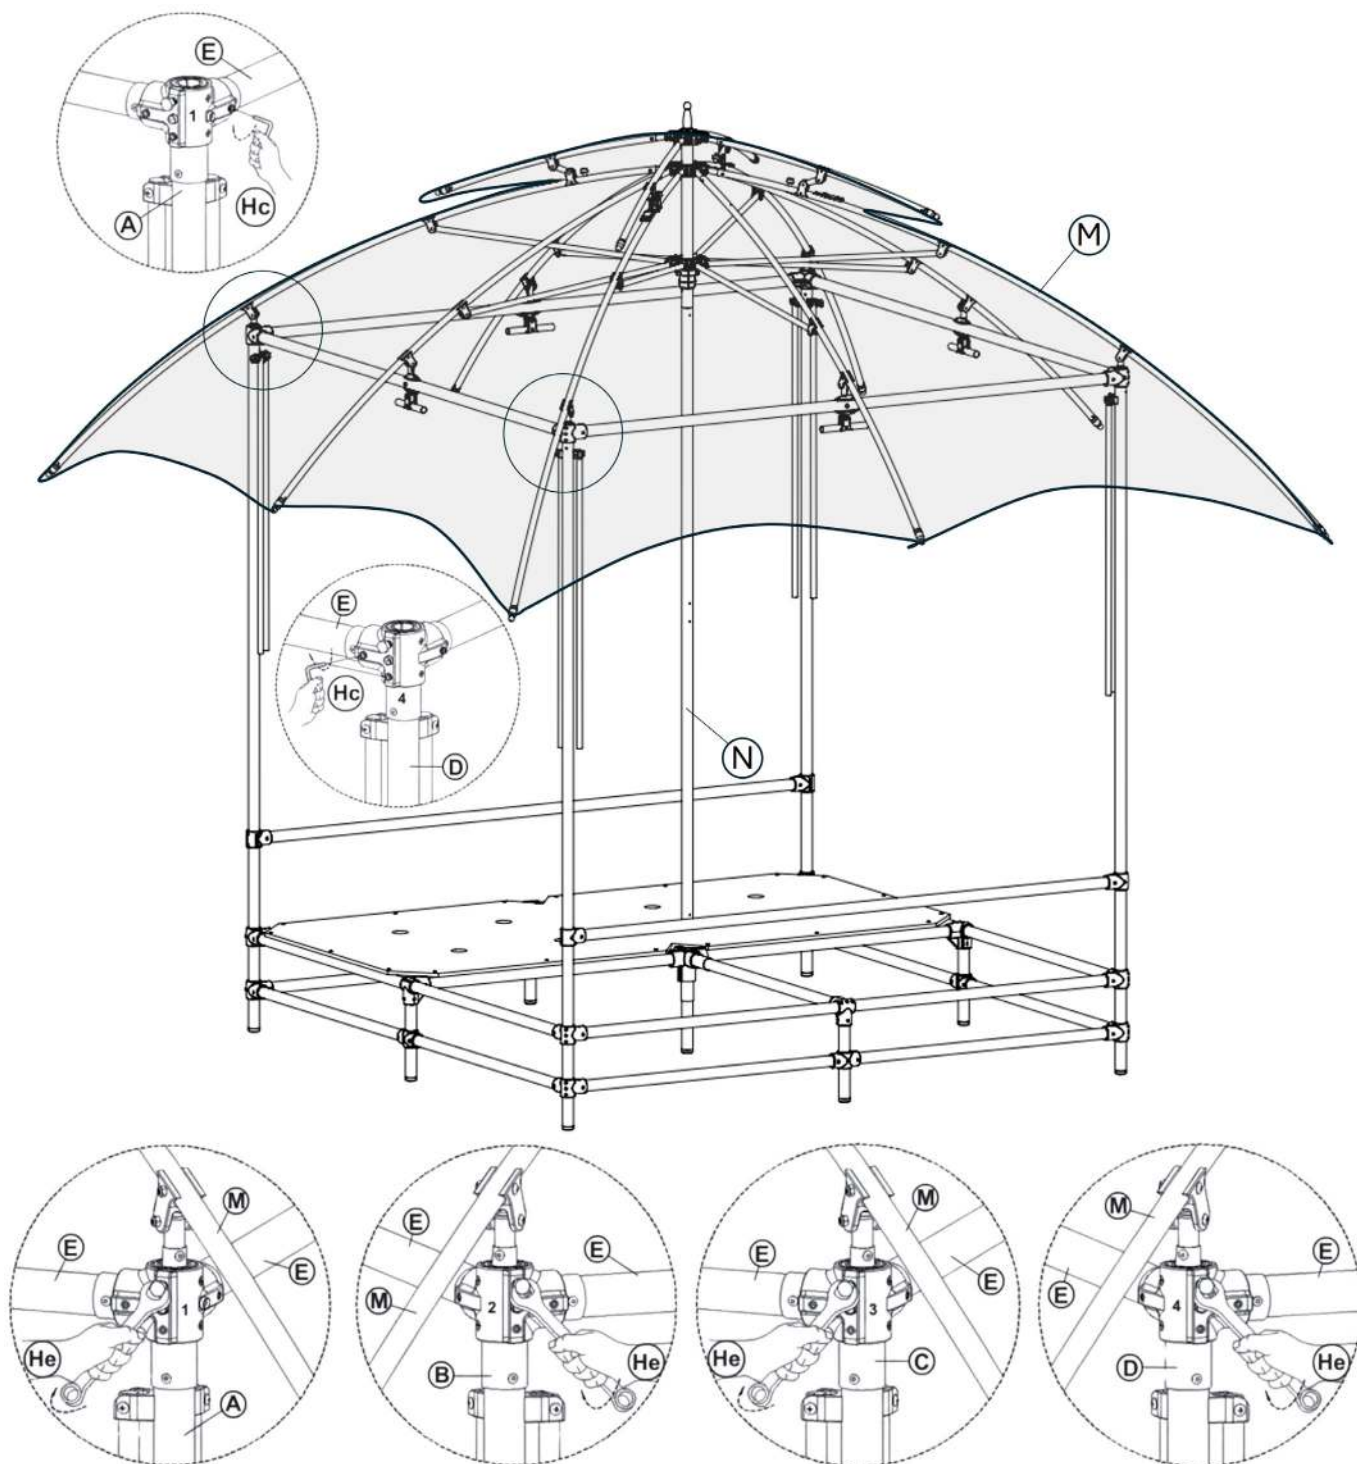


CRESCENT LOUNGE

STEP 6

Remove bottom half of center pole by twisting it counter clockwise.

Install fabric ceiling "V" using velcro tabs.



Cover expose bolt on top half of center pole with venice finial "O."

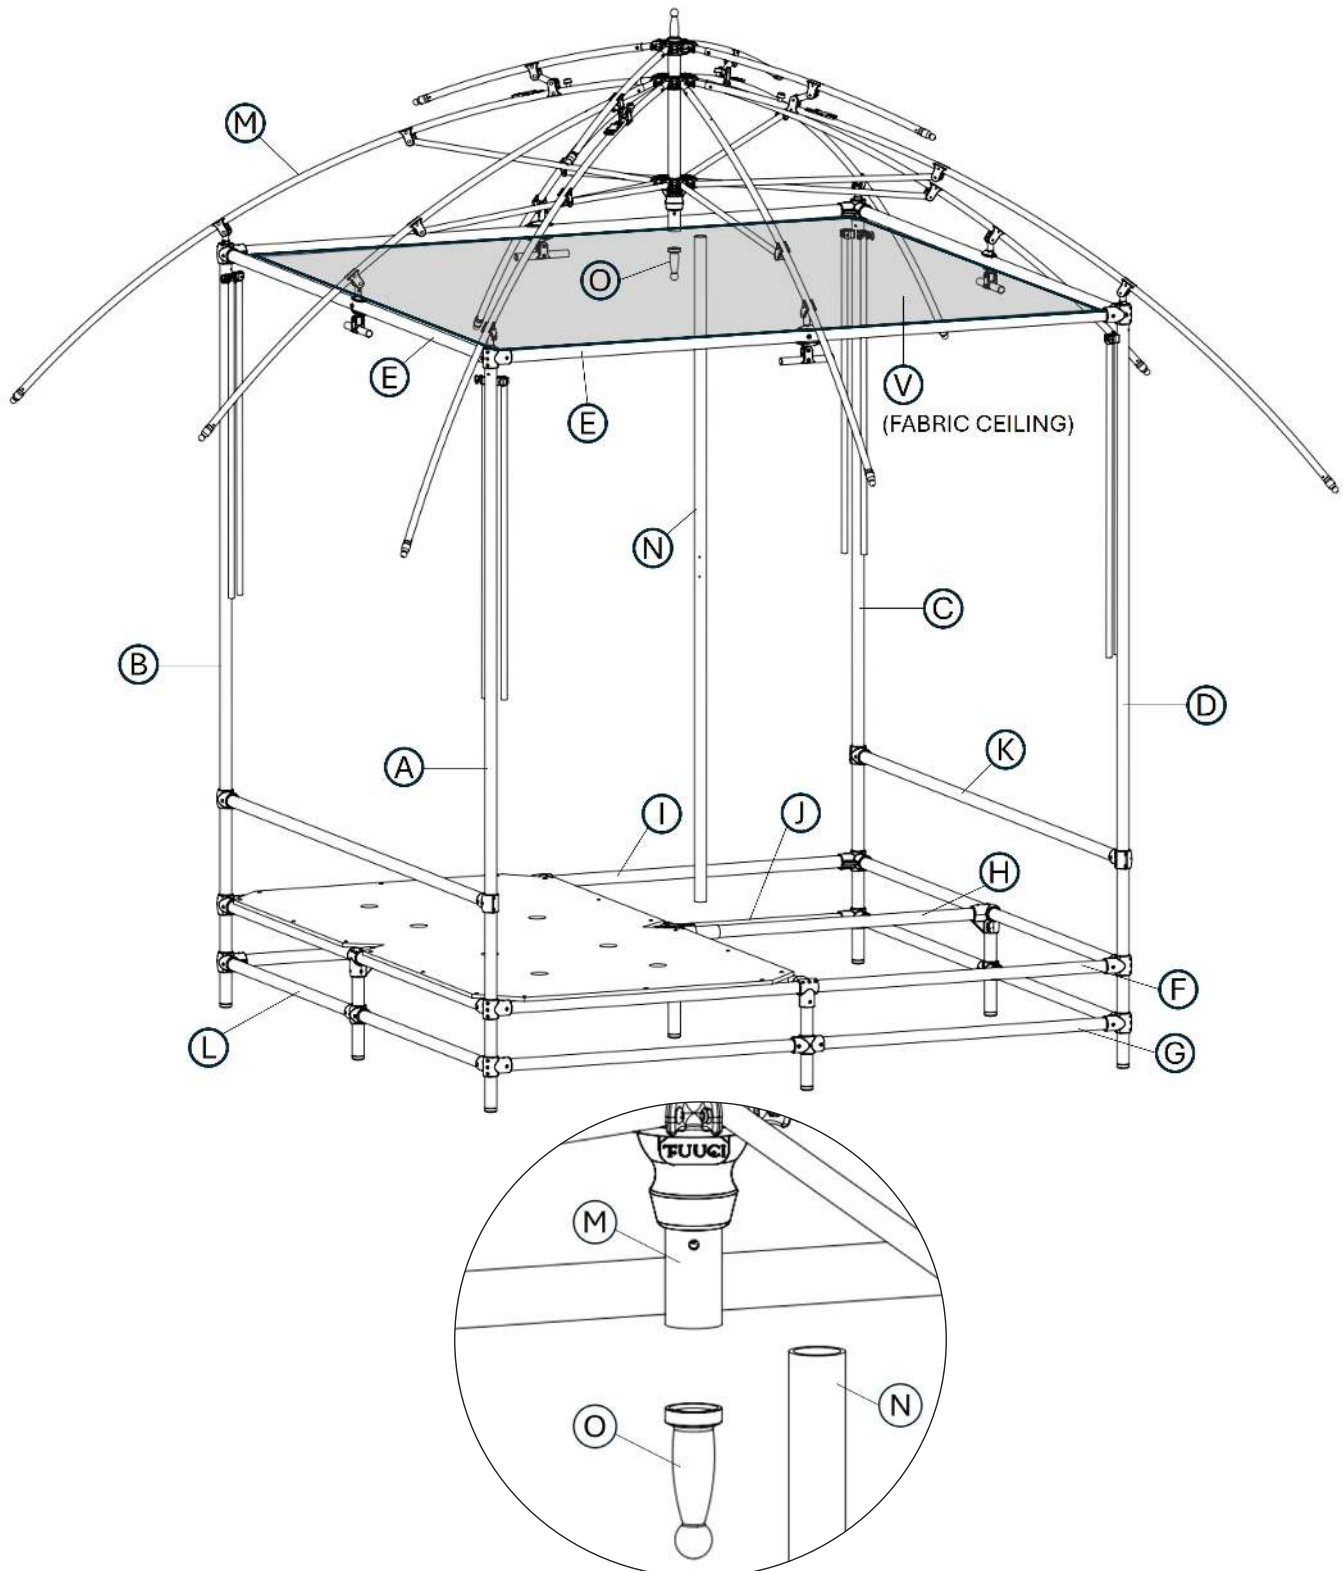

CRESCENT LOUNGE

STEP 7

Connect bottom valance "S" from column "A" to "B," "C," and "D" together. Install pvc piece "P" to frame then add the mattress "T."

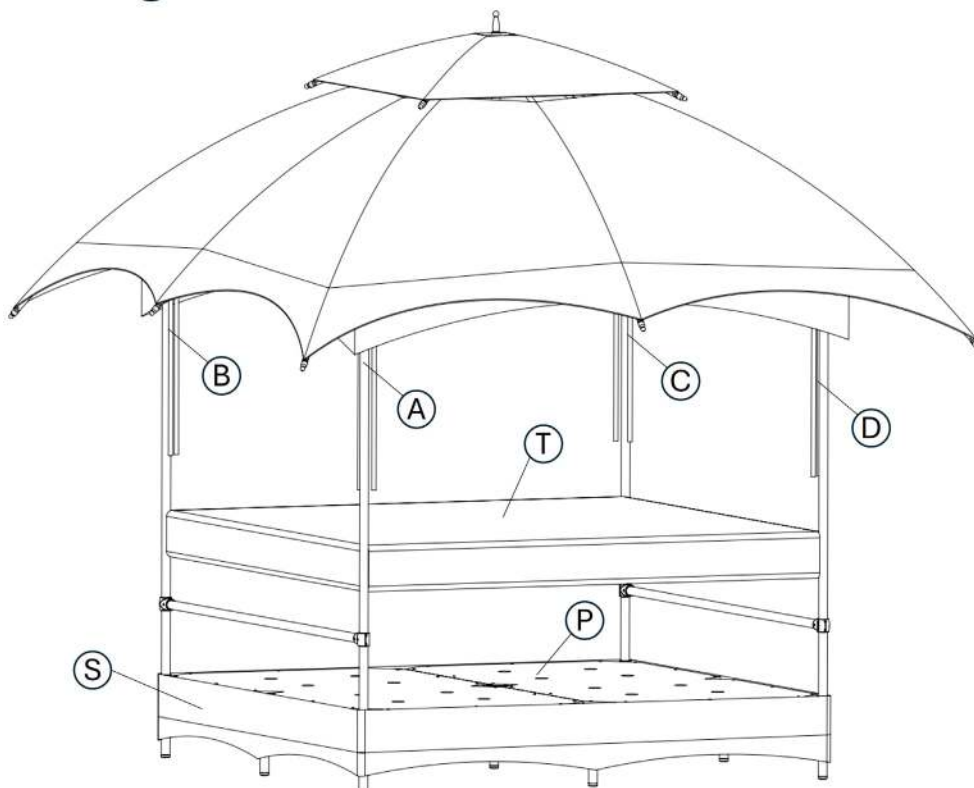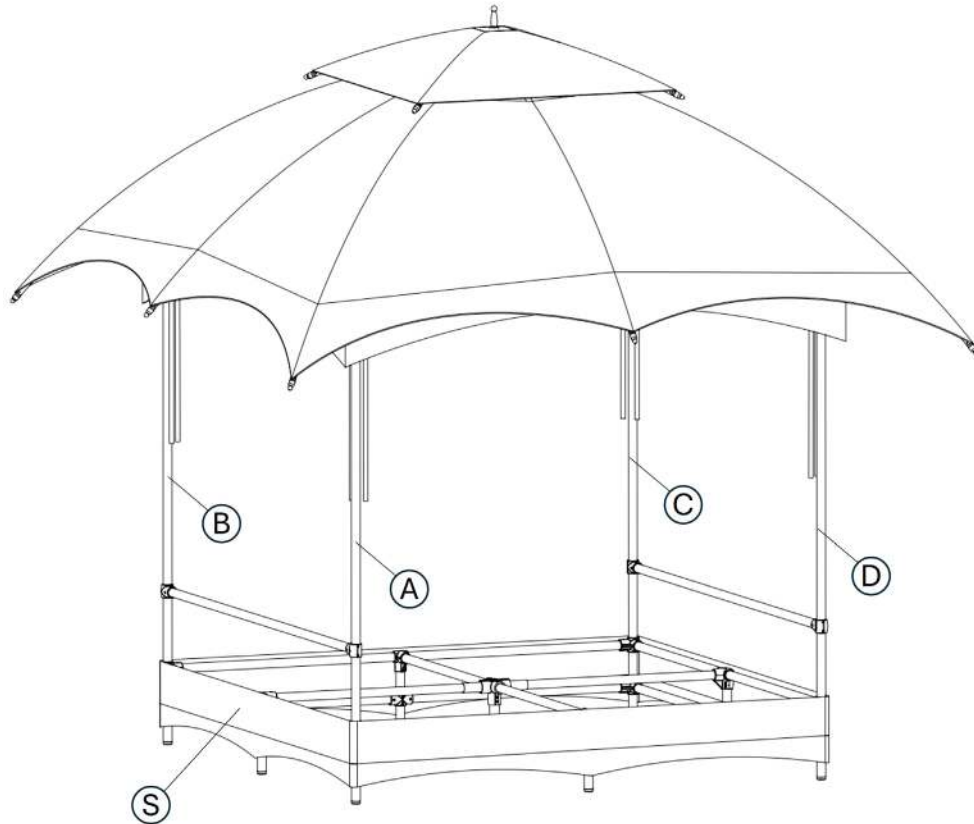

CRESCENT LOUNGE

STEP 8

Install curtain "Q" to crossbar of column "A," "B," "C" and "D." Detach crossbar by sliding sleeve. Connect top valance "R" to column "A," "B," "C" and "D" together.

