

INSTALLATION INSTRUCTIONS

ATLANTIS CABANA



 To protect your product, please read the operating instructions before assembly.

DECK MOUNT & FLUSH MOUNT

STEP 1


Select your cabana dimension from the table below.

ATLANTIS CABANA SIZE	DIM A	DIM B	DIM C	HIGH WIND STABILIZERS
8' SQUARE	88" / 223.5 cm	88" / 223.5 cm	124 1/2" / 316.2 cm	n/a
10' SQUARE	111 1/2" / 283.2 cm	111 1/2" / 283.2 cm	157 5/8" / 400.6 cm	Incl
8' X 12' RECTANGLE	88" / 223.5 cm	133" / 337.8cm	159 1/2" / 405.1cm	Incl

STEP 2

Mark the CENTER locations for each base mount and their diagonal dimensions. Using the chalk line (not included), trace the line from center of each mark.

Attention: Accuracy in diagonal dimensions are crucial to ensure the proper alignment of cabana.

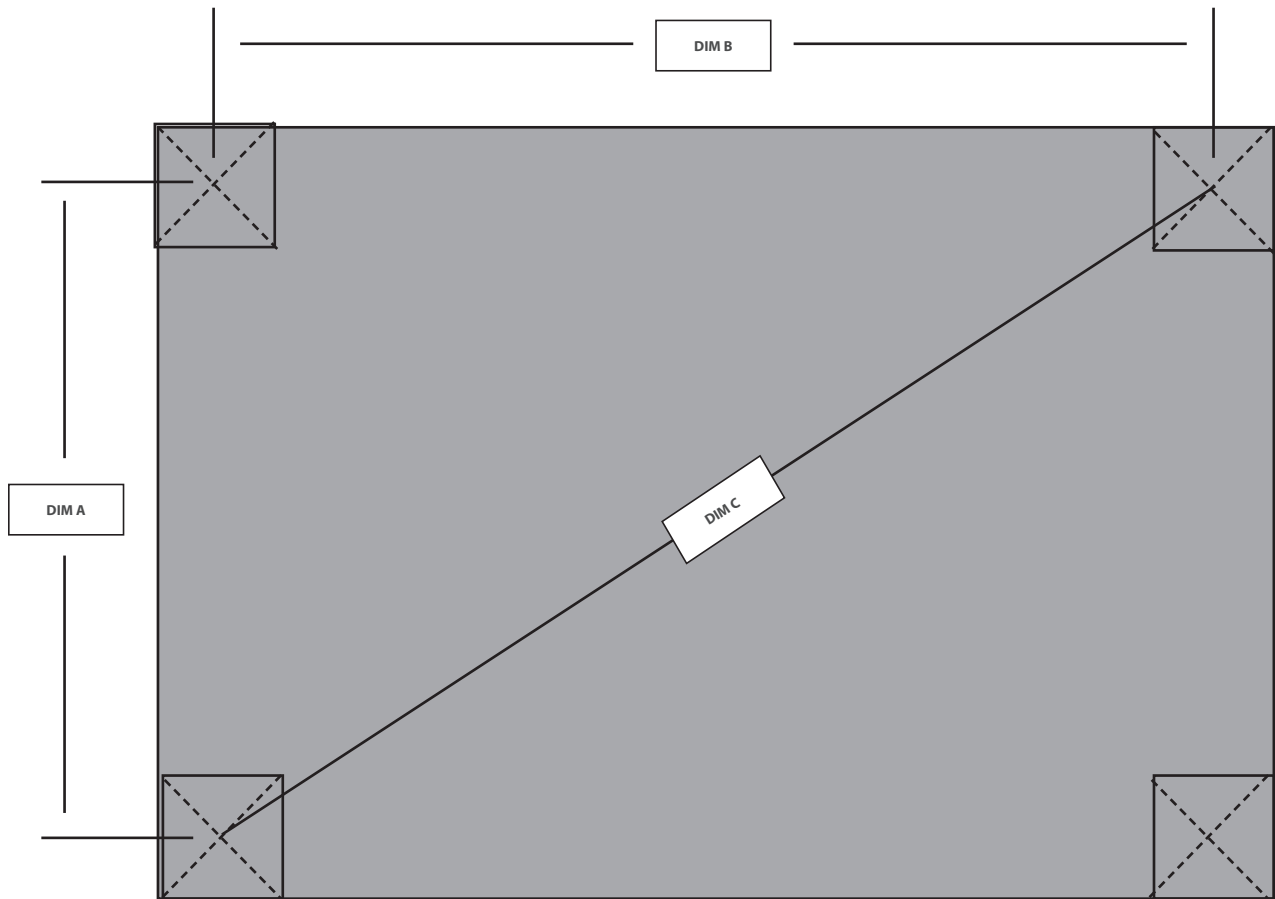

TOP FRAME


STEP 1

Install columns to your anchors.



STEP 2

If applicable, remove all aluminum brackets from cross bars before installing curtains.

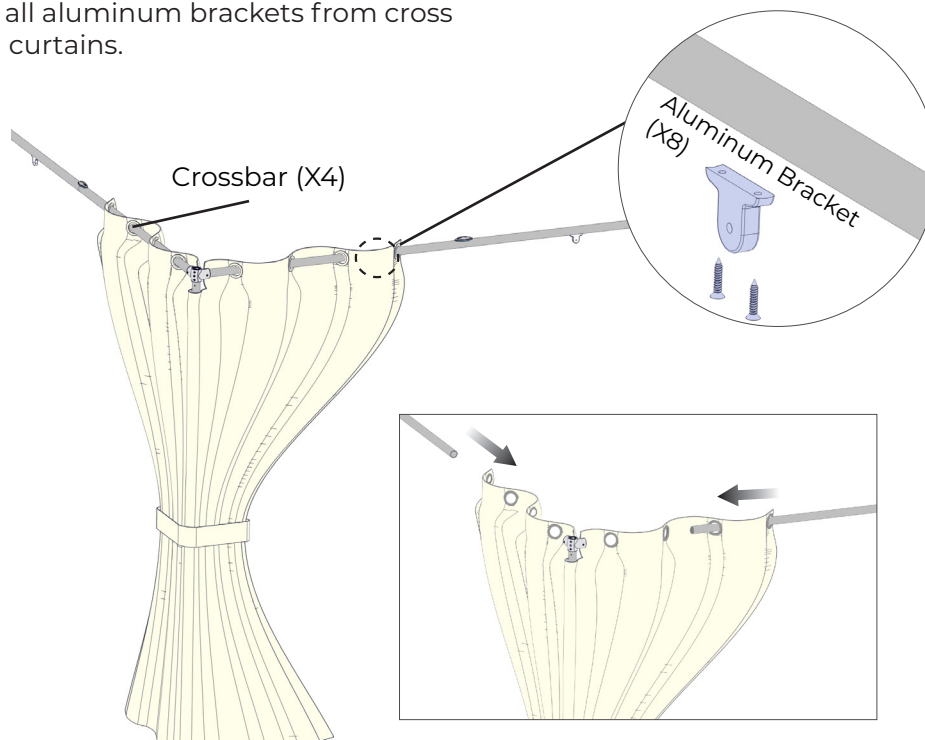


TOP FRAME

STEP 3

Mount crossbars to cast elbows.

STEP 4

If applicable, reinstall aluminum brackets and install corner supports.

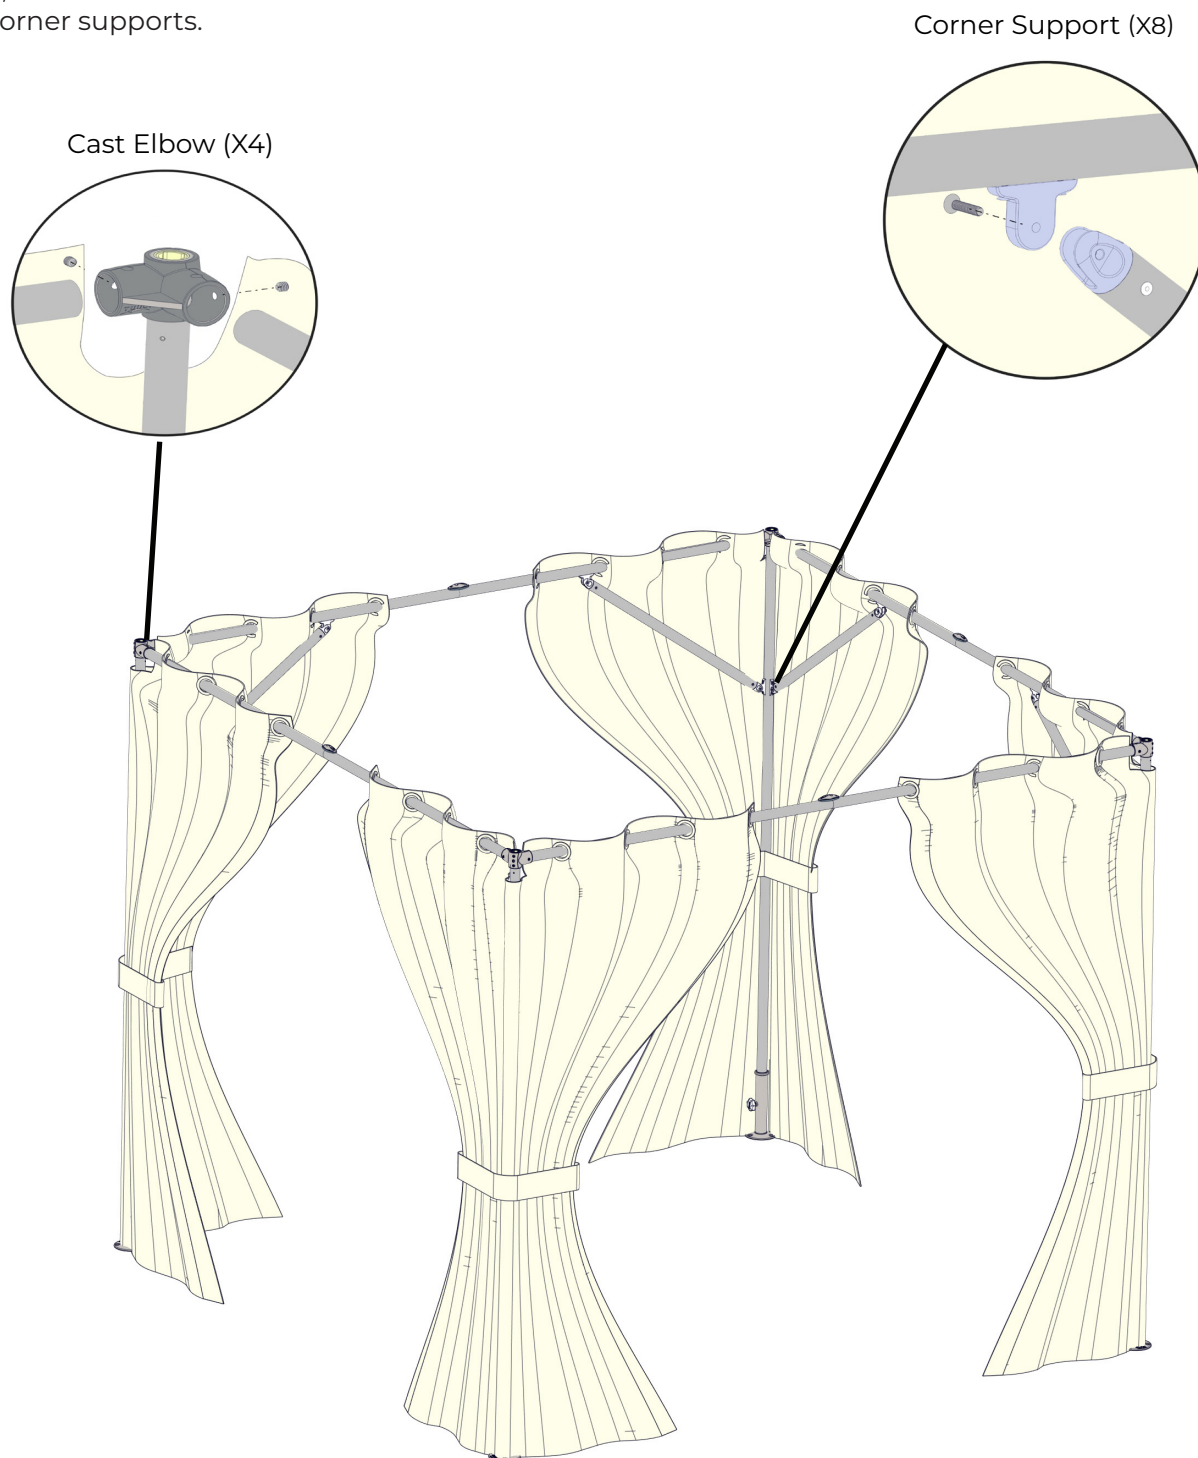

TOP FRAME

STEP 5


Mount top frame by using canopy pole. Remove finial and screw pole in socket.

STEP 6

Align and insert connector sleeves into cast elbows (four corners), then tighten with set screws.

STEP 7

Align and insert bimini connectors into bimini latch clip (unlock clip before inserting) four places.

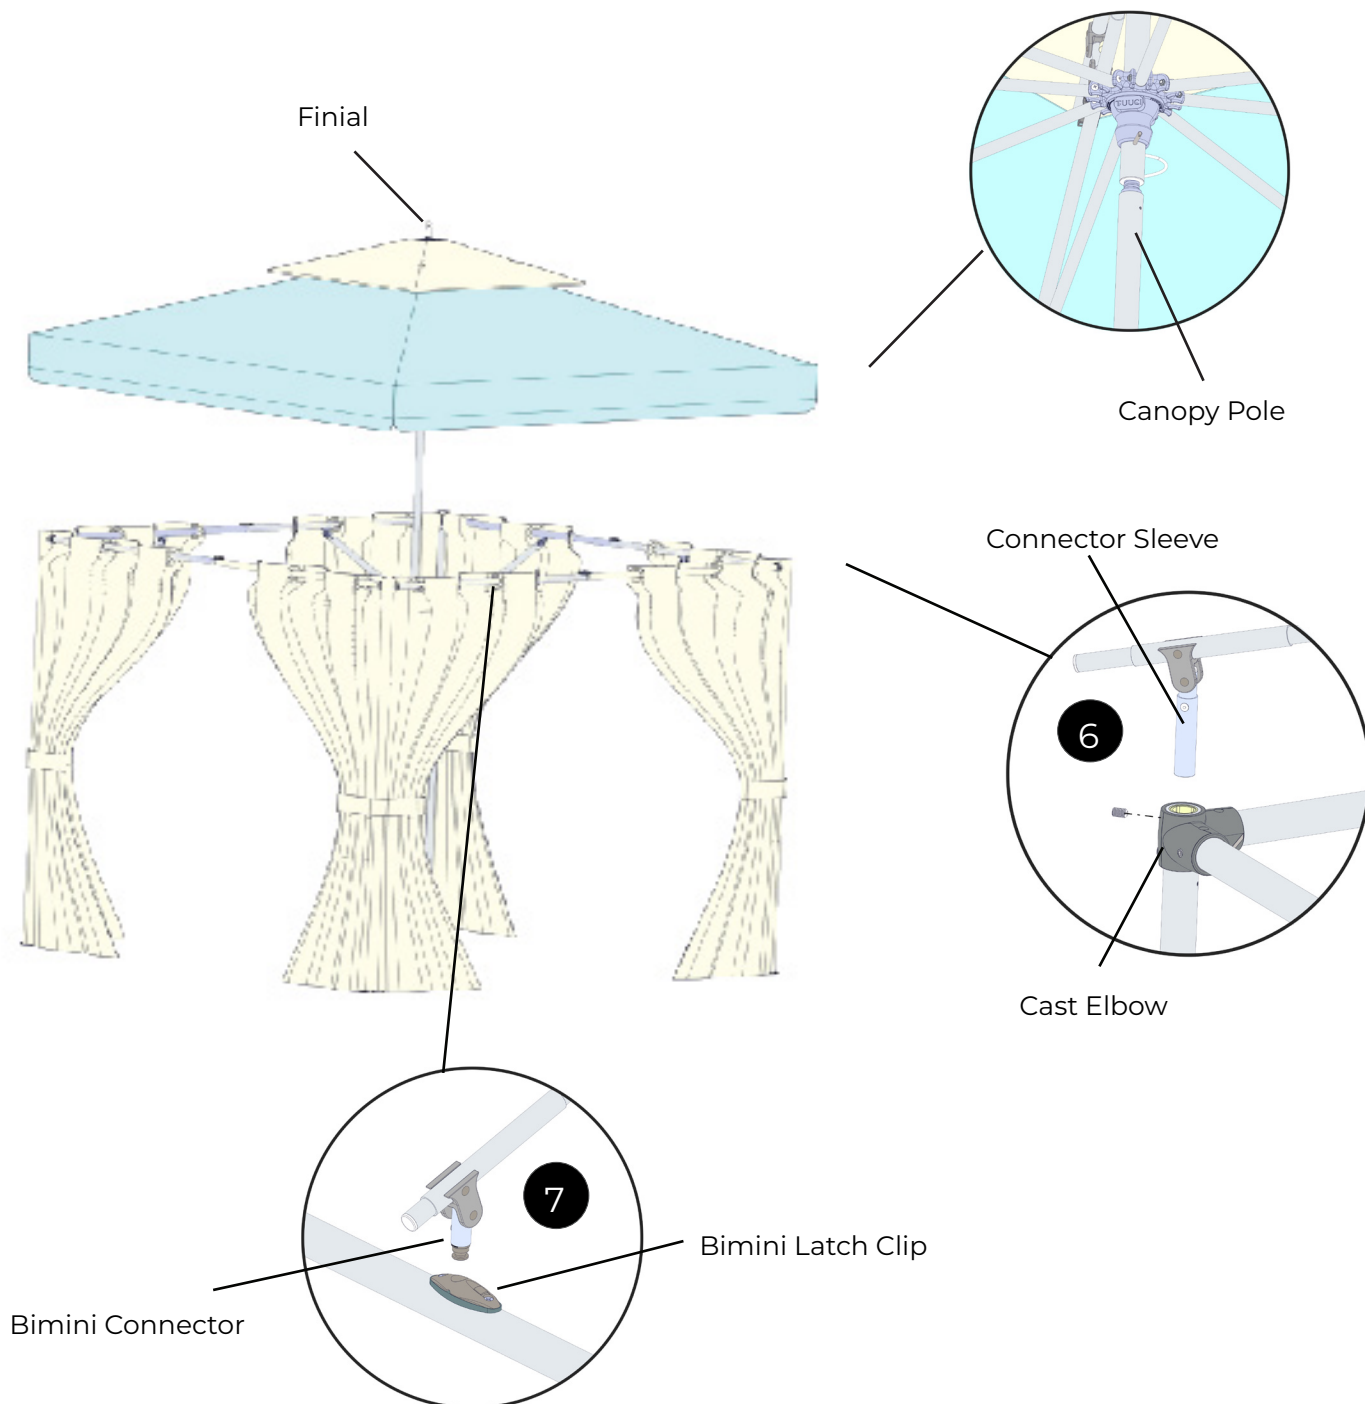


FAN ADAPTER & TV BAR (IF APPLICABLE)

STEP 1

Remove finial and threaded mount.

STEP 2

Install fan adapter.

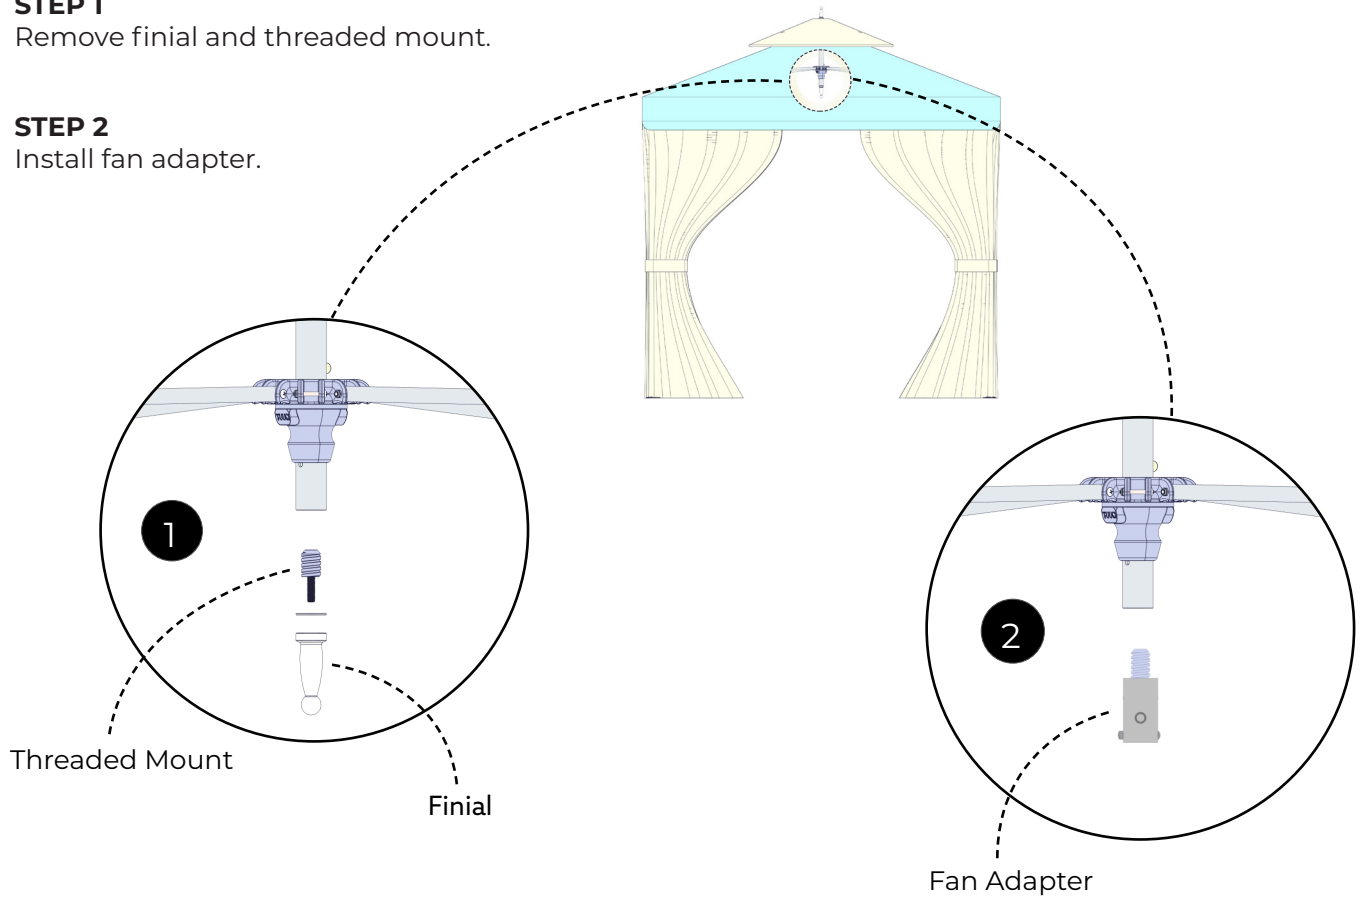


STEP 1

Slide TV bar onto crossbar aluminum brackets and tighten with screws.

STEP 2

Connect power source to electrical outlet (cord length 10ft).

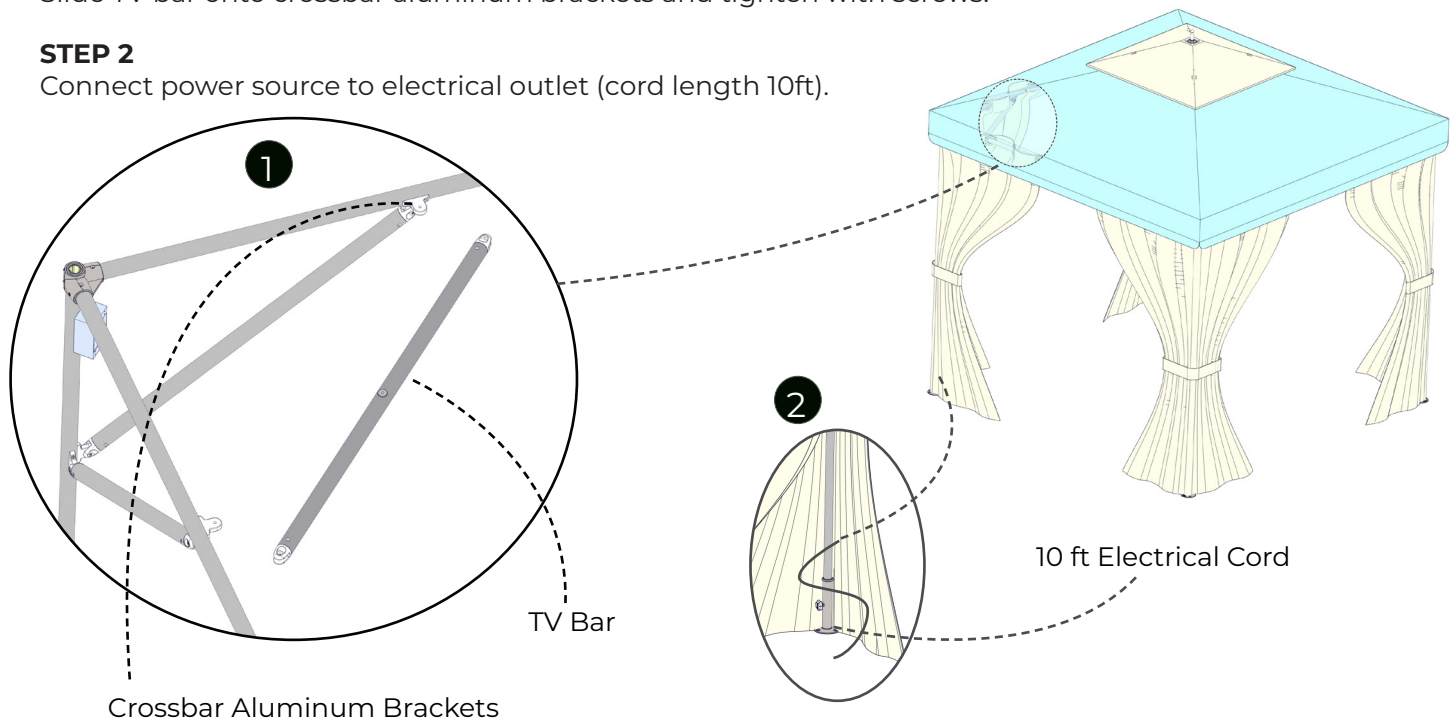

TENSION FABRIC WALL

STEP 1

Mount vertical back bars and lower crossbar.


STEP 2

Insert center support column.

STEP 3

Install fabric wall and run rope throughout upper crossbar first, leave loose. Then run rope throughout lower crossbar and throughout side columns. Create tension and tighten.

Follow the numbered steps below.

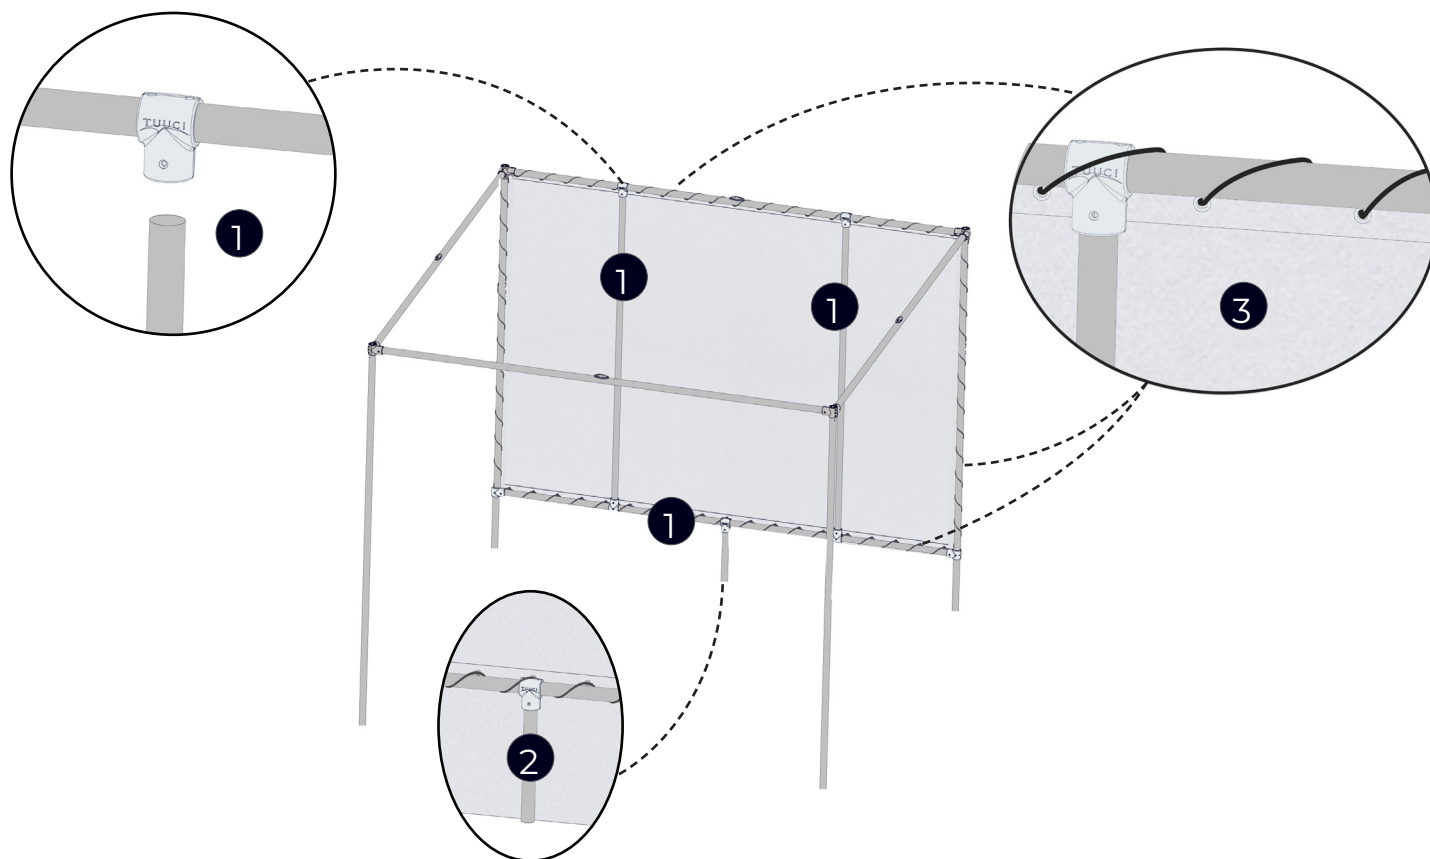

TENSION FABRIC WALL

STEP 4

Add top and bottom fabric panels and fasten with velcro.

