

INSTALLATION INSTRUCTIONS

GRAND PACIFIC CABANA

(2 PERSON ASSEMBLY)



To protect your product, please read the operating instruction before assembly.
this document is for mouting to concrete and tiled floor surfaces only.


GRAND PACIFIC CABANA

HARDWARE AND PARTS INCLUDED (IMAGES ARE NOT 1:1 SCALE)

	DESCRIPTION	QTY	PART IMAGE
A	LEFT - BACK COLUMN	1	
B	RIGHT - BACK COLUMN	1	
C	RIGHT - FRONT COLUMN	1	
D	LEFT - FRONT COLUMN	1	
E	SIDE & BACK UPPER HORIZONTAL BAR	3	
F	FRONT HORIZONTAL BAR CROSSBAR	1	
G	SIDE & BACK LOWER HORIZONTAL BAR	3	
H	MIDDLE LEG	3	
I	FLUSH MOUNT	7	
J	CANOPY FRAME	1	
K	COLUMN OF CANOPY	1	
L	FINIAL	1	
Ha	MACHINE DRILL HOLES IN CONCRETE 2 1/4" DIAMETER (NOT INCLUDED)		
Hb	MACHINE DRILL HOLES 1/2" AND 17/64" DIAMETER (NOT INCLUDED)		
Hc	DRILL BIT 17/64" (NOT INCLUDED)		
Hd	DRILL BIT 1/2" (NOT INCLUDED)		
He	ALLEN WENCH 3/16" (NOT INCLUDED)		
Hf	PHILIPS BOLT HEAD 3/16" (INCLUDED)	21	

GRAND PACIFIC CABANA


	DESCRIPTION	QTY	PART IMAGE		
Hg	ANCHOR 1/2"-13 (INCLUDED)	21	 (Hg)	 (Hh)	 (Hi)
Hh	ANCHOR PUNCH 1/2" (INCLUDED)	1			
Hi	HITCH PIN (INCLUDED)	7			
Hj	9/16" WENCH (INCLUDED)	1	 (Hj)	 (Hk)	 (Hl)
Hk	PHILIPS DRIVER (NOT INCLUDED)				
Hl	HAMMER (NOT INCLUDED)				

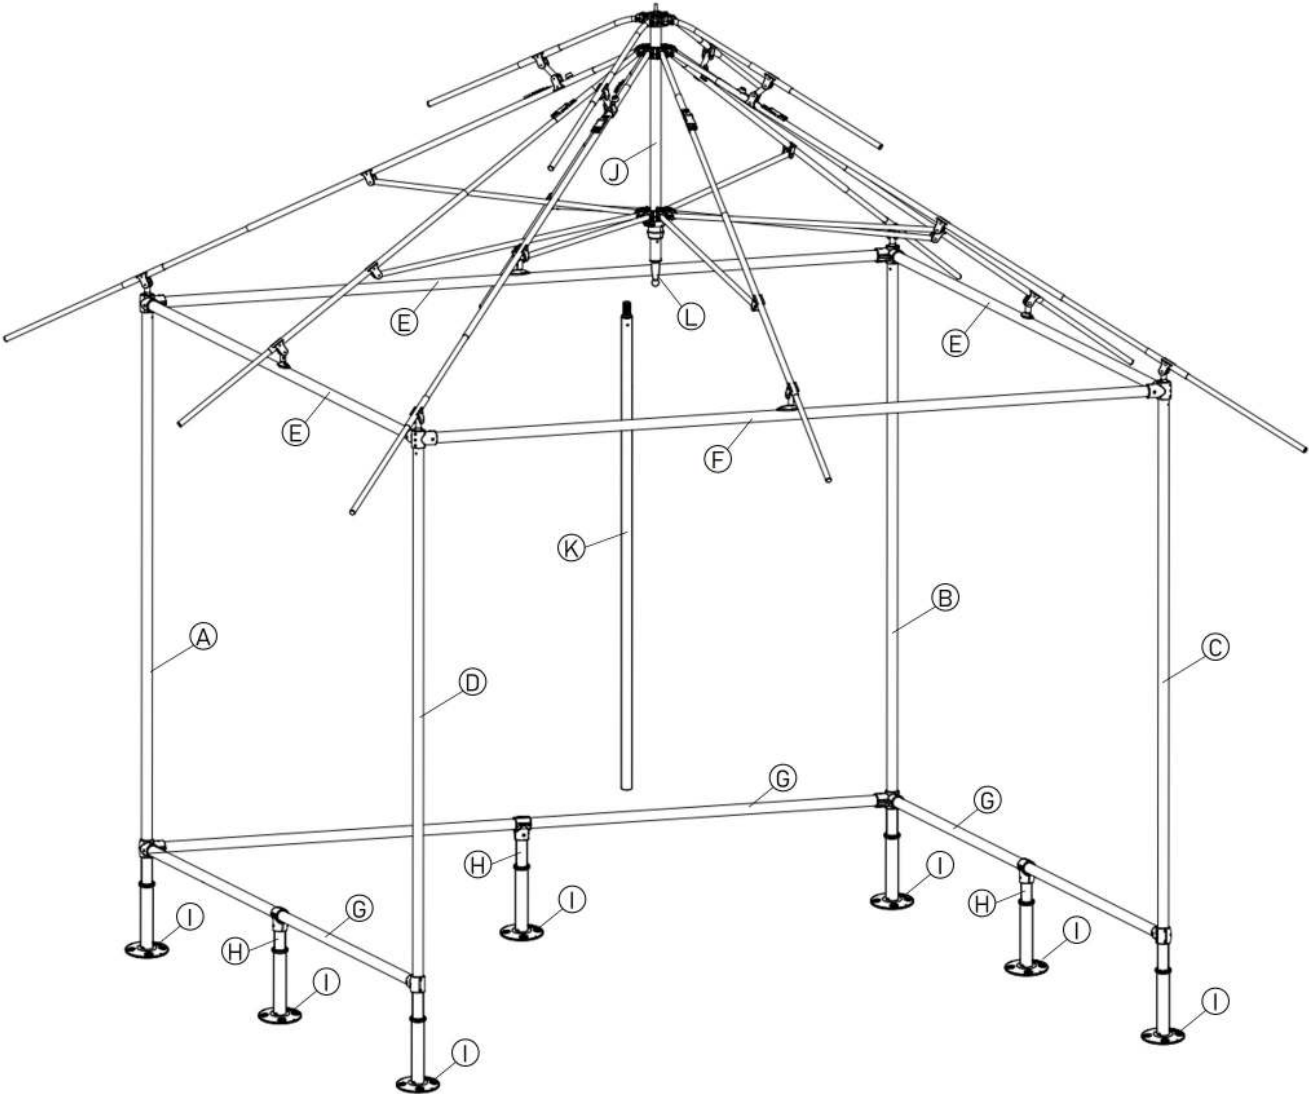

GRAND PACIFIC CABANA

DETAILS OF FABRIC (IMAGES ARE NOT 1:1 SCALE)


	DESCRIPTION	QTY
M	CANOPY FABRIC	1
N	LEFT FABRIC DOOR	1
O	RIGHT FABRIC DOOR	1
P	FABRIC WALL	1
Q	VALANCE	1
R	ROPE	

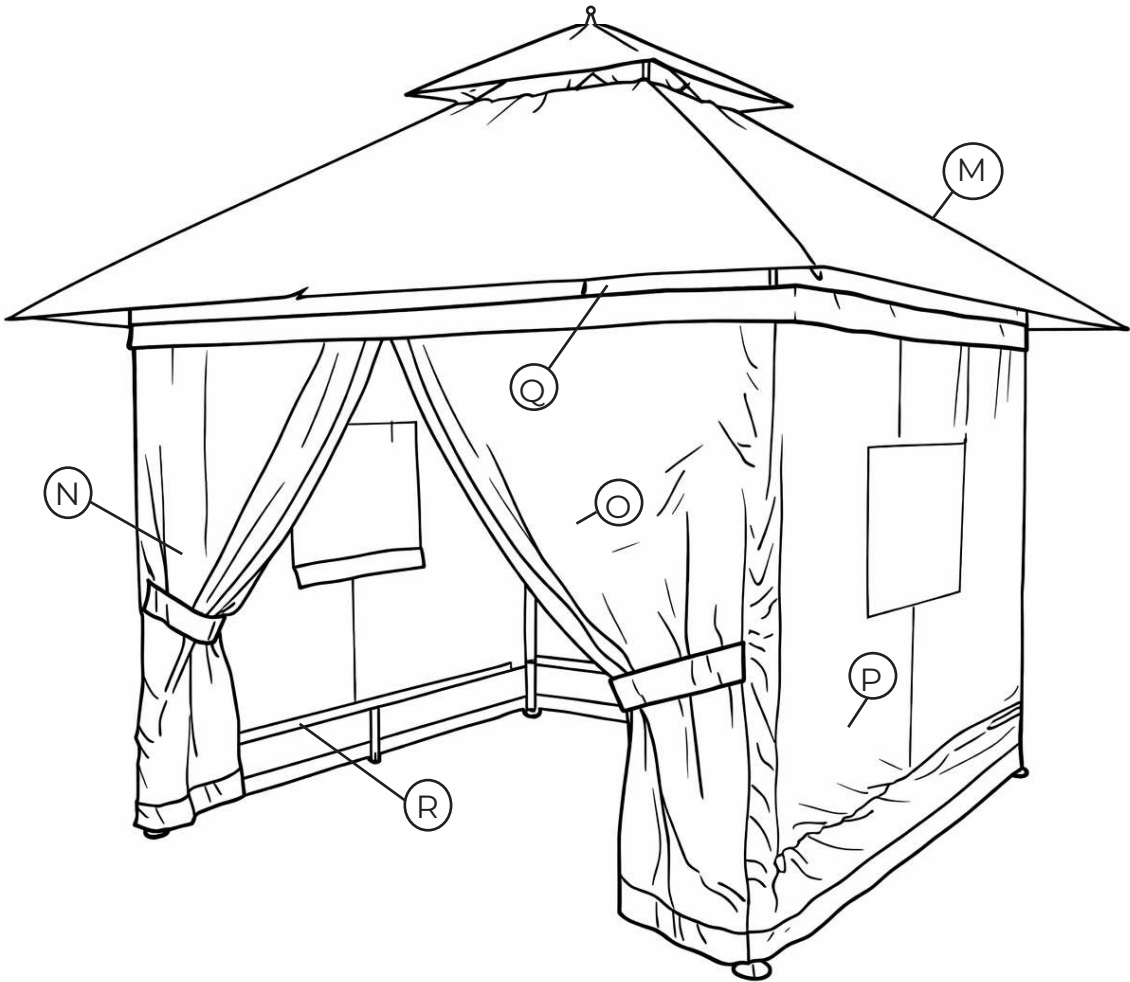

GRAND PACIFIC CABANA

STEP 1






Mark 7 hole pattern with 6" depth for flush mount on the floor with dimension as in the drawing.

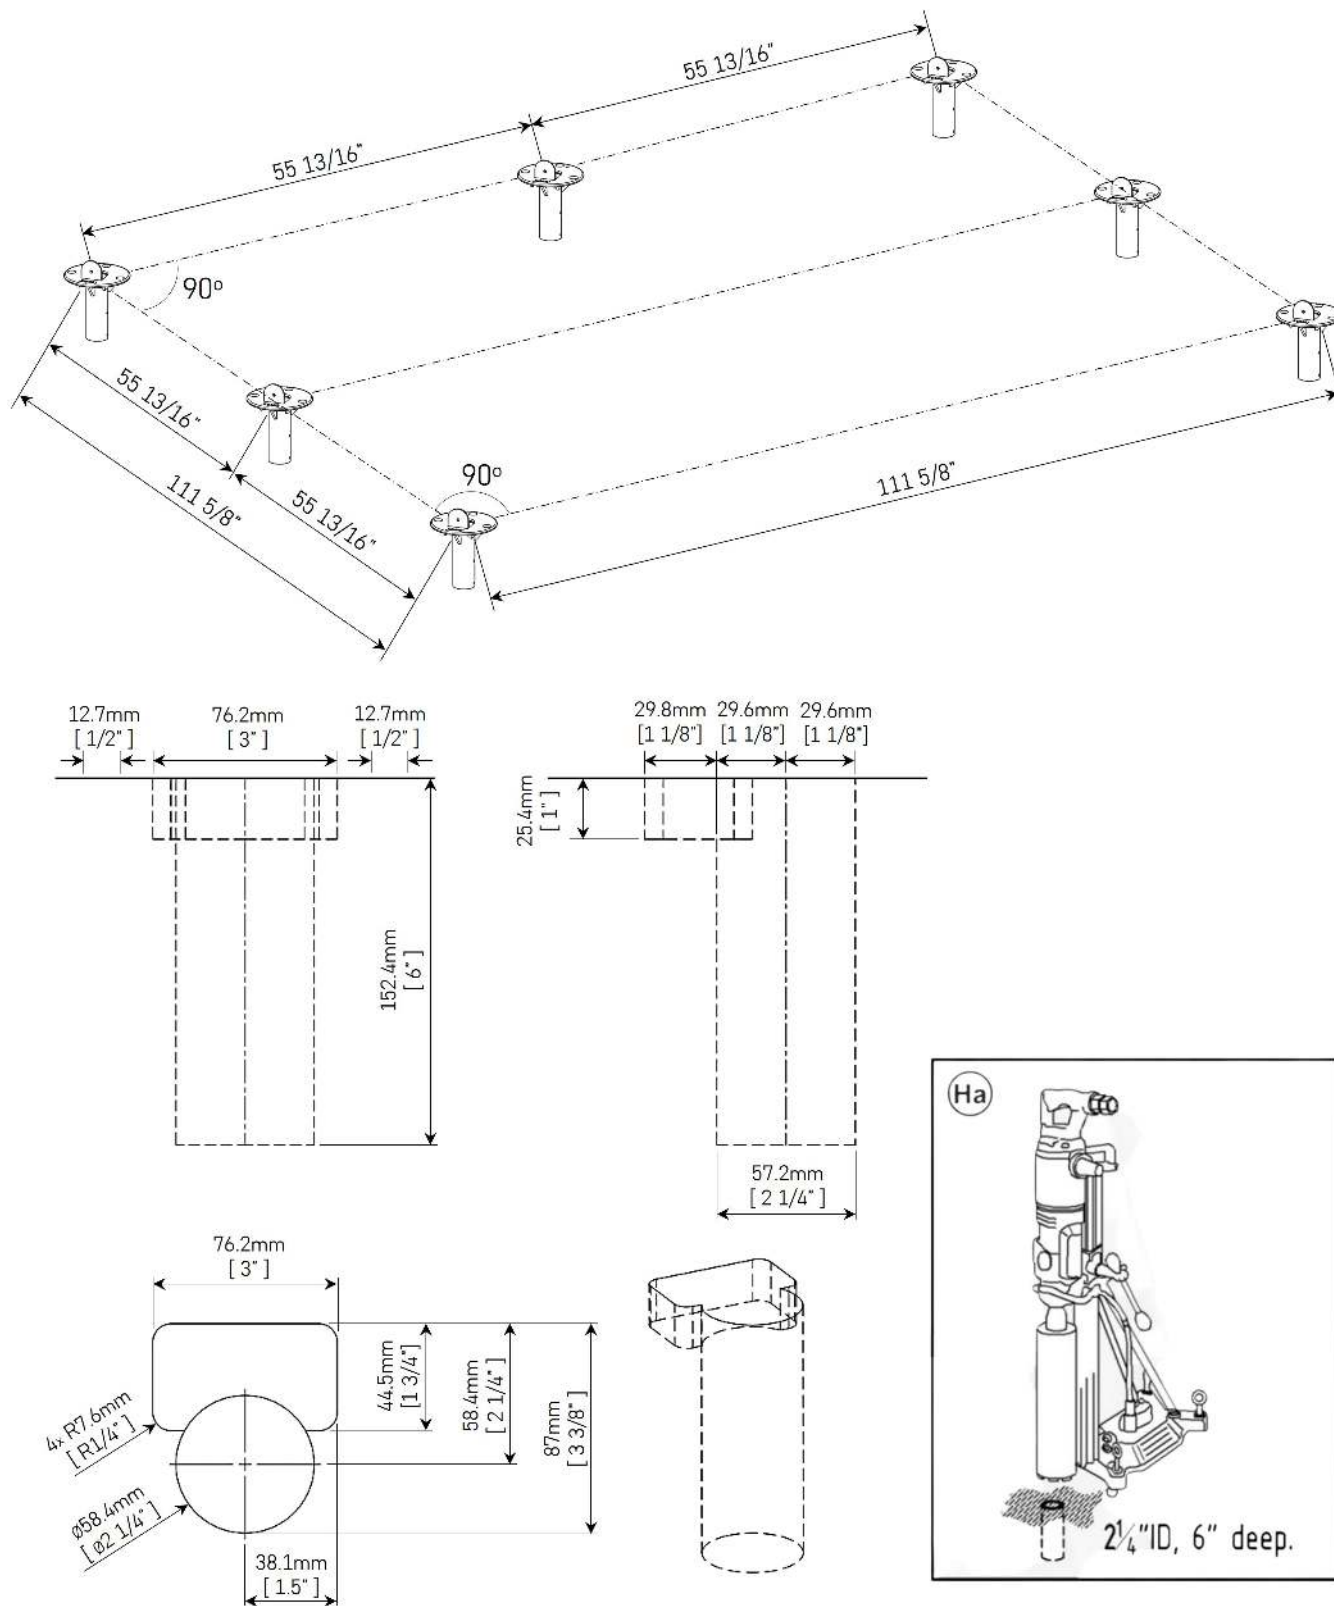

GRAND PACIFIC CABANA

STEP 2


1. Mark 3 hole pattern on concrete deck.
2. Using 1/2" drill bit, drill 3 holes 1 1/2" deep.
3. Insert "drop in" anchor.
4. Hammer open flange on "drop in" anchor.
5. Secure deck mount with screws and tighten securely.

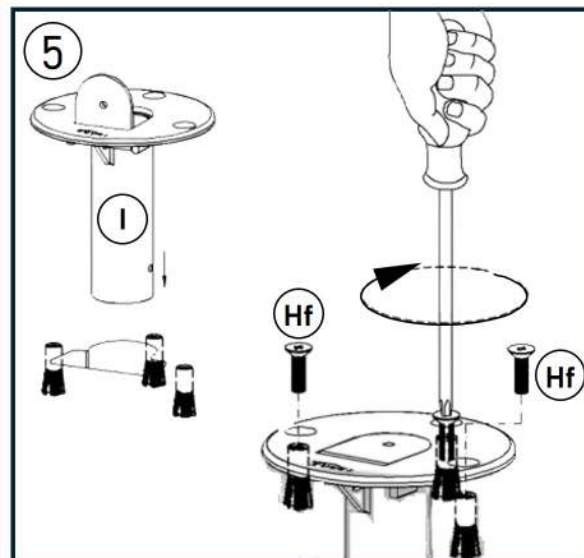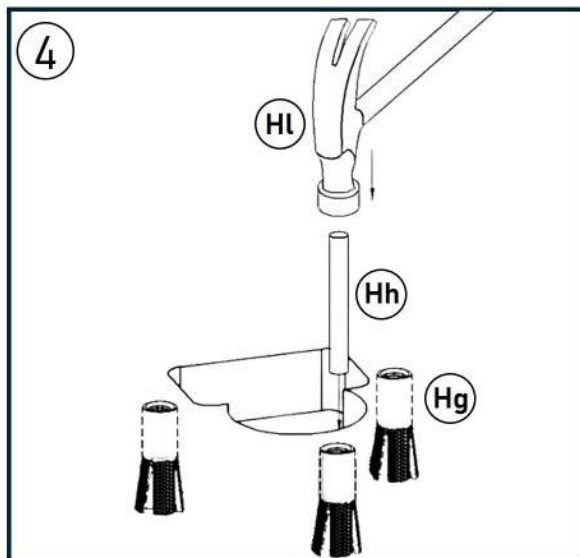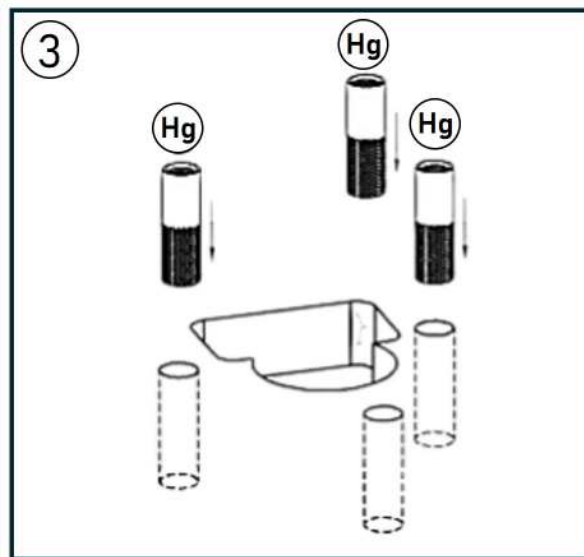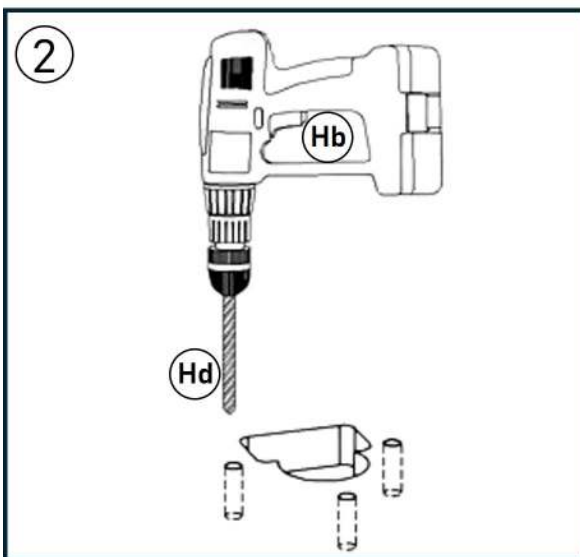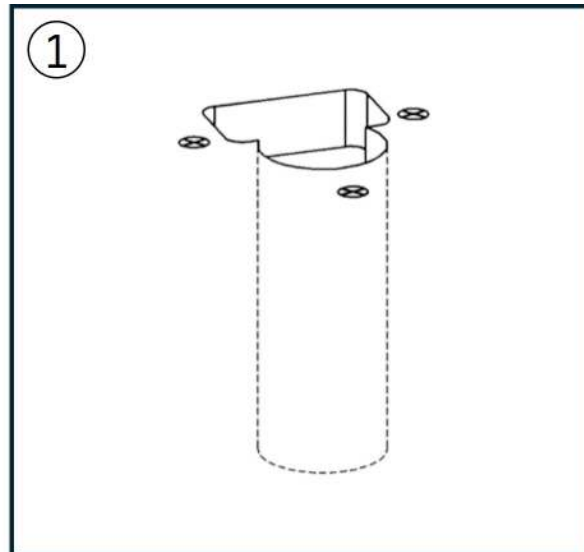

GRAND PACIFIC CABANA

STEP 3


Insert detail "H" to detail "G." tighten using the 3/16" allen wrench.

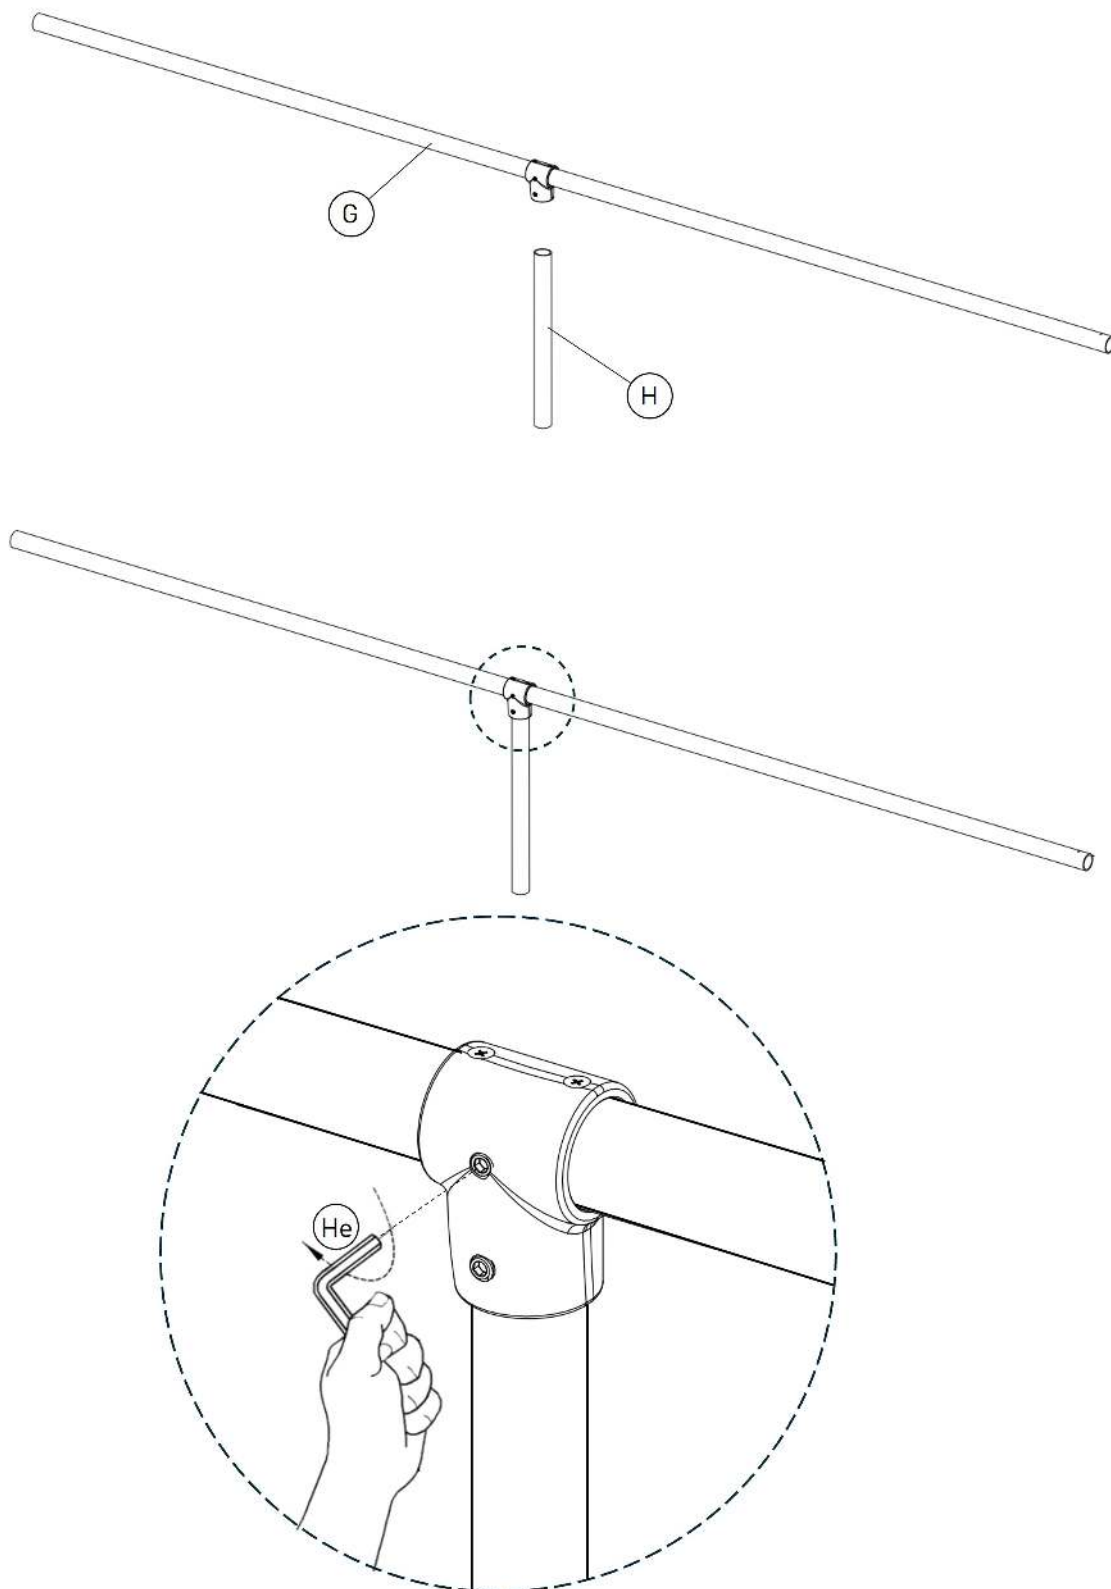

GRAND PACIFIC CABANA

STEP 4

Insert group "G" & "H" to detail "A," "B," "C," and "D."

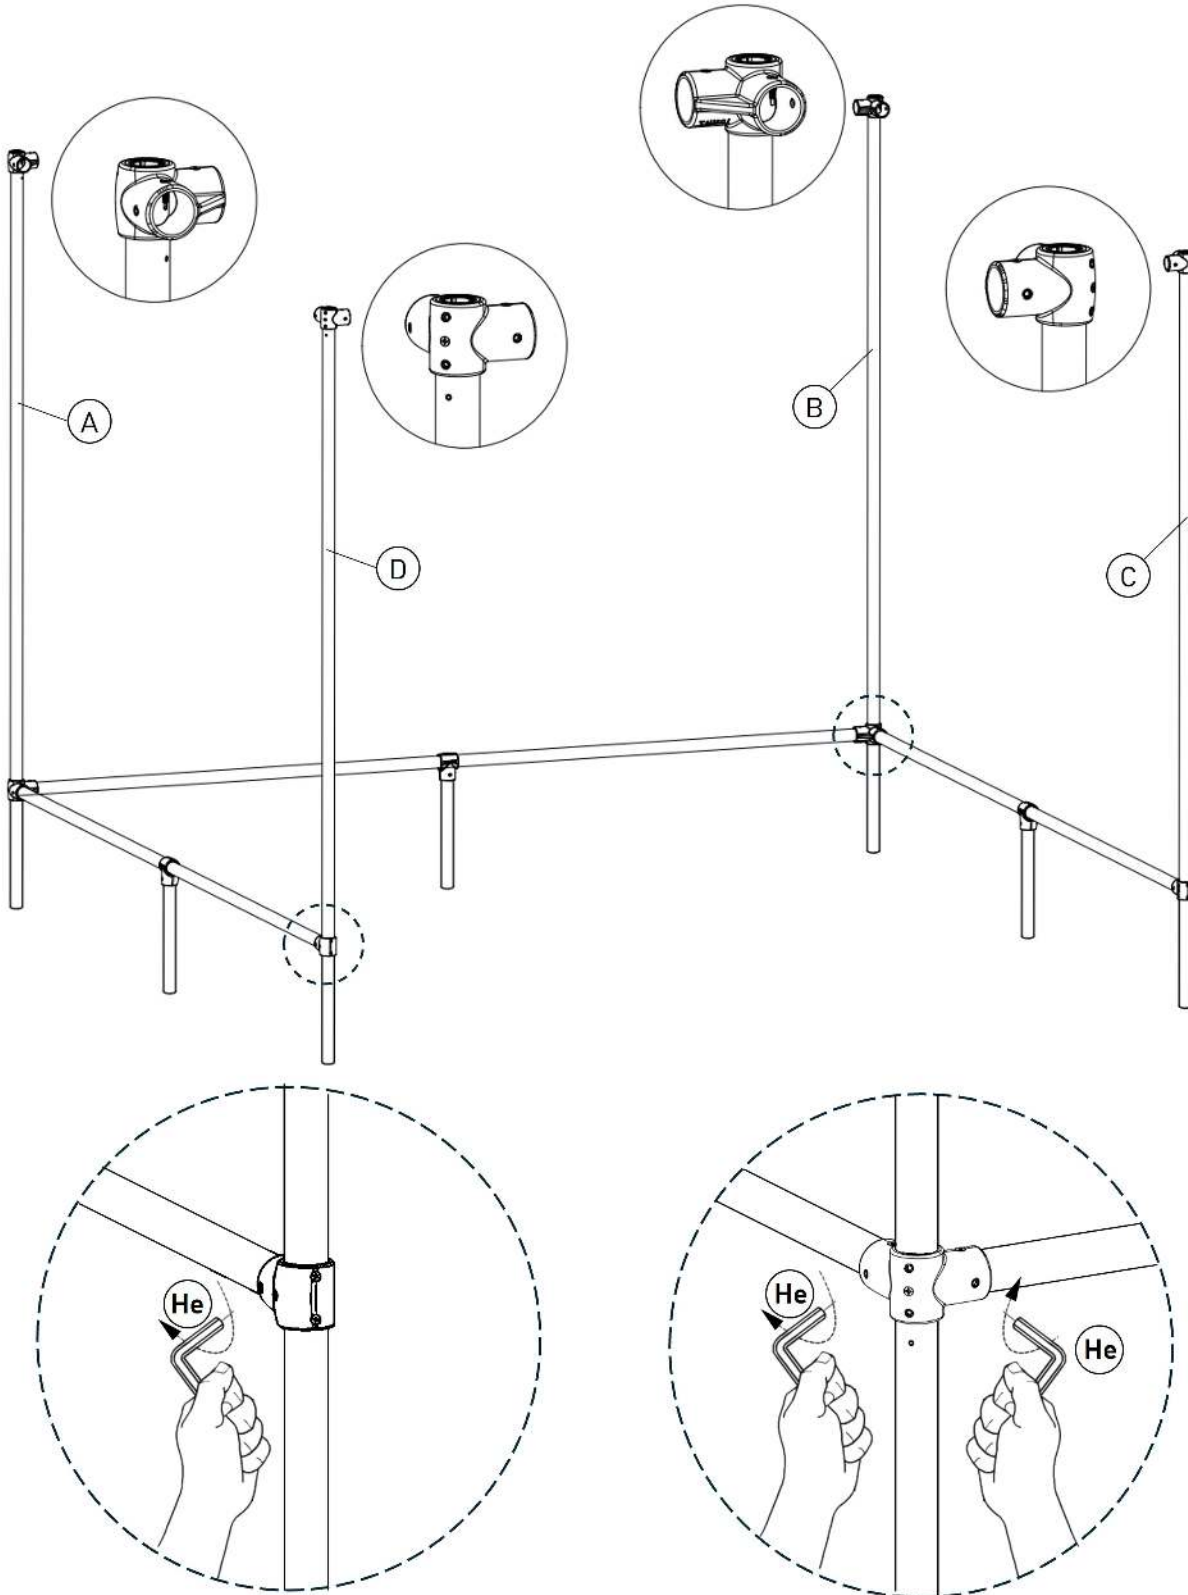


GRAND PACIFIC CABANA

STEP 5

Insert group "A," "B," "C," "D," "G" and "H" to flush mount on floor.




1. Drill holes from flush mount's hole to column "A," "B," "C," "D," and "H."
2. Use hitch pin "Hi" lock from flush mount to column "A," "B," "C," "D," and "H."

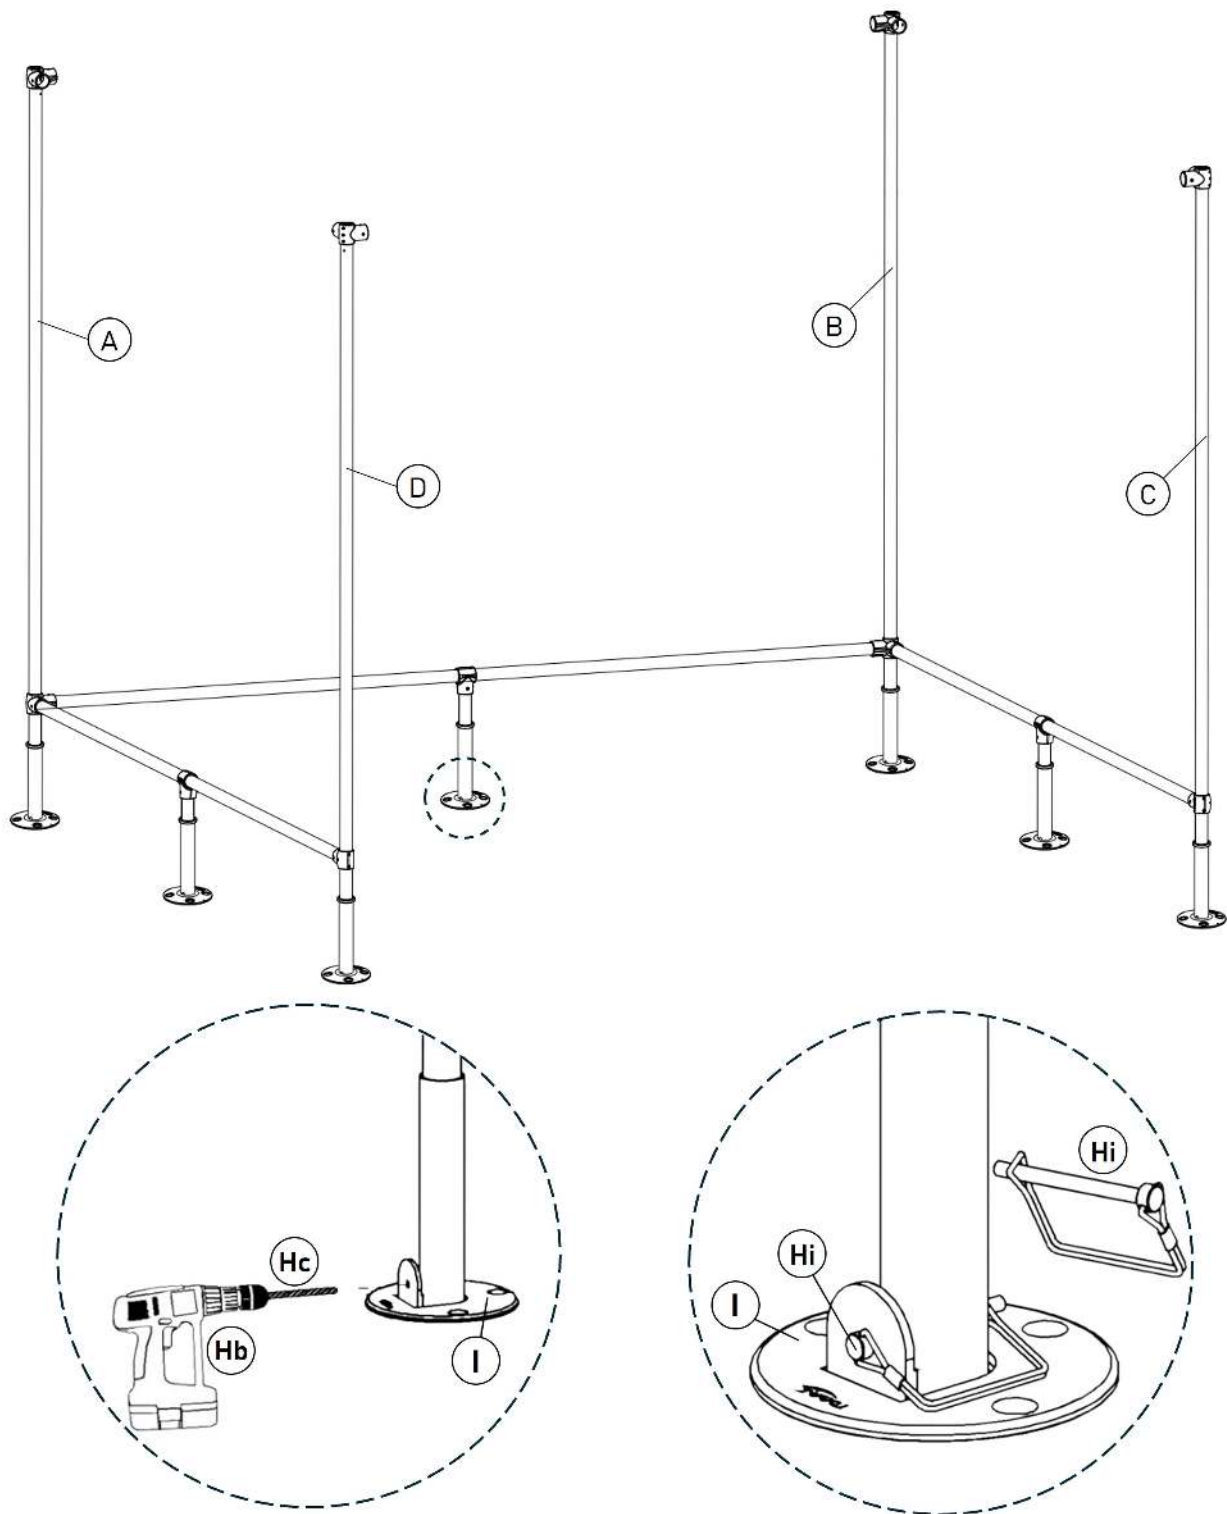

GRAND PACIFIC CABANA

STEP 6


Insert detail "E" to detail "D-A," "A-B," and "B-C." Tighten using the 3/16" allen wrench.

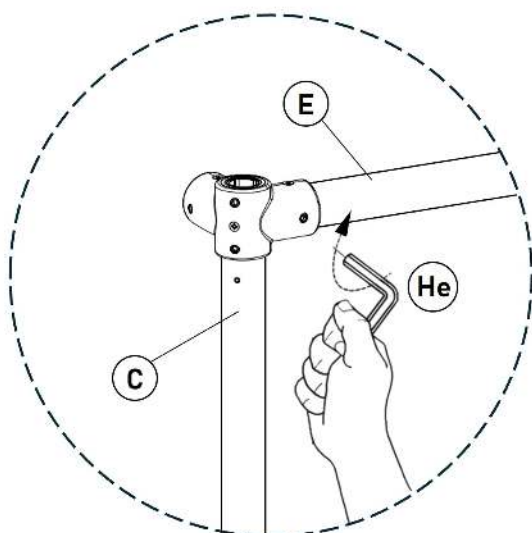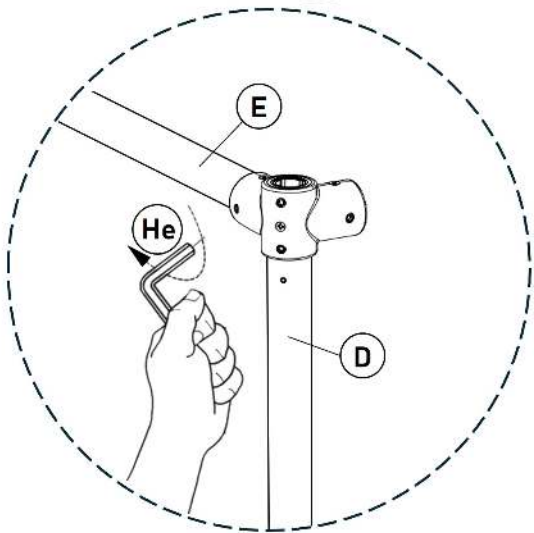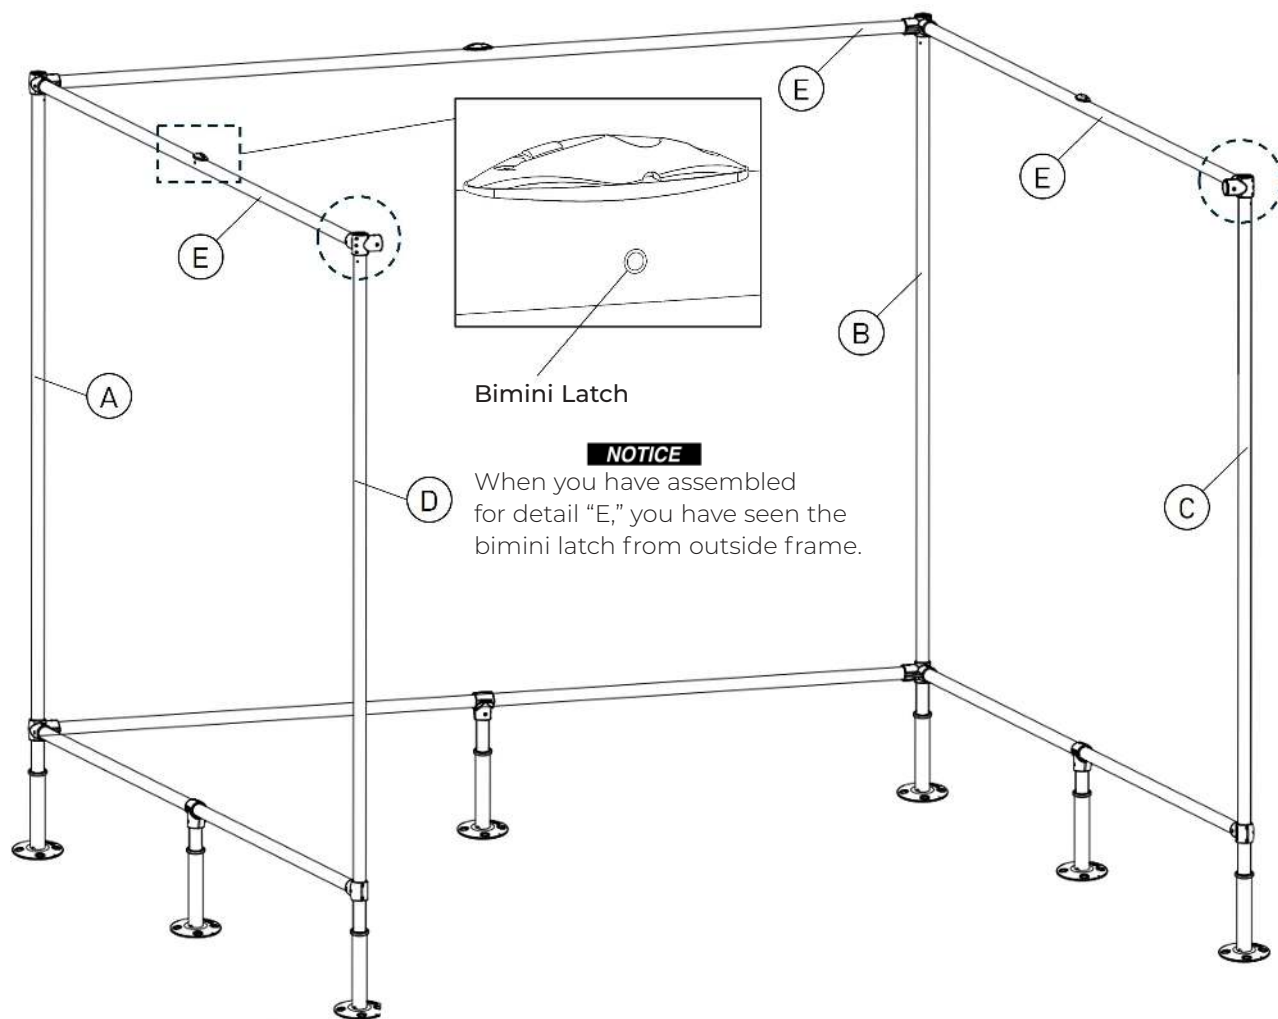

GRAND PACIFIC CABANA

STEP 7




1. Install fabric door "N" and "O" onto front horizontal bar "F" with the included rope.
2. Connect front horizontal bar "F" with fabric door to corner column "C" and "D."

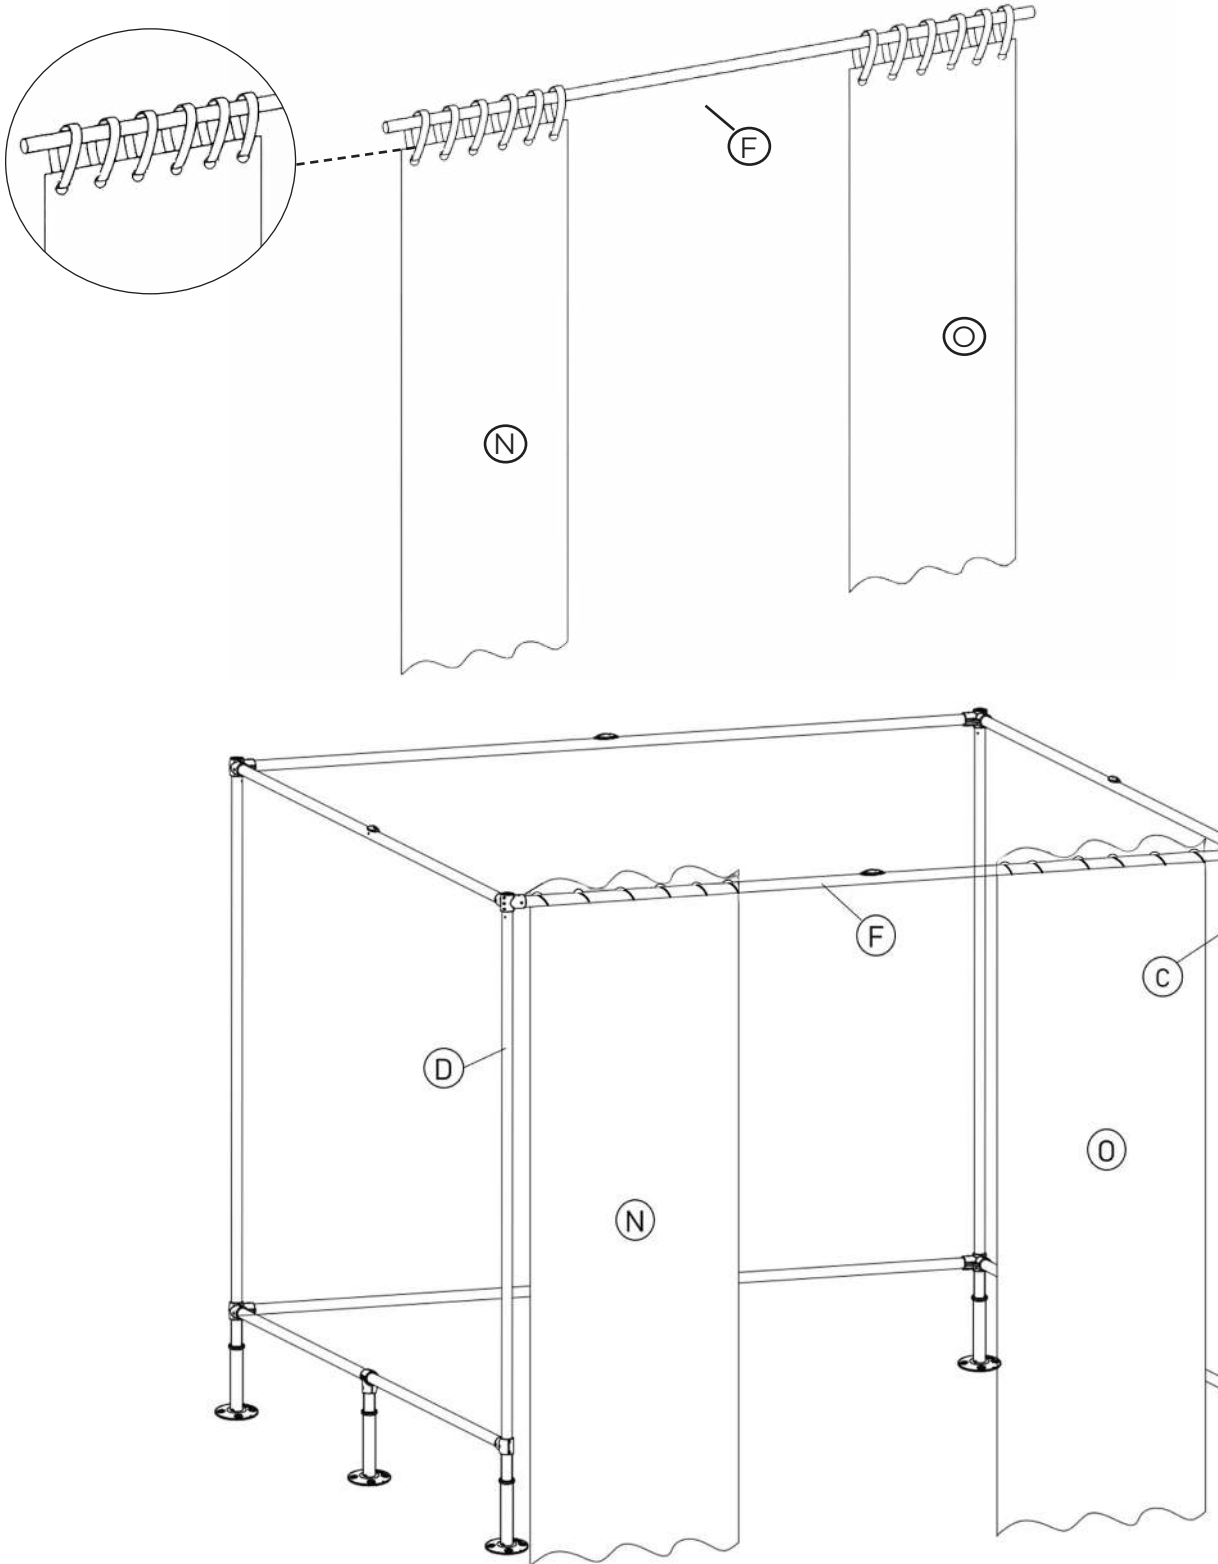

GRAND PACIFIC CABANA

STEP 8




Secure canopy in the open position by raising canopy hub above security pin hole then inserting security pin into hole until fully engaged.

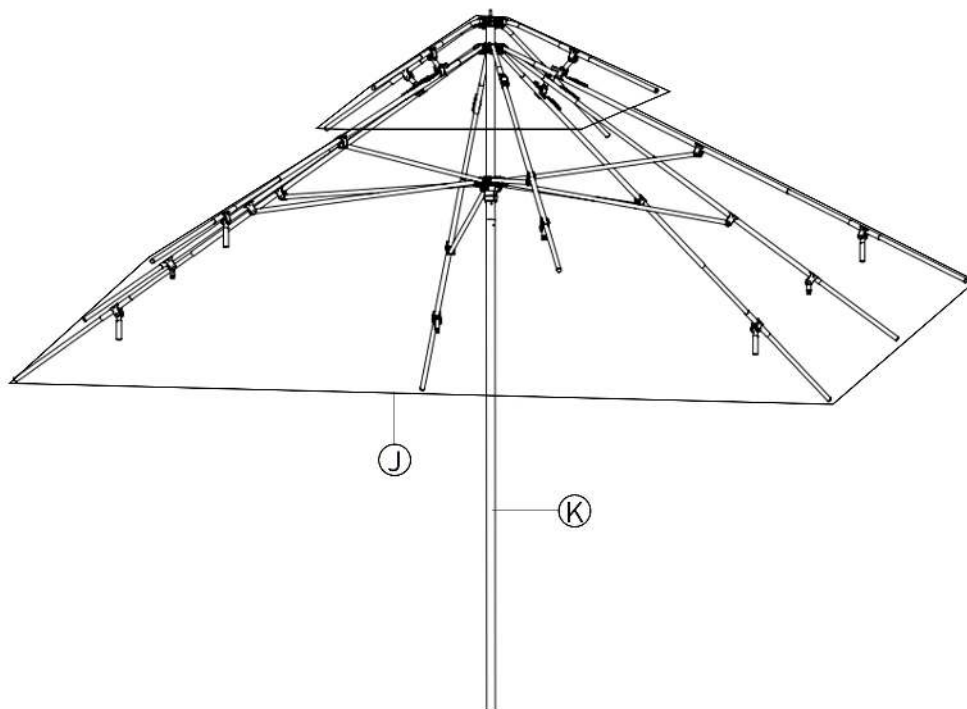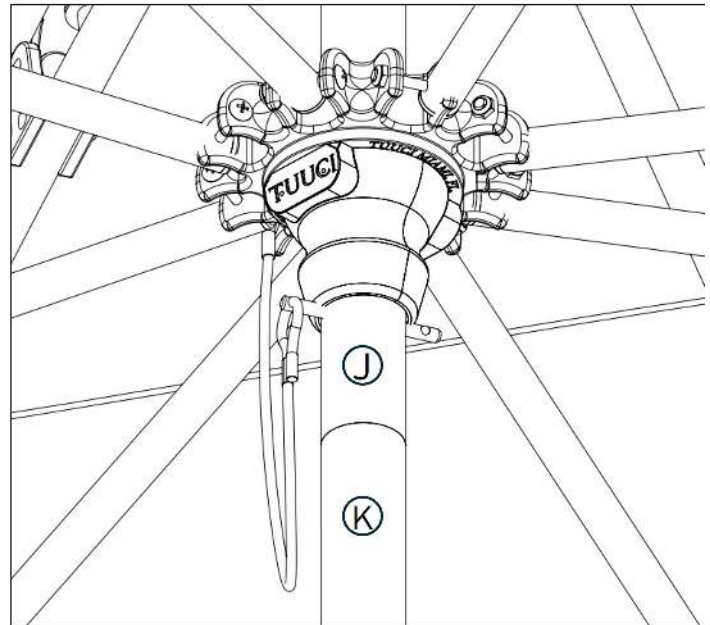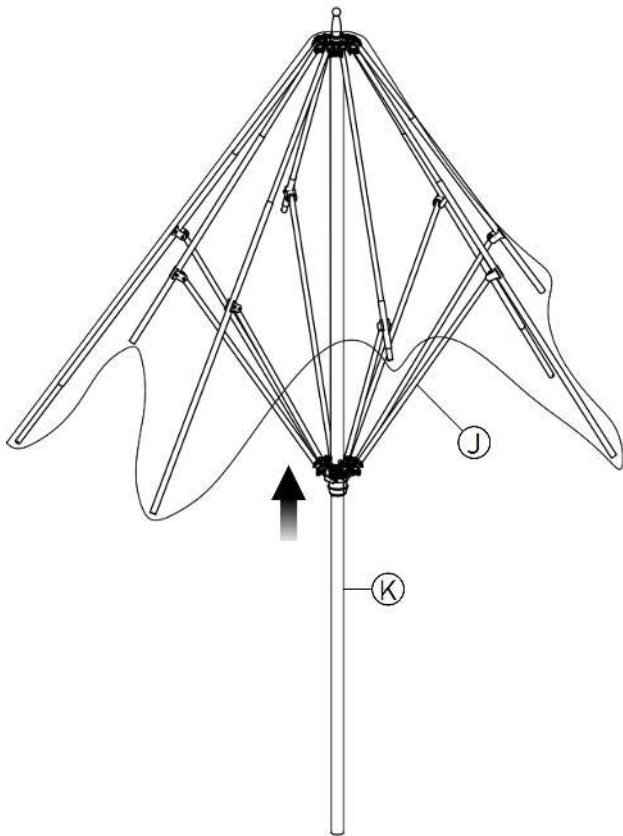

GRAND PACIFIC CABANA

STEP 9

1. Install canopy "J-K" to frame.
2. Remove canopy column "K" by turning it counter-clockwise.

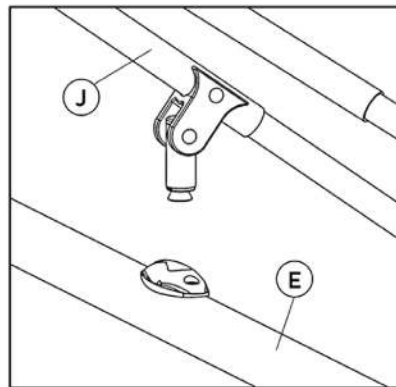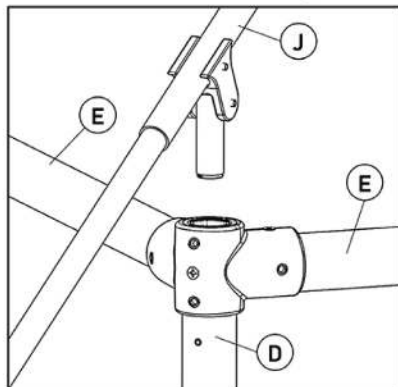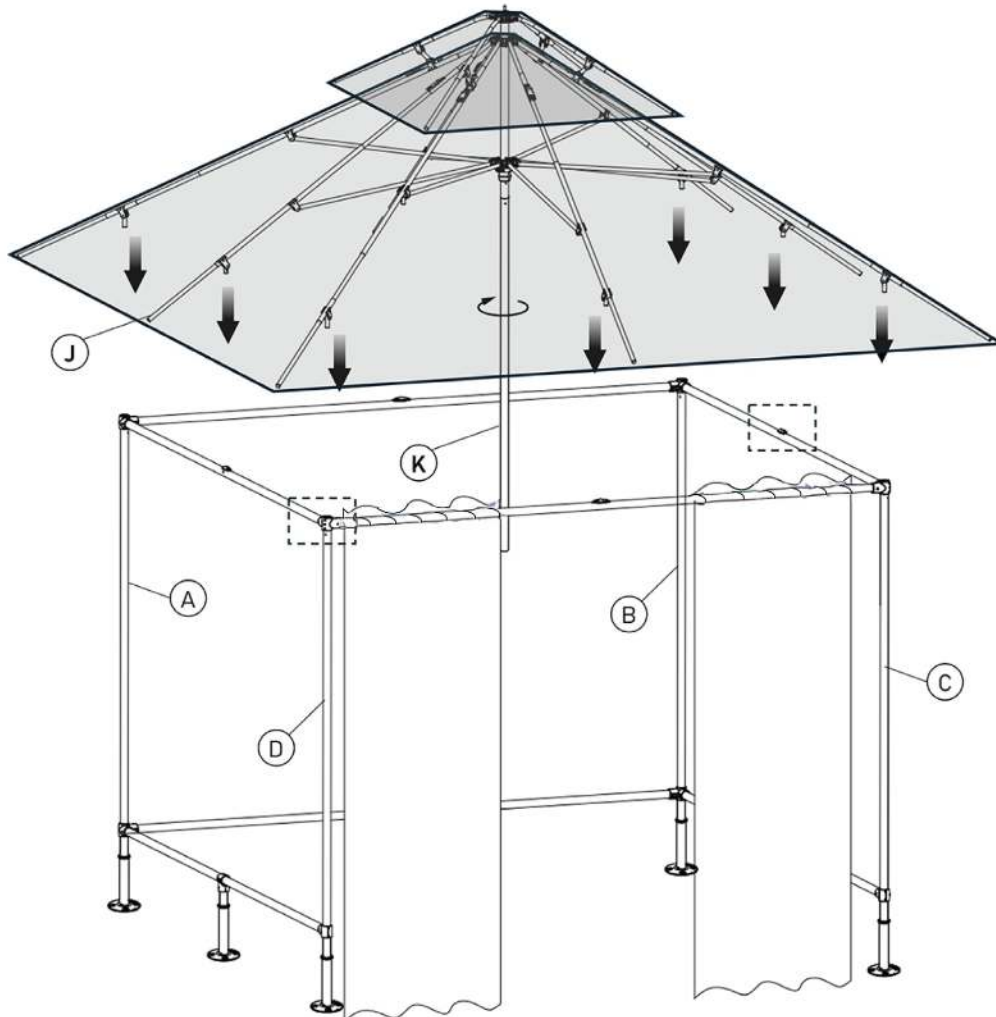

GRAND PACIFIC CABANA

STEP 10

Install fabric wall "P" and valance "Q" to frame using rope "R."

