

INSTALLATION INSTRUCTIONS

CENTER POST NAUTICAL TEAK HARDWOOD
EASYDRIVE™ CRANK LIFT



To protect your product, please read the operating instructions before opening the parasol.


EASYDRIVE™ CRANK LIFT

Step 1

Remove all packaging from in and around parasol.


Step 2

Pull pin from cam lock and lift the handle to unlock.

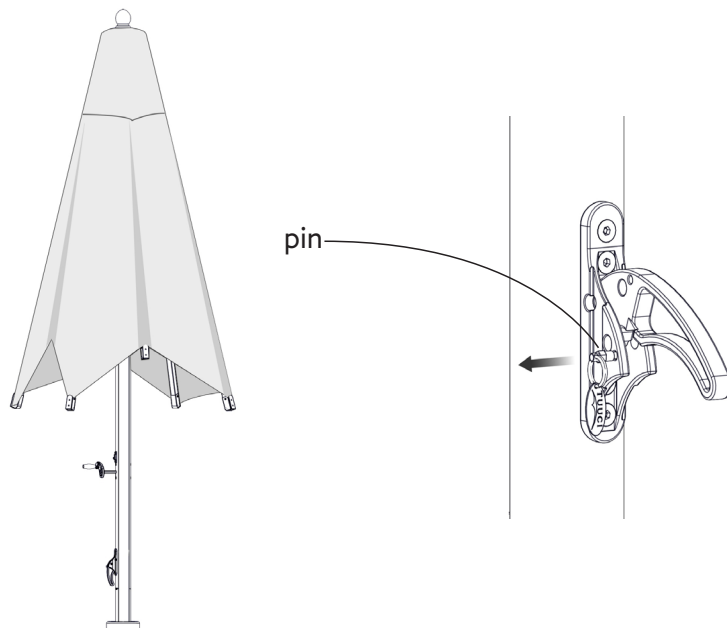


Step 3

Once you have leveled the security stem using the anchor installation instructions, slide the post beauty cover and parasol over the security stem (security stem is included with parasol).

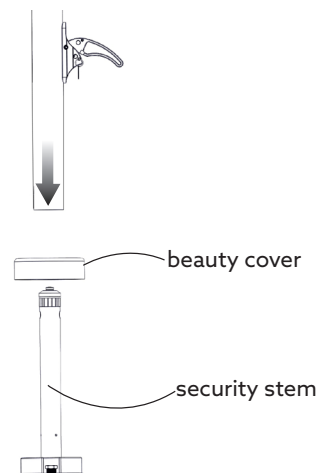

Step 4


Insert crank handle and unlock crank-lock button by moving to up position.

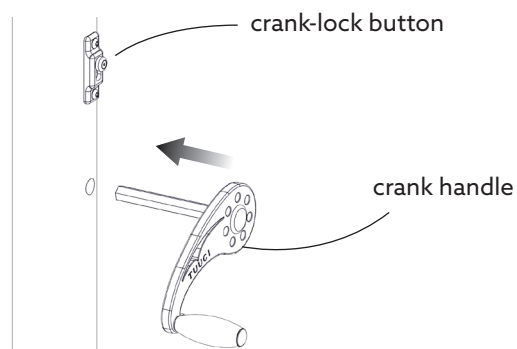

EASYDRIVE™ CRANK LIFT


Step 5

Gently separate each individual rib from the center hub approximately 10 inches. If the rib does not move easily, do not force. Inspect the product for additional packaging.

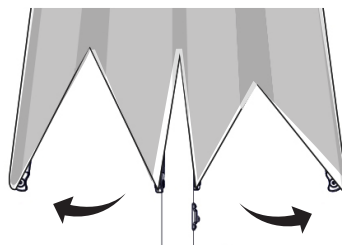

Step 6

Open parasol by turning crank handle clockwise until top telescopic head makes contact with bottom pole.

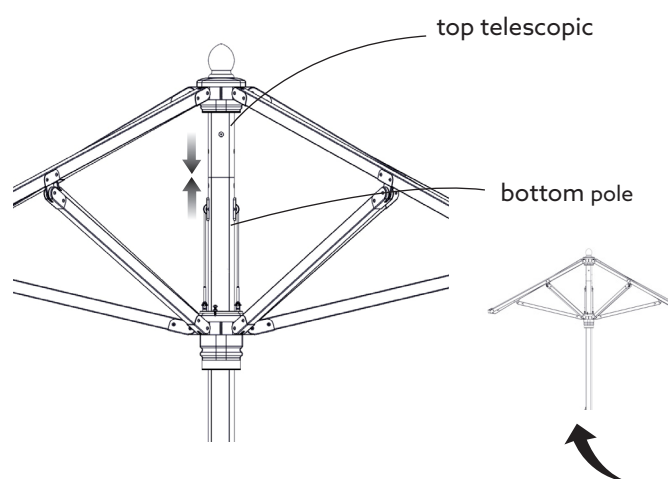

Step 7


Crank lock must be in down position to lock opened parasol.



EASYDRIVE™ CRANK LIFT


Step 1

Crank lock must be in top position to unlock parasol before closing.

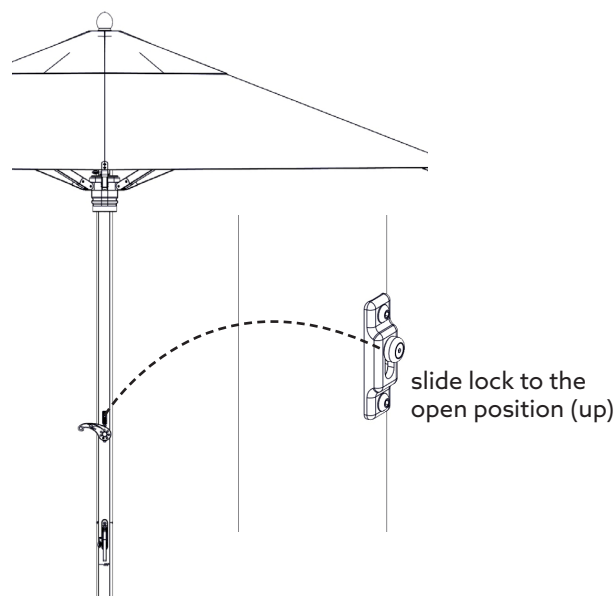

Step 2

Close parasol by turning crank-handle counter-clockwise.

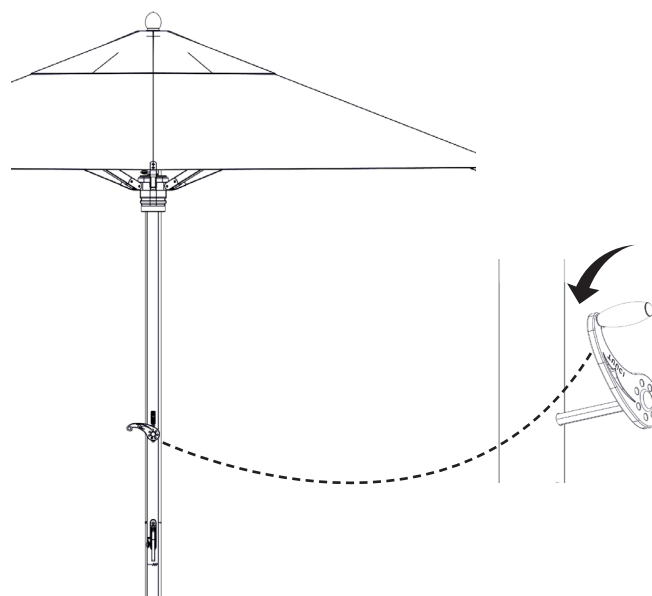

EASYDRIVE™ CRANK LIFT

Step 3

When not in use, the canopy must be carefully folded and secured with the tie-strap.

Note: Close the parasol during wind conditions that exceed manufacturer's specifications.

