

INSTALLATION INSTRUCTIONS

CENTER POST NAUTICAL TEAK HARDWOOD
AUTO-LOC-LIFT



To protect your product, please read the operating instructions before opening the parasol.

AUTO-LOC-LIFT

Step 1

Remove all packaging from in and around parasol.

Step 2



Insert parasol post into anchor and secure with knob by turning clockwise to tighten.

Step 3

Gently separate each individual rib from the center post approximately 10 inches. If the rib does not move easily, do not force. Inspect the product for additional packaging.

Step 4


Gently pull cord downwards to open parasol and secure rope with cam cleat to retain open position.

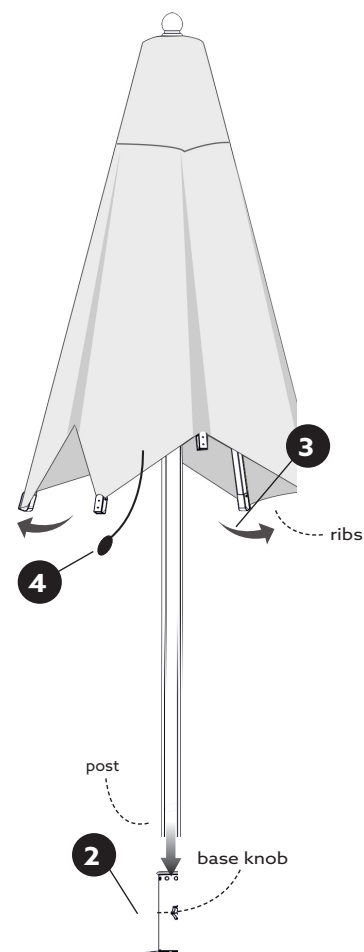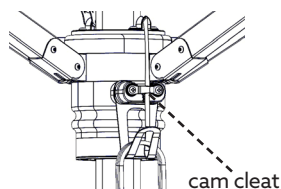

AUTO-LOC-LIFT


Step 5

Hang excess rope onto the pulley hook.

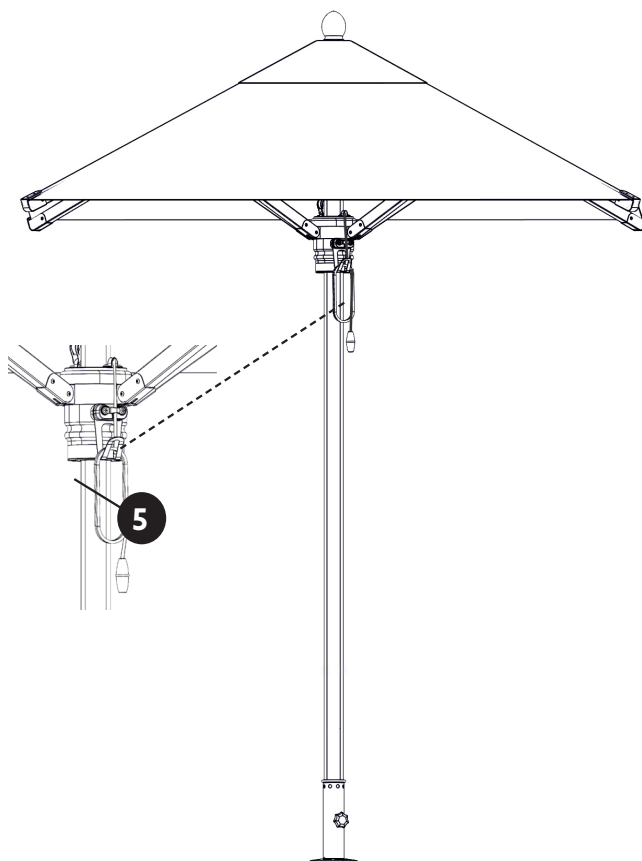

Step 6

When not in use, the canopy must be carefully folded and secured with the tie-strap.

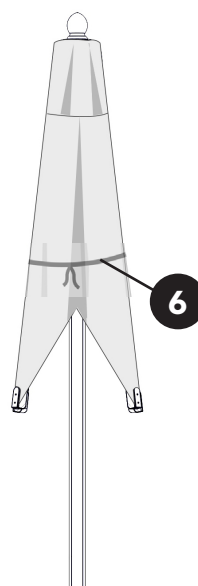

Note:
Close parasol during wind conditions that exceed manufacturer's specifications.