

INSTALLATION INSTRUCTIONS

OCEAN MASTER MAX CENTER POST AMBIATM LED LIGHTS



To protect your product, please read the operating instructions before opening the parasol.


AMBIAT™ LED LIGHTS

Step 1

Remove all packaging from in and around parasol.

Step 2

Pull pin from cam lock and lift the handle to unlock.

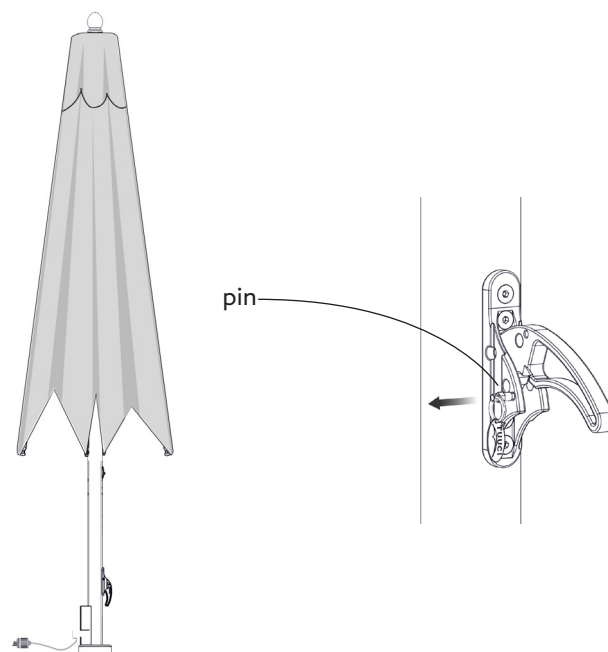


Step 3

Once you have leveled the security stem using the anchor installation instructions, slide the post beauty cover and parasol over the security stem (security stem is included with parasol).


ELECTRICAL CORD

Ensure that electrical cord is not pinched when inserting the parasol over the security stem and when installing the beauty cover.

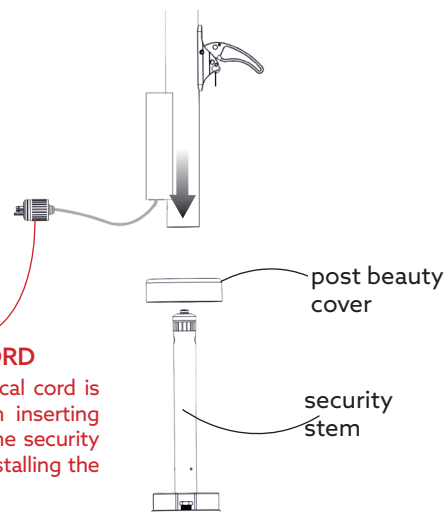

Step 4


Insert crank handle and unlock crank-lock button by moving to up position.

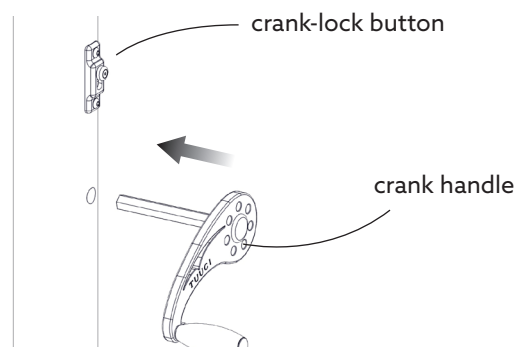

AMBIATM LED LIGHTS


Step 5

Gently separate each individual rib from the center hub approximately 10 inches. If the rib does not move easily, do not force. Inspect the product for additional packaging.

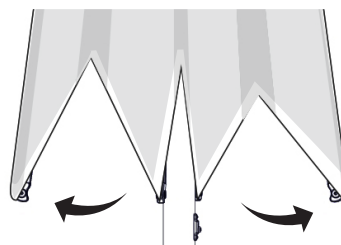


Step 6

Open parasol by turning crank handle clockwise until top telescopic head makes contact with bottom pole.

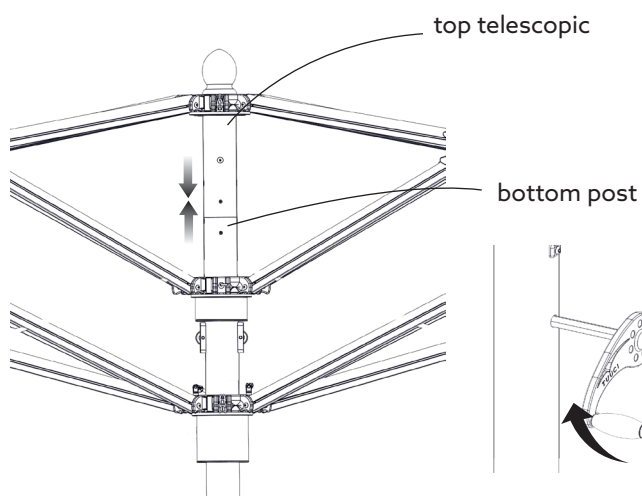

Step 7

Crank lock must be in down position to lock opened parasol.

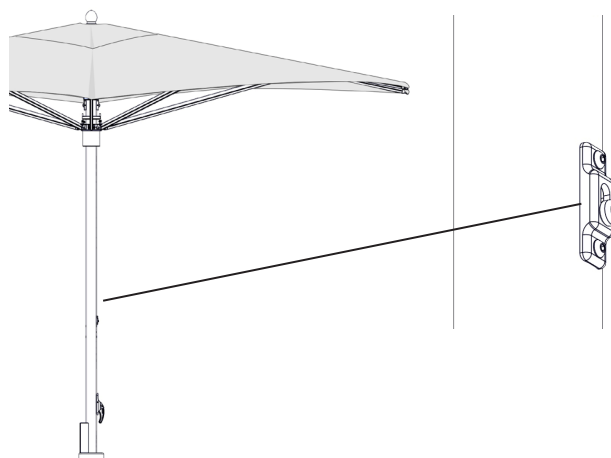

AMBIATM LED LIGHTS



Step 8

To install Ambia light, release tension from the steel wires by slightly cranking parasol counter-clockwise.

Slightly raise lower hub If more slack is needed when mounting Ambia light.

The Ambia light kit is safely stored in a separate packaging box.


Kit includes:
Ambia light
2 screws
Allen key
Bottom light cover

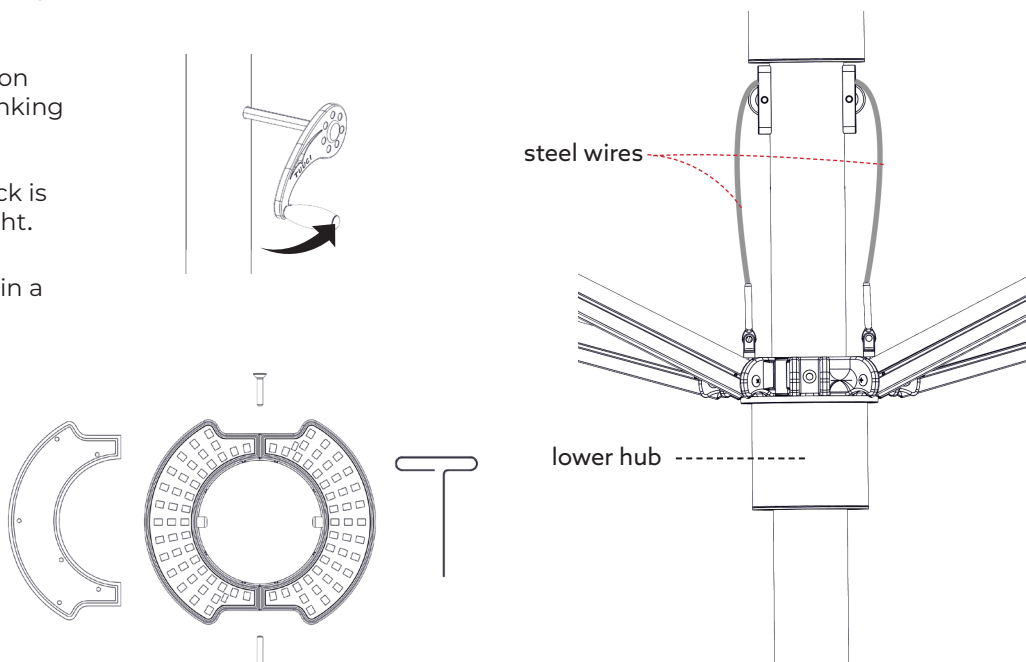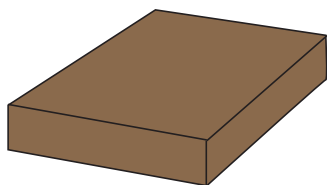

Step 9

Position Ambia light in place by snapping-in the 2 post pin holes and the light fixture pins. See image for details.

Note: The half portion of the light which has no bottom will need to coincide with the cable coming from the post (see image).

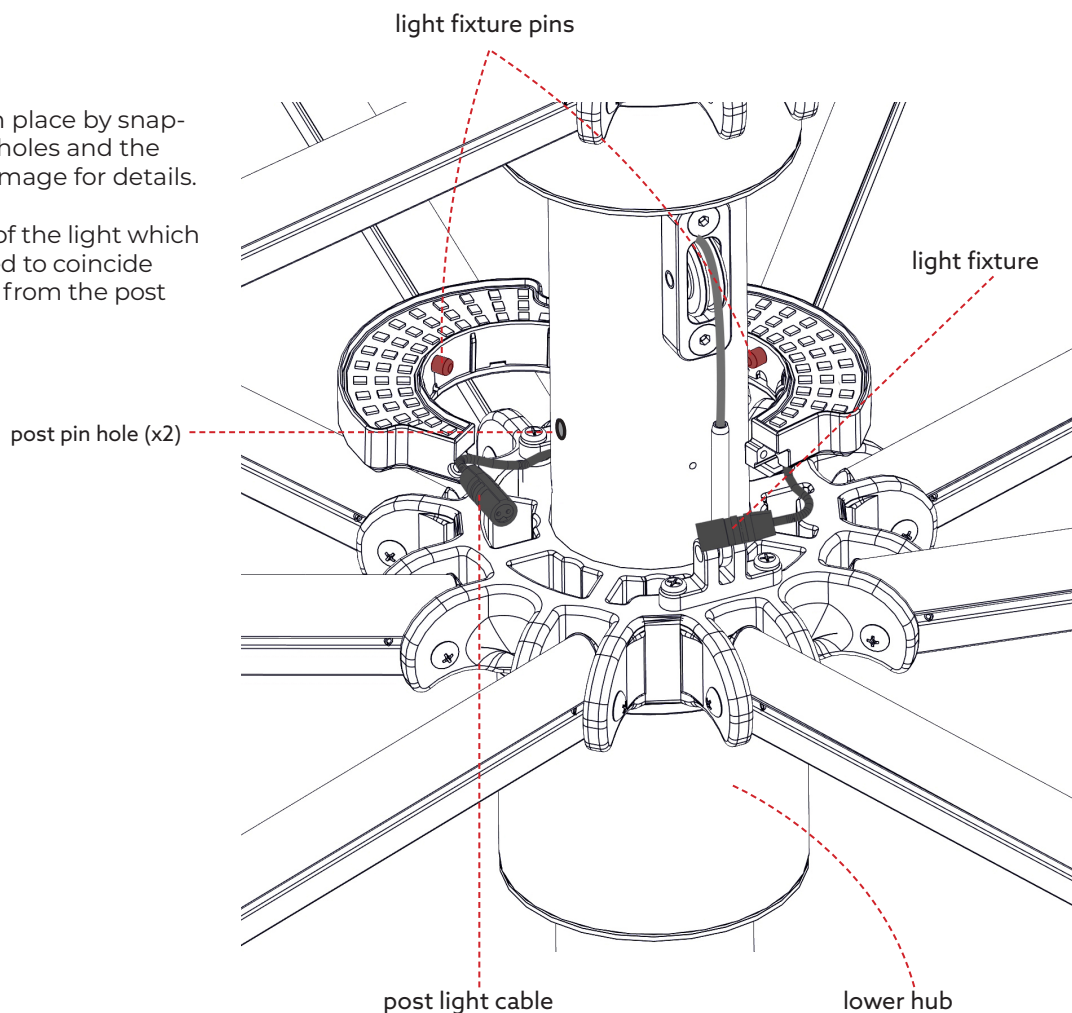


AMBIATM LED LIGHTS

Step 10

Insert screws on both sides.
Do not tighten screws until both screws are in place.
Once both screws are place, tighten with provided Allen key.


screws

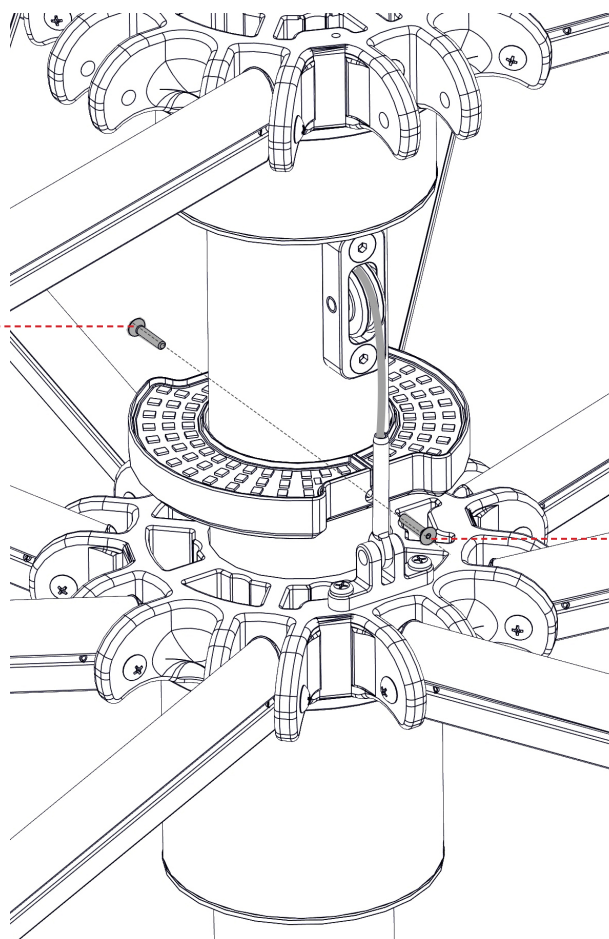

screws

Step 11


Connect light cables.

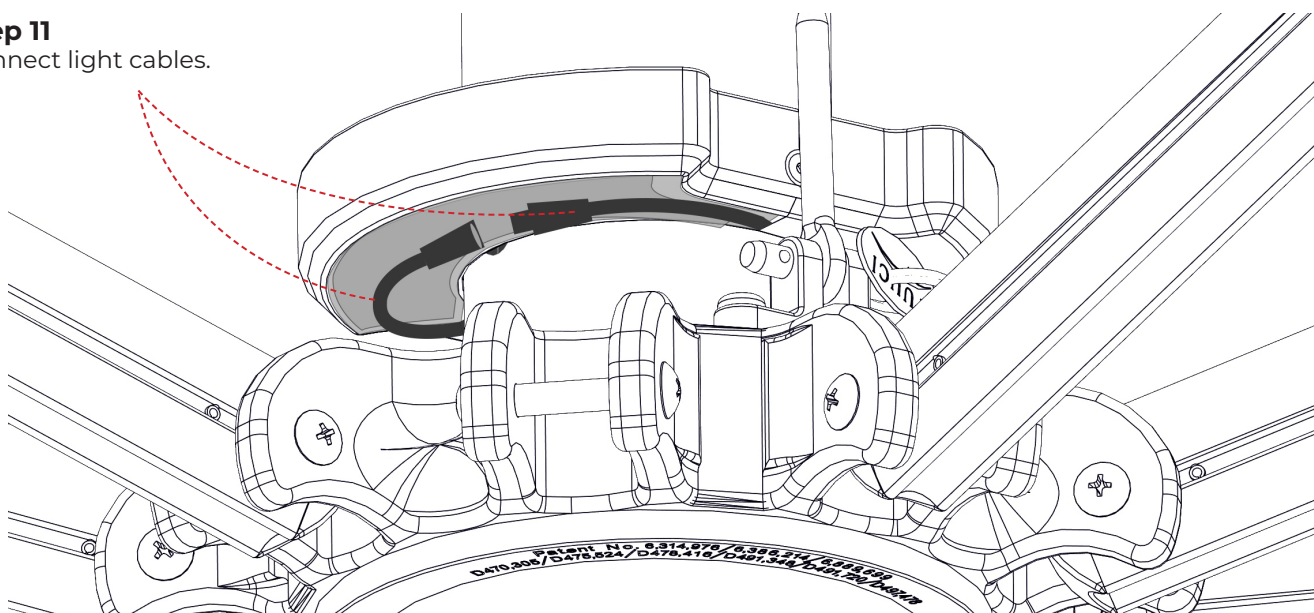

AMBIATM LED LIGHTS

Step 12

Install/snap-in place bottom light.

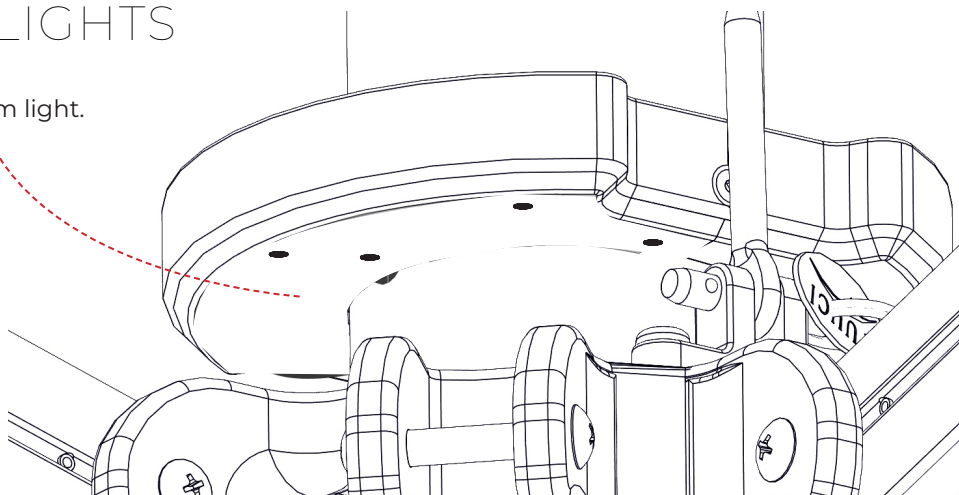


Step 13

Connect the electrical cord to an outlet.

Step 14

Confirm the Ambia light works by pressing the power button located on power supply cover.

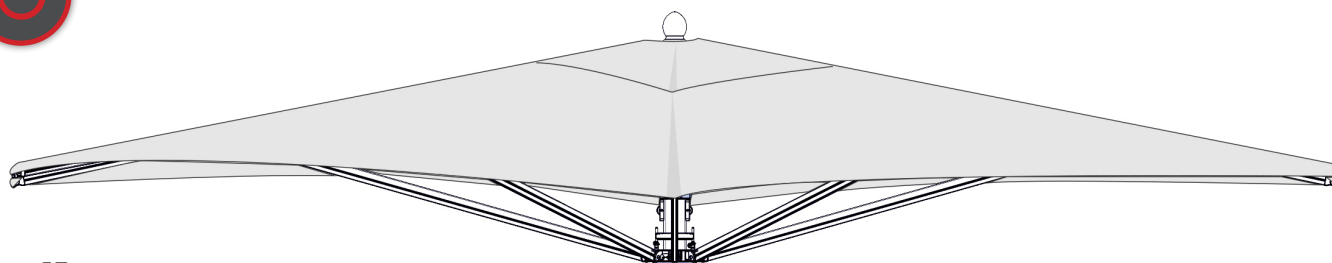

Step 15


When not in use, the canopy must be carefully folded and secured with the tie-strap.

Note:

Close parasol during wind conditions that exceed manufacturer's specifications.



power button

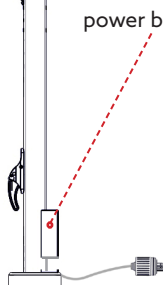

Power Supply:	
Input Voltage	90 - 305VAC
Input Current	0.6A / 115VAC 0.3A / 230VAC
Output Voltage	12 VDC
Output Power	40 Watts