


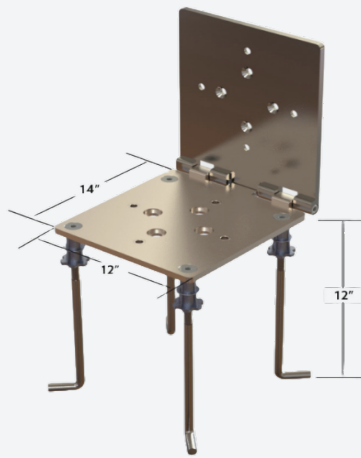

INSTALLATION INSTRUCTIONS FOR NEW POUR CONCRETE

MEGA MAX STAINLESS STEEL HINGED SURFACE ANCHOR

ANCHOR TYPE: 5/8" L HOOK

CONCRETE TYPE: 4000 PSI reinforced with number 5 rebar, spaced 12" on center, on both the top and bottom faces, and oriented in both the longitudinal and transverse directions.


WIND LOAD: Moderate wind of 45mph & high wind of 75mph



TO PROTECT YOUR PRODUCT, PLEASE READ THE OPERATING INSTRUCTIONS BEFORE OPENING THE PARASOL.


Step 1.

Determine the location of the Stainless Steel Hinged Surface Anchor.

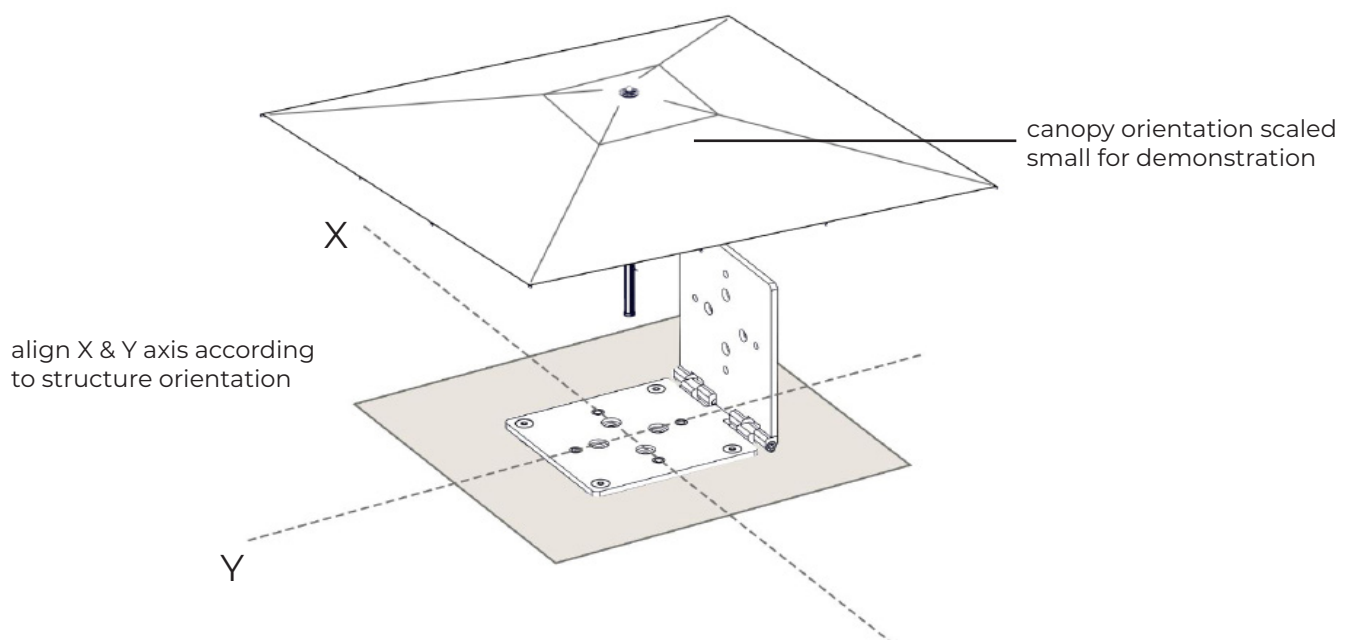

MEGA MAX STAINLESS STEEL HINGED SURFACE ANCHOR

STEP 2: HOW TO ASSEMBLE ANCHORS TO HINGE BASE

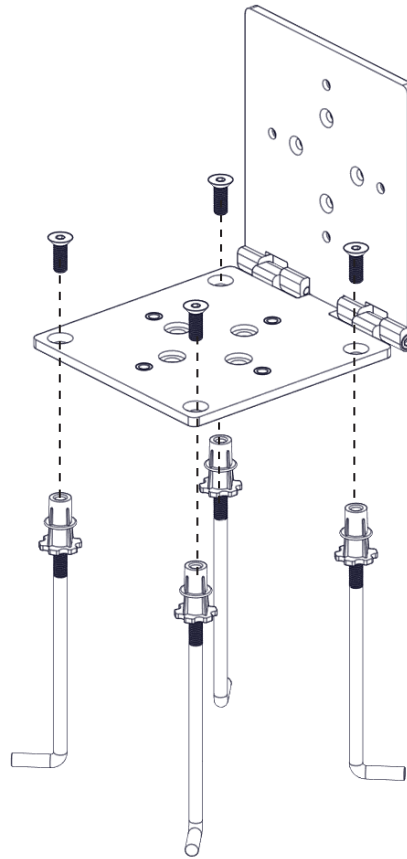


STEP 3: INSTALLATION OPTIONS.


RECOMMENDATION:
COVER HINGE BASE HOLES, HINGE AND TOP PLATE WITH PAINTERS TAPE TO PROTECT FROM CONCRETE.

NOTICE

MAXIMUM WIND LOAD: UP TO 45 MPH

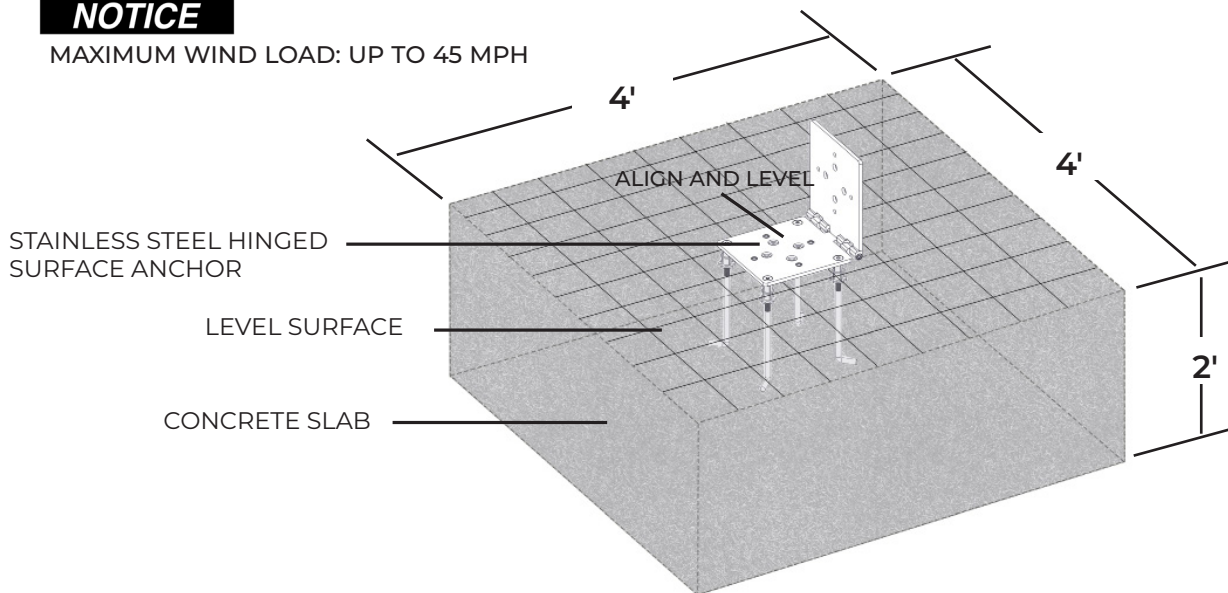

MEGA MAX STAINLESS STEEL HINGED SURFACE ANCHOR

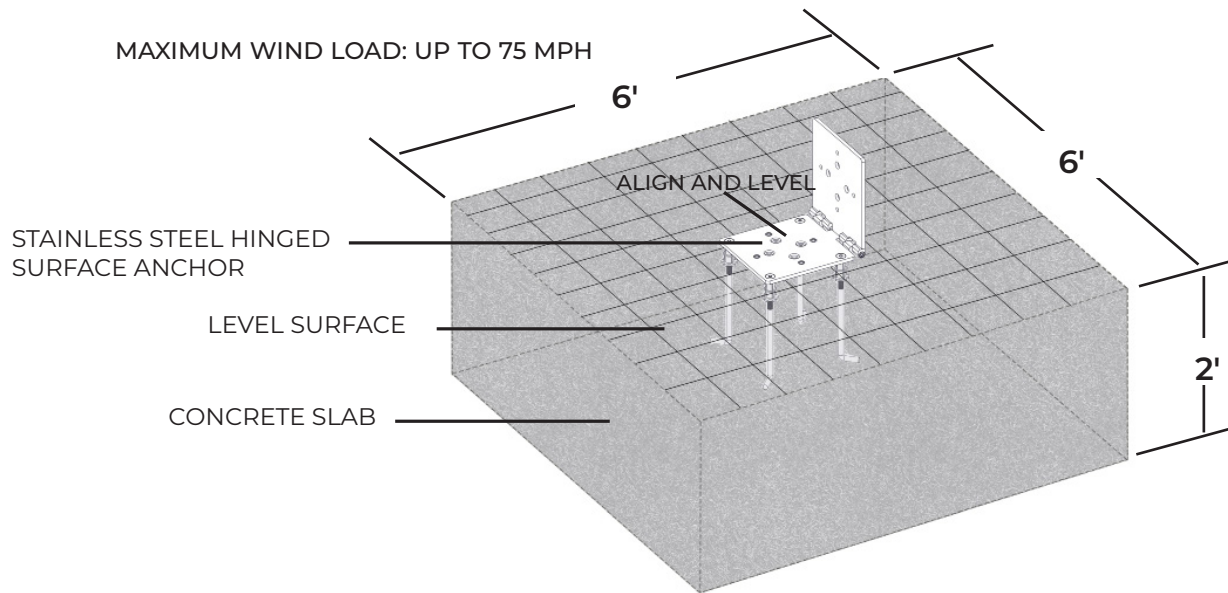

NOTICE BOTTOM OF HINGE BASE TO BE FLUSH WITH TOP OF CONCRETE SLAB

