

INSTALLATION INSTRUCTIONS

OCEAN MASTER M1 CANTILEVER



TO PROTECT YOUR PRODUCT, PLEASE READ THE OPERATING INSTRUCTIONS BEFORE OPENING THE PARASOL.


OCEAN MASTER M1 CANTILEVER

STEP 1

REMOVE ALL PACKAGING FROM IN AND AROUND THE PARASOL.


STEP 2

PULL PIN FROM CAM LOCK AND LIFT THE HANDLE TO UNLOCK.

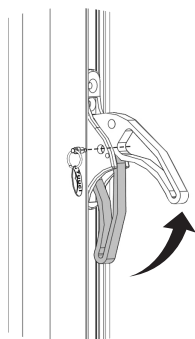

STEP 3


ONCE YOU HAVE LEVELED THE STEM USING THE ANCHOR INSTALLATION INSTRUCTIONS, SLIDE THE BEAUTY COVER AND PARASOL OVER THE SECURITY STEM (SECURITY STEM IS INCLUDED WITH PARASOL).

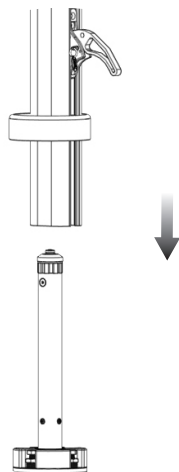

OCEAN MASTER M1 CANTILEVER



STEP 4

LOCK PARASOL DOWN BY PUSHING THE CAM LOCK HANDLE IN THE DOWN POSITION AND REINSERT THE PIN.

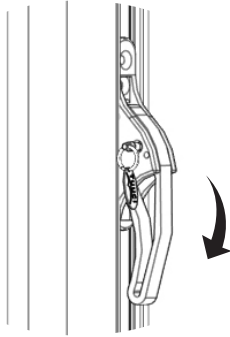

STEP 5

GENTLY SEPARATE EACH INDIVIDUAL RIB FROM THE CENTER HUB APPROX. 10 INCHES. IF RIB DOES NOT MOVE EASILY, DO NOT FORCE. INSPECT PRODUCT FOR ADDITIONAL PACKAGING.

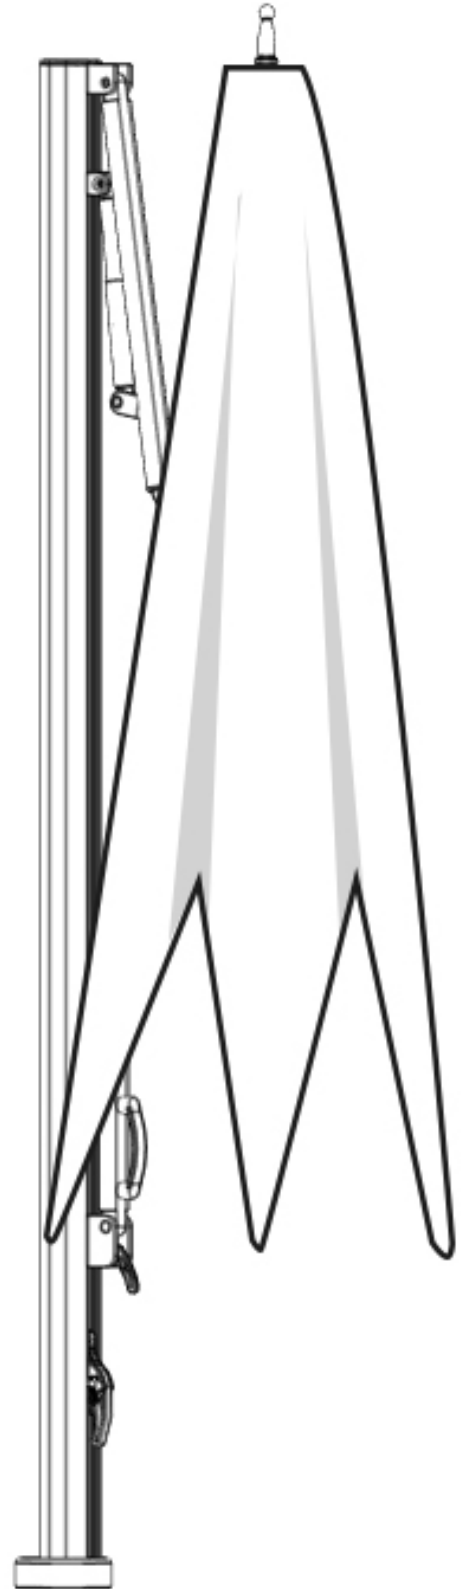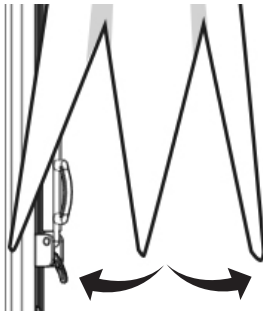

OPENING AND CLOSING THE PARASOL

Opening the parasol

STEP 1


UNLOCK CART LOCK BY PUSHING UP.

STEP 2

SLIDE CART HANDLE UP UNTIL IT SNAPS INTO THE LOCKING POSITION.

STEP 3

LOCK CANOPY IN THE OPEN POSITION BY PUSHING DOWN ON THE CART LOCK.

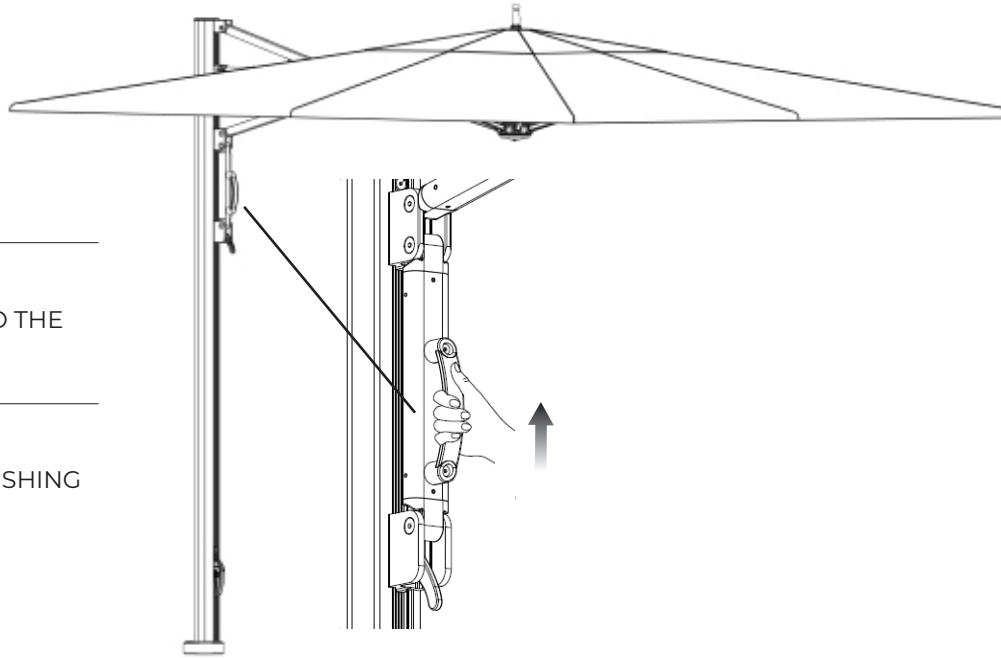

Closing the parasol

STEP 1

UNLOCK CART LOCK BY PUSHING UP.

STEP 2


SLIDE CART HANDLE DOWN TO CLOSE THE CANOPY.

STEP 3

LOCK CANOPY IN THE CLOSE POSITION BY PUSHING DOWN ON THE CART LOCK.

STEP 4

CLOSE PARASOL WITH TIE BACK WHEN NOT IN USE.

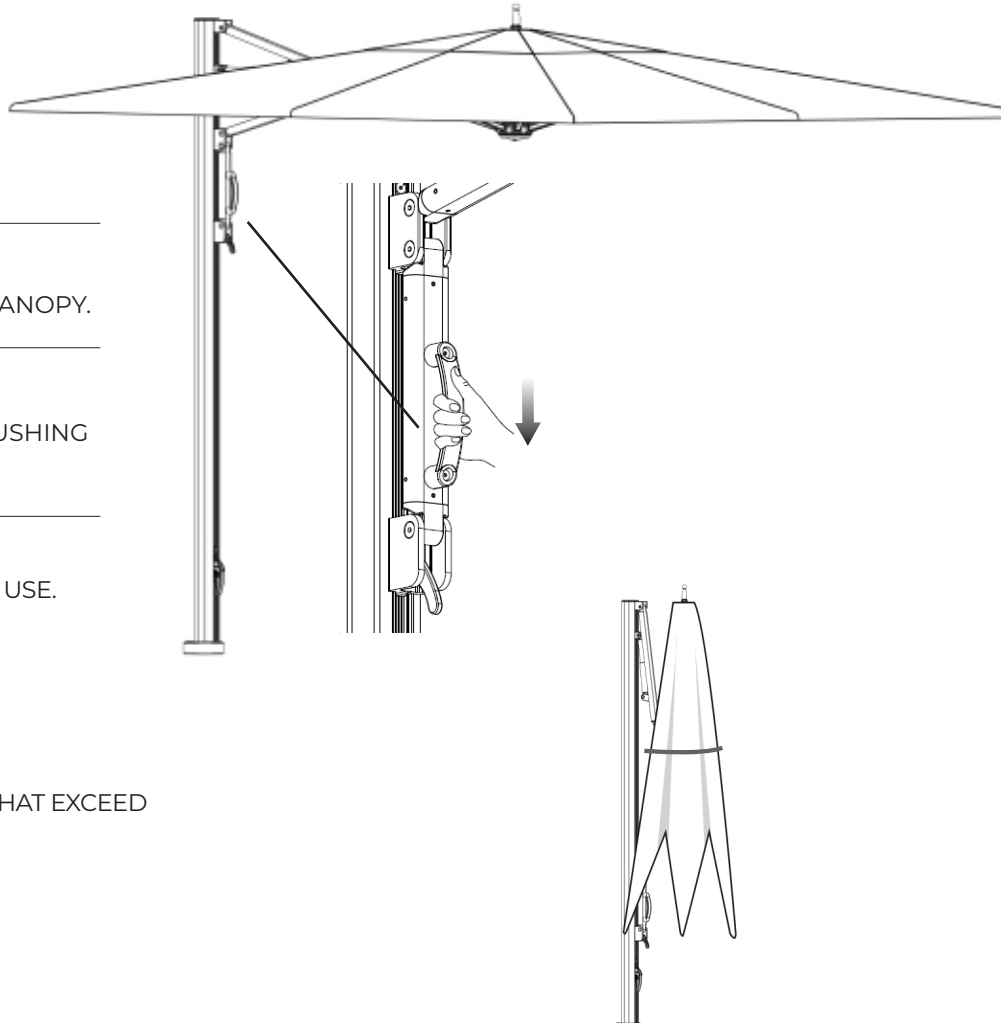

NOTE:

CLOSE PARASOL DURING WIND CONDITIONS THAT EXCEED MANUFACTURER'S SPECIFICATIONS.