

INSTALLATION INSTRUCTIONS

OCEAN MASTER M1 CANTILEVER EASYDRIVE™ CRANK



To protect your product, please read the operating instructions before opening the parasol.


EASYDRIVE™ CRANK

Step 1

Remove all packaging from in and around parasol.


Step 2

Pull pin to unlock cam lock handle. Open the cam lock handle.

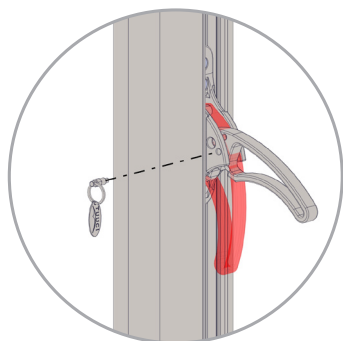



Step 3

Once you have leveled the stem using the anchor installation instructions, slide the beauty cover and parasol over the security stem as pictured. Security stem is included with parasol.

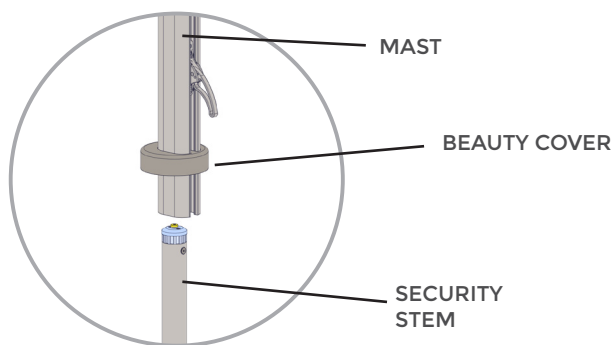

Step 4


To lock the mast push cam lock handle (per drawing shown) until engaged in the proper gear slot with the cam lock handle in the downward position.

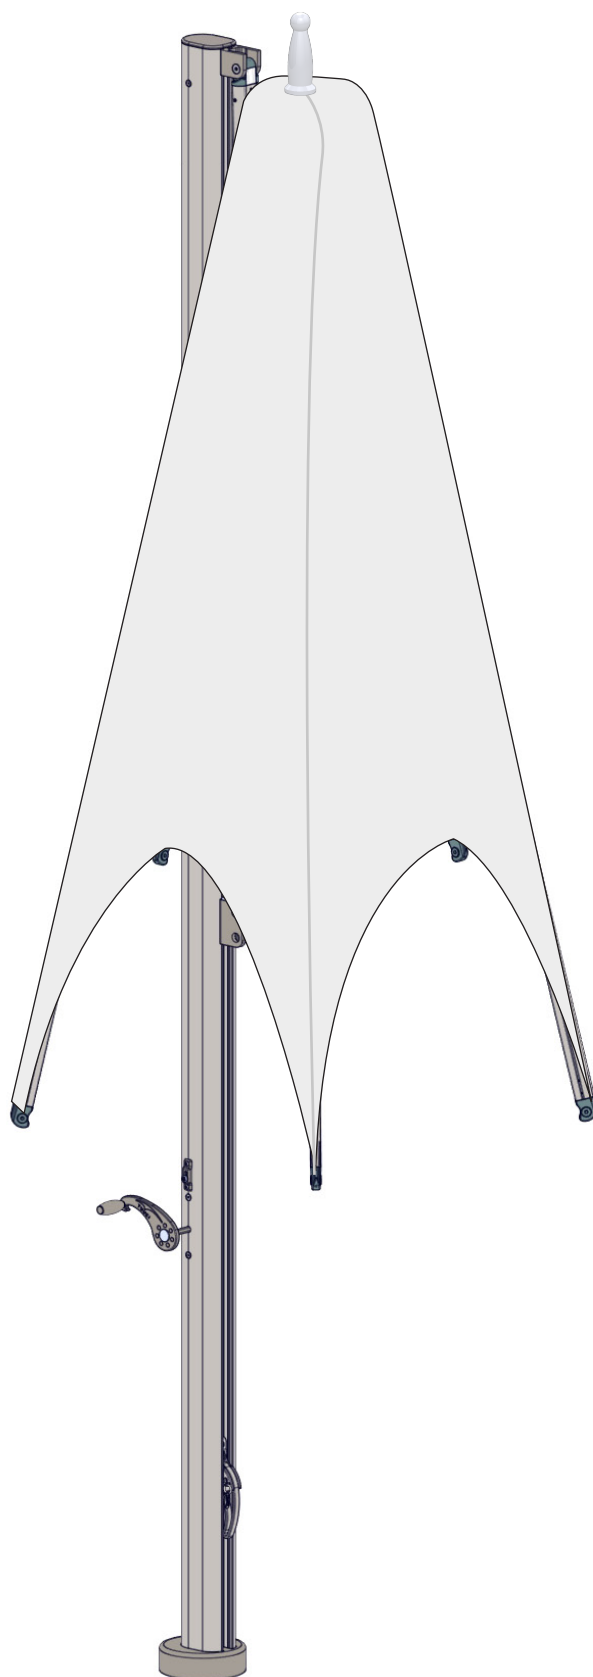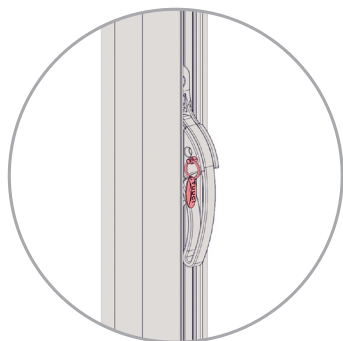

EASYDRIVE™ CRANK


Step 5

Gently extend each rib outward from the center to a distance of 10 inches. If you encounter resistance, check the parasol for any leftover packaging that may need to be removed.

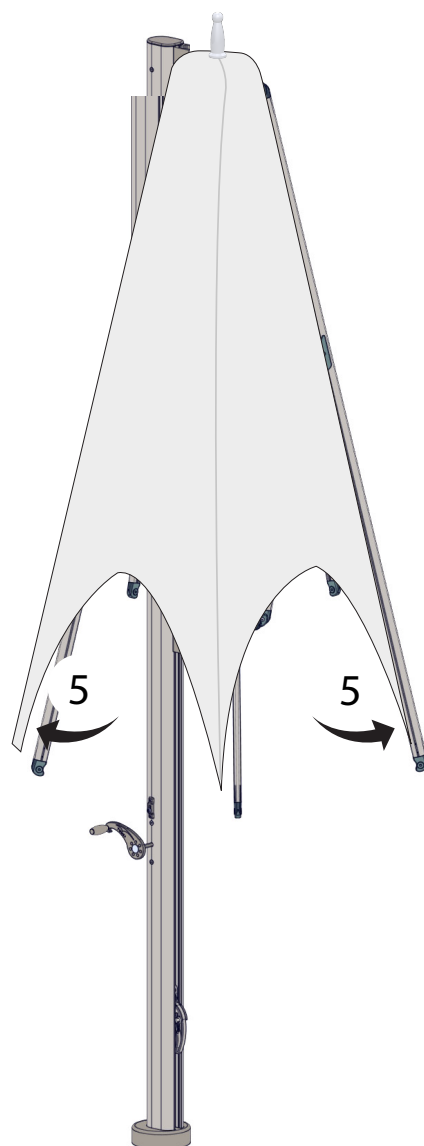

Step 6

Set the mast lock in the open/up position.

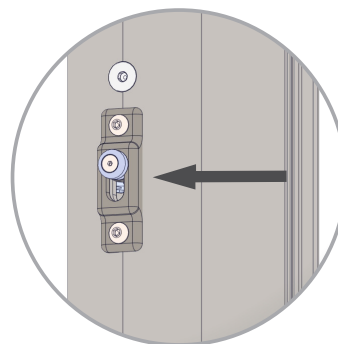

EASYDRIVE™ CRANK


Step 7

Insert the crank handle and turn clockwise to open the parasol. The parasol is fully engaged when the auto-scope meets the mast as shown below.




Step 8

Once fully open, set the mast lock in the down/locked position and remove the crank handle when not in use.

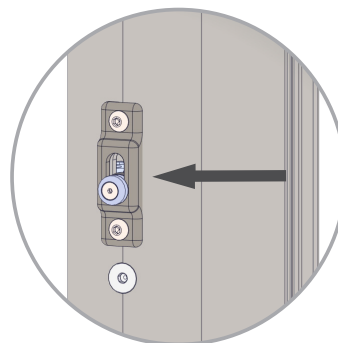

Step 9

To close the parasol, reverse steps 6-8. When not in use, the canopy should be in closed position, carefully folded and secure with the tie-strap.

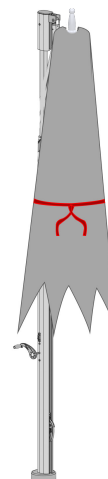

Note:

TUUCI recommends that all collapsible shade equipment be closed in wind conditions which exceed 25 MPH.