
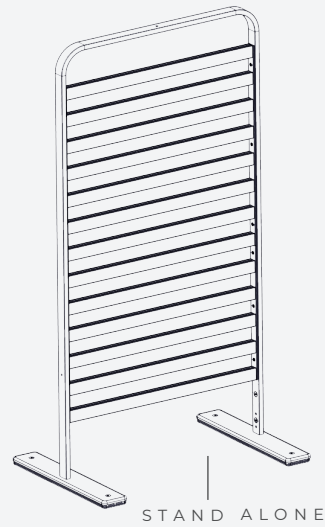
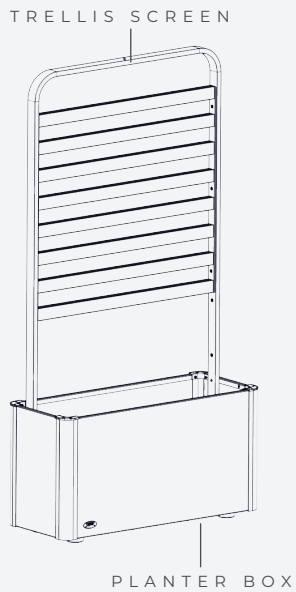





INSTALLATION INSTRUCTIONS

PLANTER TRELLIS SCREEN 36"


HARDWARE AND PARTS INCLUDED (IMAGES ARE NOT 1:1 SCALE)

	DESCRIPTION	QTY	PART IMAGE
a	36" Trellis Screen	1	
b	Frame Bracket	2	
c	T25 Torx Wrench	1	
d	T30 Torx Wrench	1	

	DESCRIPTION	QTY	PART IMAGE
e	8mm Wrench	1	
f	M5-.8, 12MM Screws	4	
	M6-1, 12MM Screws	4	
	M5-.8, 30MM Screws	2	
g	M5-.8 MM Hex Nut	4	

Note: assembling of planter box

For Mainland refer to instructions #1010147

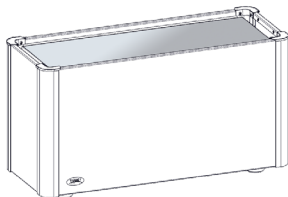

For Highland refer to instructions #1010148




INSTALLATION INSTRUCTIONS


PLANTER TRELLIS SCREEN 36"

TRELLIS (FOR PLANTER BOX)

Step 1.
Install frame bracket on both sides
using provided T25 Torx wrench & 8mm wrench.

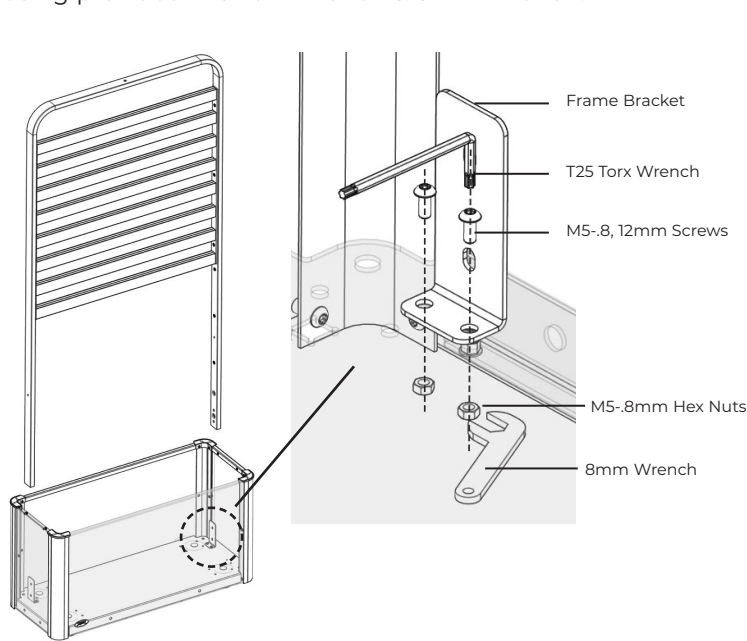

Step 2.
Install trellis screen arm on both sides.

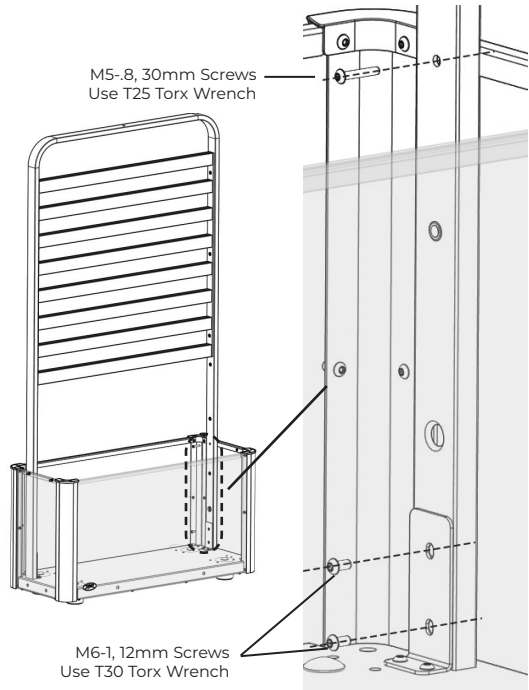

FREESTANDING TRELLIS SCREEN 36"

HARDWARE AND PARTS INCLUDED (IMAGES ARE NOT 1:1 SCALE)

	DESCRIPTION	QTY	PART IMAGE
h	36" Trellis Screen	1	
i	Base	2	

	DESCRIPTION	QTY	PART IMAGE
j	7/32 Hex Key	1	
k	3/8-16, .5 L, HEX	4	

FREESTANDING TRELLIS SCREEN 36"

Install trellis screen on both bases
using provided 7/32 hex key.

