



TRELLIS SCREEN

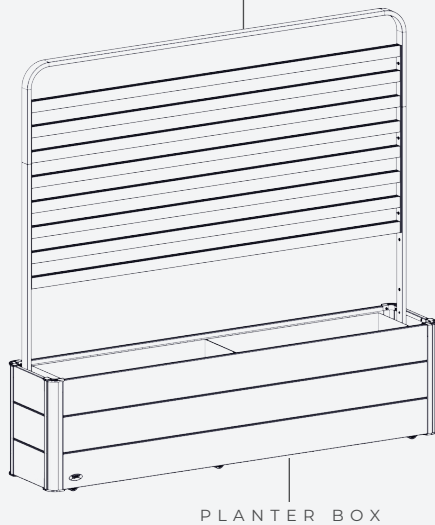

PLANTER BOX

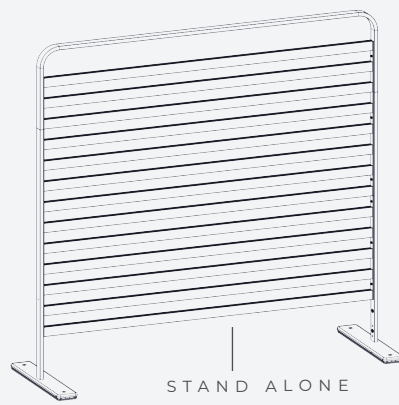


STAND ALONE



INSTALLATION INSTRUCTIONS

PLANTER BOX TRELLIS SCREEN 72"

HARDWARE AND PARTS INCLUDED (IMAGES ARE NOT 1:1 SCALE)


TRELLIS (FOR PLANTER BOX)

	DESCRIPTION	QTY	PART IMAGE
a	72" Trellis Screen	1	
b	Bent Frame	1	
c	Frame Verticals	2	
d	Frame Bracket	2	

	DESCRIPTION	QTY	PART IMAGE
e	T25 Torx Wrench	1	
f	T30 Torx Wrench	1	
g	8mm Wrench	1	
h	M5-.8, 12MM Screws	4	
	M6-1, 12MM Screws	4	
	M6X1, 16MM Screws	6	
	M5-.8, 30MM Screws	2	
i	M5-.8 MM Hex Nut	4	

Note: assembling of planter box

For Mainland refer to instructions #1010147

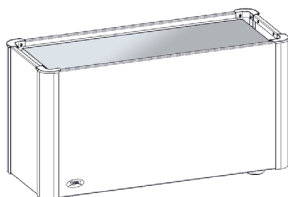

For Highland refer to instructions #1010148




PLANTER BOX TRELLIS SCREEN 72"

TRELLIS (FOR PLANTER BOX)


Step 1.

Install bent frame on both frame verticals.
using provided T30 Torx wrench.

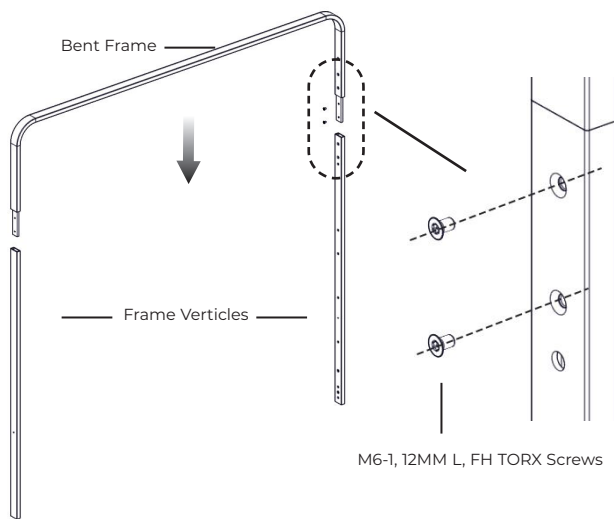


Step 2.

Install trellis screen using provided
T30 Torx wrench.

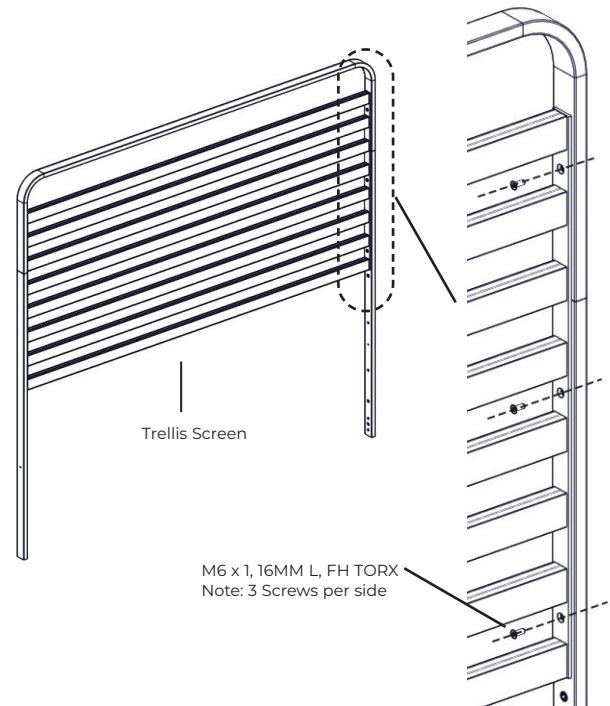


Step 3.

Install frame bracket on both sides
using provided T25 Torx wrench & 8mm wrench.

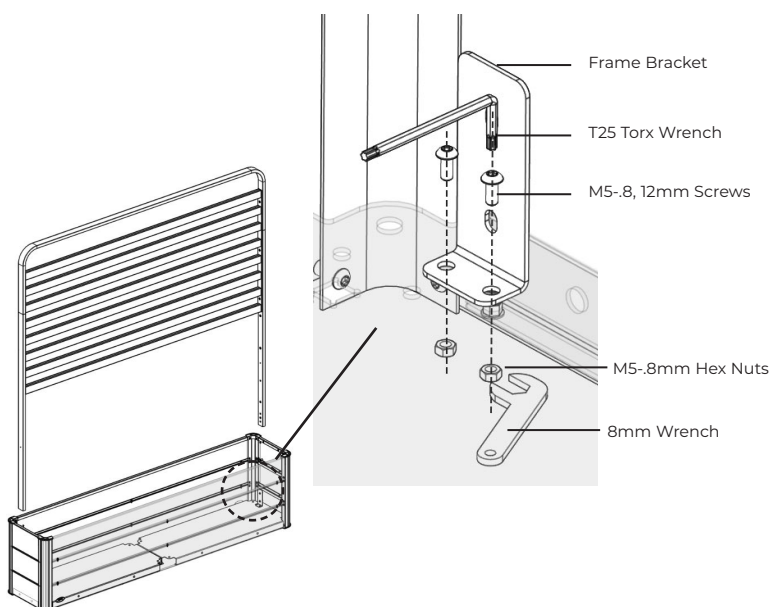

Step 4.


Install trellis screen arm on both sides.


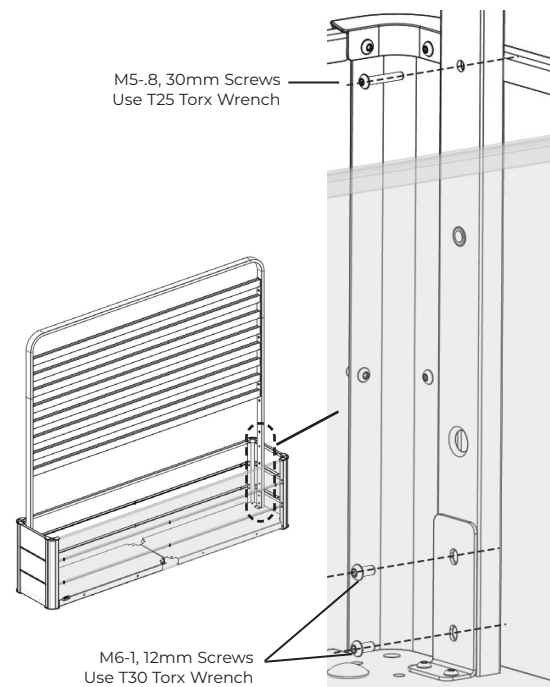


FREESTANDING TRELLIS SCREEN 72"


HARDWARE AND PARTS INCLUDED (IMAGES ARE NOT 1:1 SCALE)

STAND ALONE


	DESCRIPTION	QTY	PART IMAGE
i	72" Trellis Top	1	
j	72" Trellis Bottom	1	
k	Bent Frame	1	
l	Frame Vertical	2	

	DESCRIPTION	QTY	PART IMAGE
m	Base	2	
n	7/32 Hex Key	1	
o	T30 Torx Wrench	1	
p	M6-1, 12MM Screws	4	
	M6x1, 16MM Screws	12	
	3/8-16 .5 L Screws	4	

Step 1.
Install bent frame on both frame verticals
using provided T30 Torx wrench.

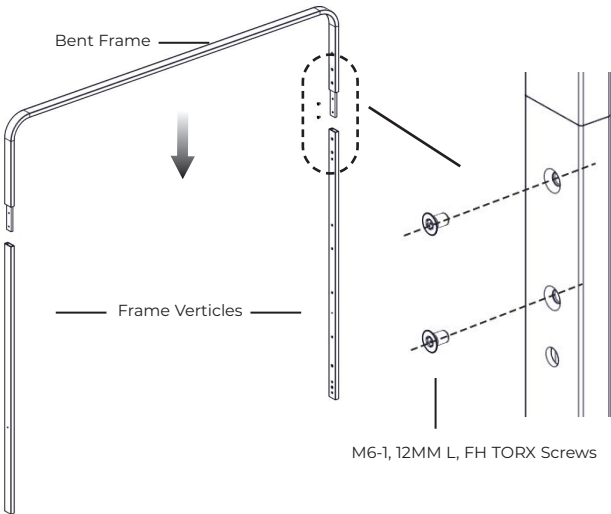


Step 2.
Install top trellis using provided
T30 Torx wrench.

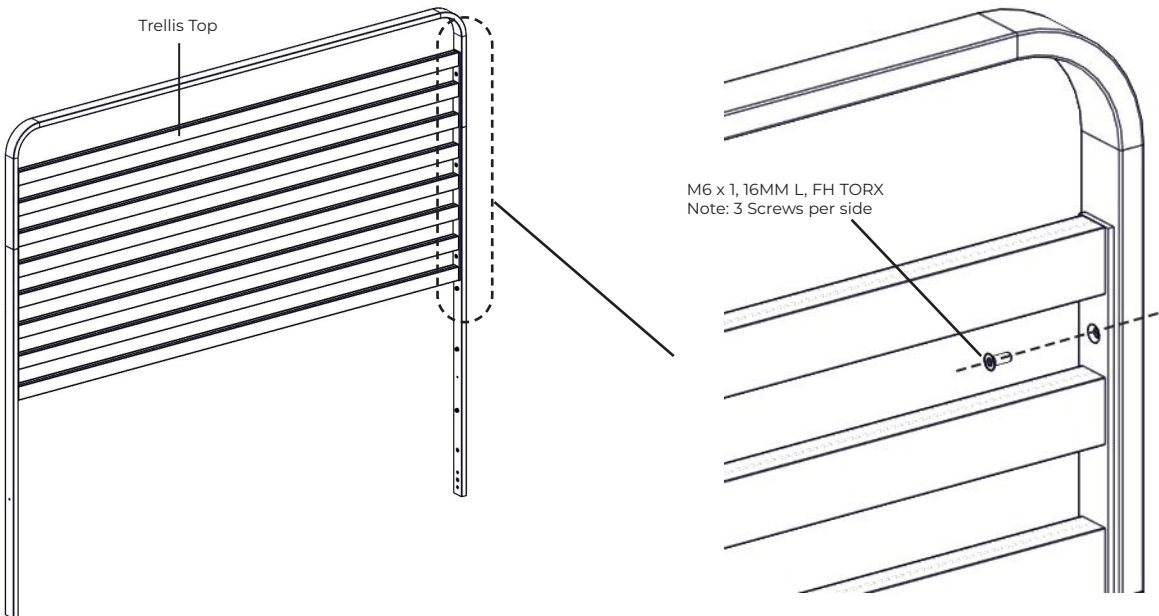

FREESTANDING TRELLIS SCREEN 72"

Step 3.

Install bottom trellis using provided T30 Torx wrench.

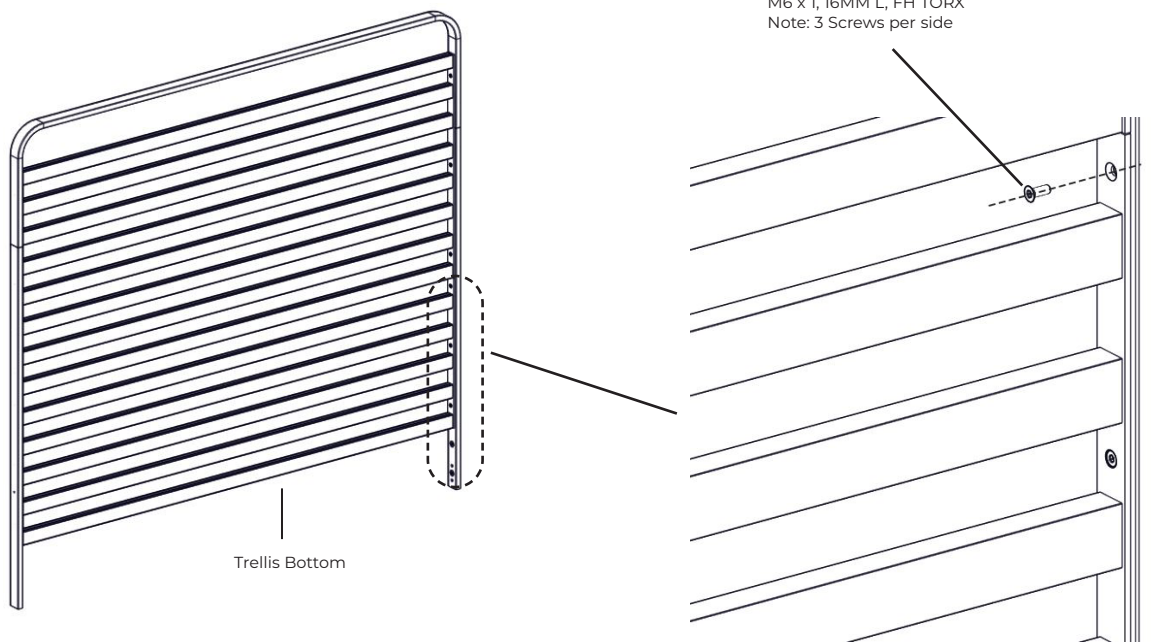

Step 4.

Install trellis screen on both bases using provided 7/32 hex key.

